


nr. 19-L2
= Verker: nuygung
= --: Utgatt

Orlando

Deliste
Ersatzteilliste Nr. **1200**
Parts List no.

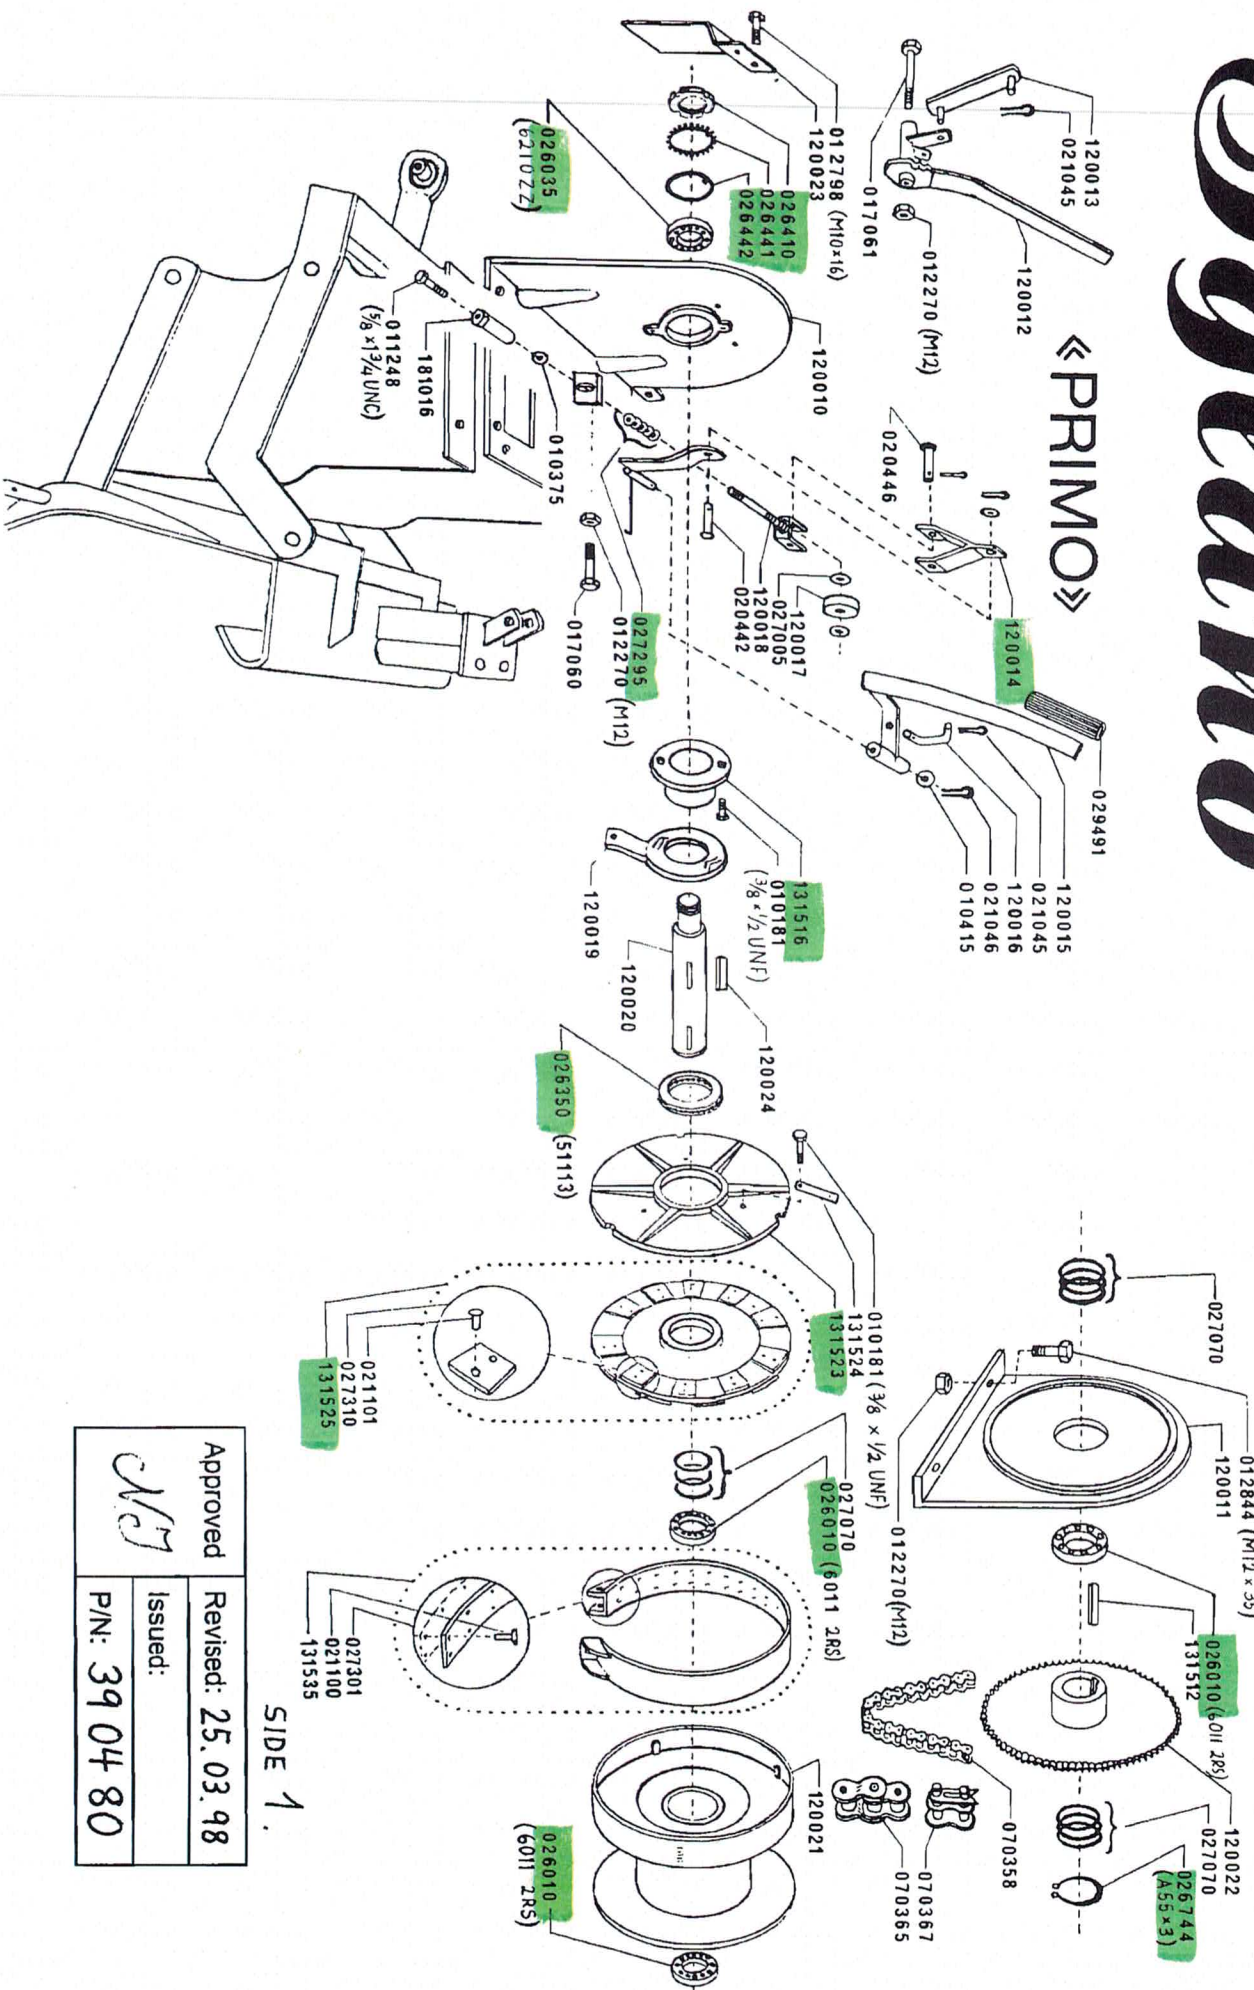

SIDE 1.

Approved	Revised: 25. 03. 98
Issued:	
P/N: 39 04 80	

Deleliste
Ersatzteilliste
Parts List

nr.
Nr.
no.

1200-1

This exploded view diagram illustrates the rear section of a mechanical assembly. Key components and their part numbers include:


- Housing and Cover Parts:** 026035 (62102Z), 026410, 026441, 026442, 120010, 120012, 120013, 021045, 029491, 120044, 120043, 010410 (3/4 UNF), 012270 (M12), 120043, 021046, 010415, 012843 (M12 x 30), 020446, 120014, 120017, 027005, 120018, 020442, 120016, 021045, 120042, 010182, 121029, 131524, 131523.
- Gears and Shafts:** 012270 (M12), 010375, 017060, 017061, 012270 (M12), 010181 (3/8 - 1/2 UNF), 120019, 120020, 120024, 026350, 027070, 026010 (6011 2RS), 027301, 021100, 131535, 026010- (6011 2RS).
- Other Components:** 011247 (5/8 x 1 1/2 UNC), 181016, 012270 (M12), 120026, 012270 (M12), 120030, 120029, 012231 (M10), 070356, 070367, 070365.

The diagram shows the spatial arrangement of these parts, indicating how they fit together to form the rear section of the machine.

Agland

nr.
Ersatzteilliste Nr.
Parts List no. **728-1**

Spezialutstyr for REINHARDT MASKIN «RM-BOSSE»

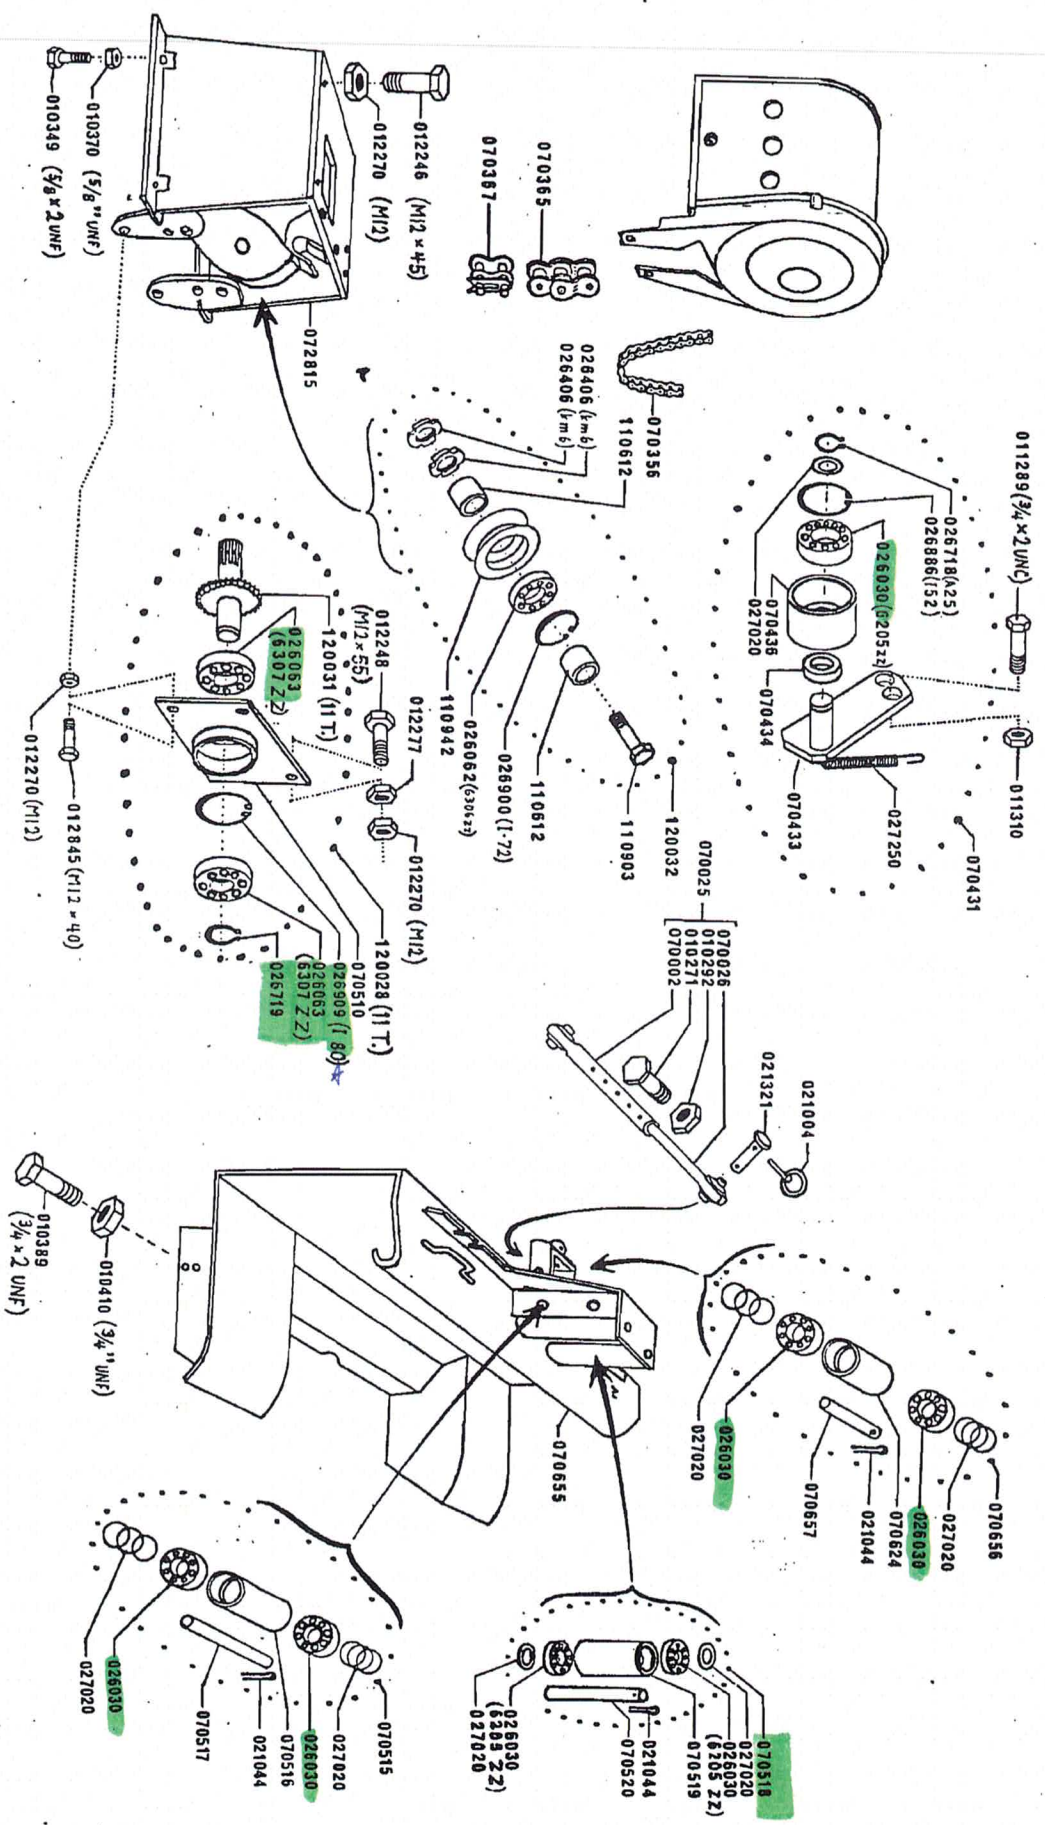


oglund

Deleliste
Ersatzteilliste
Parts List
nr. 728-2

Specialutstyr for

REINHARDT

KRABAT 232

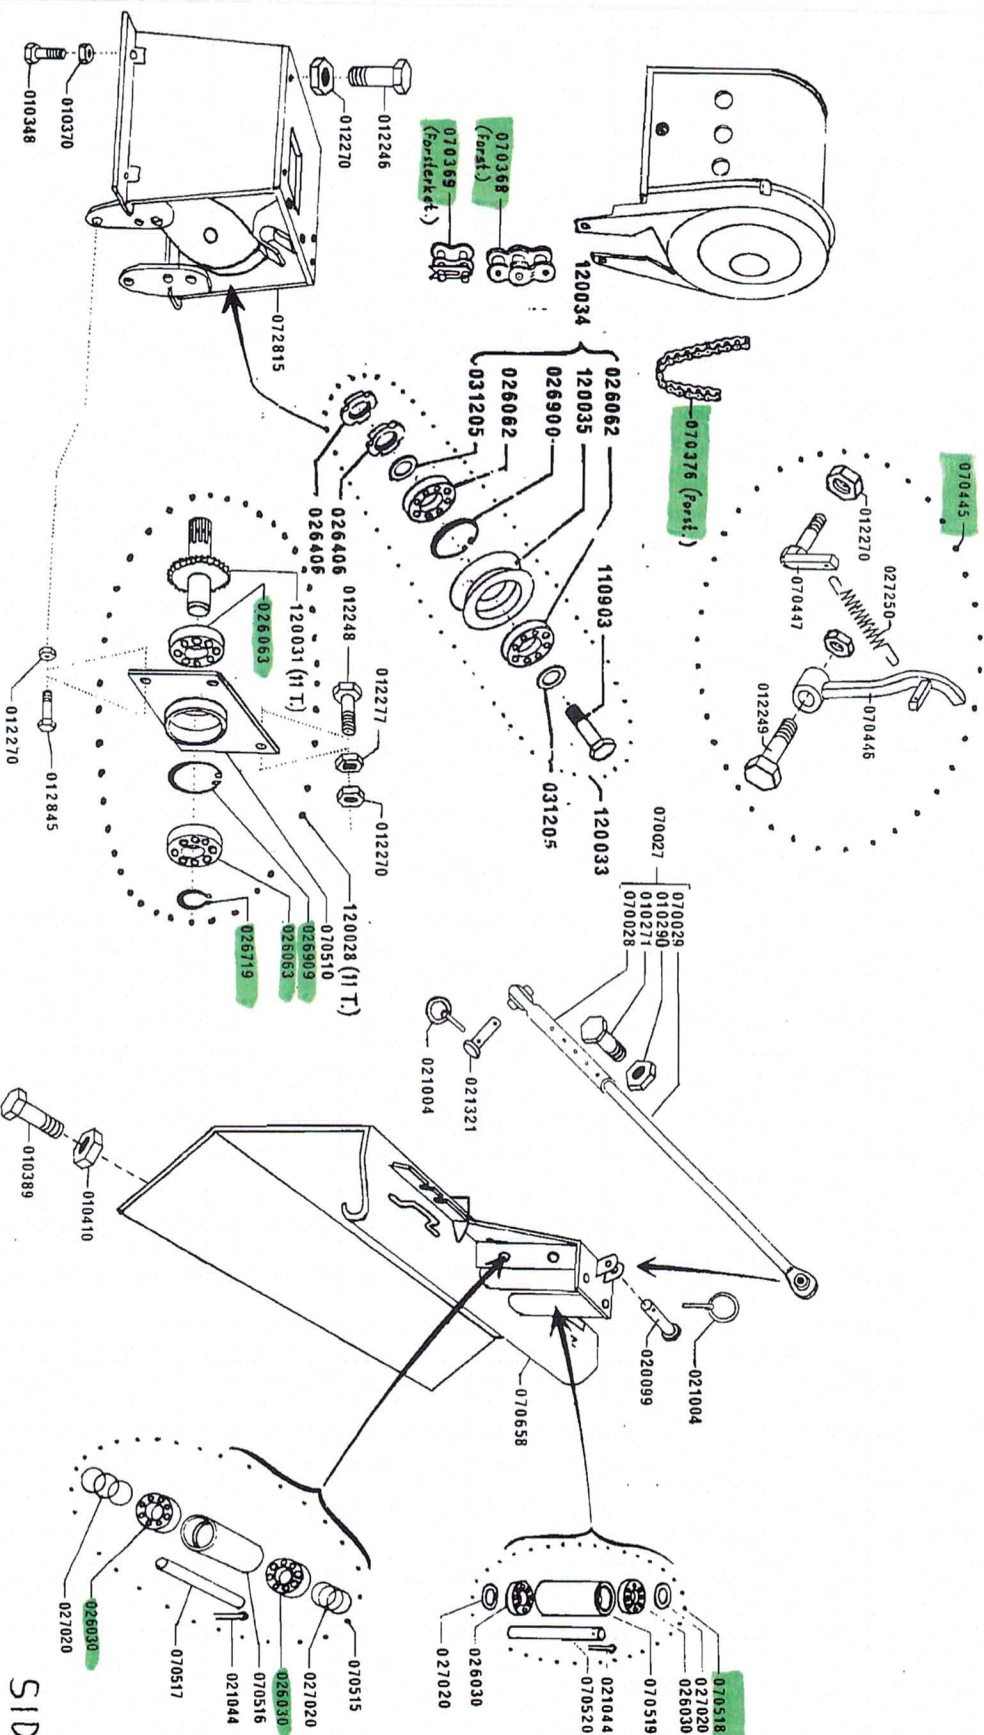

SIDE 5

Siste korr. 7-1-80.
26-4-83


Ogland

PRIMO

fro o. m. nr 212.

Deleliste
Ersatzteilliste Nr.
Parts List no.

1200-2

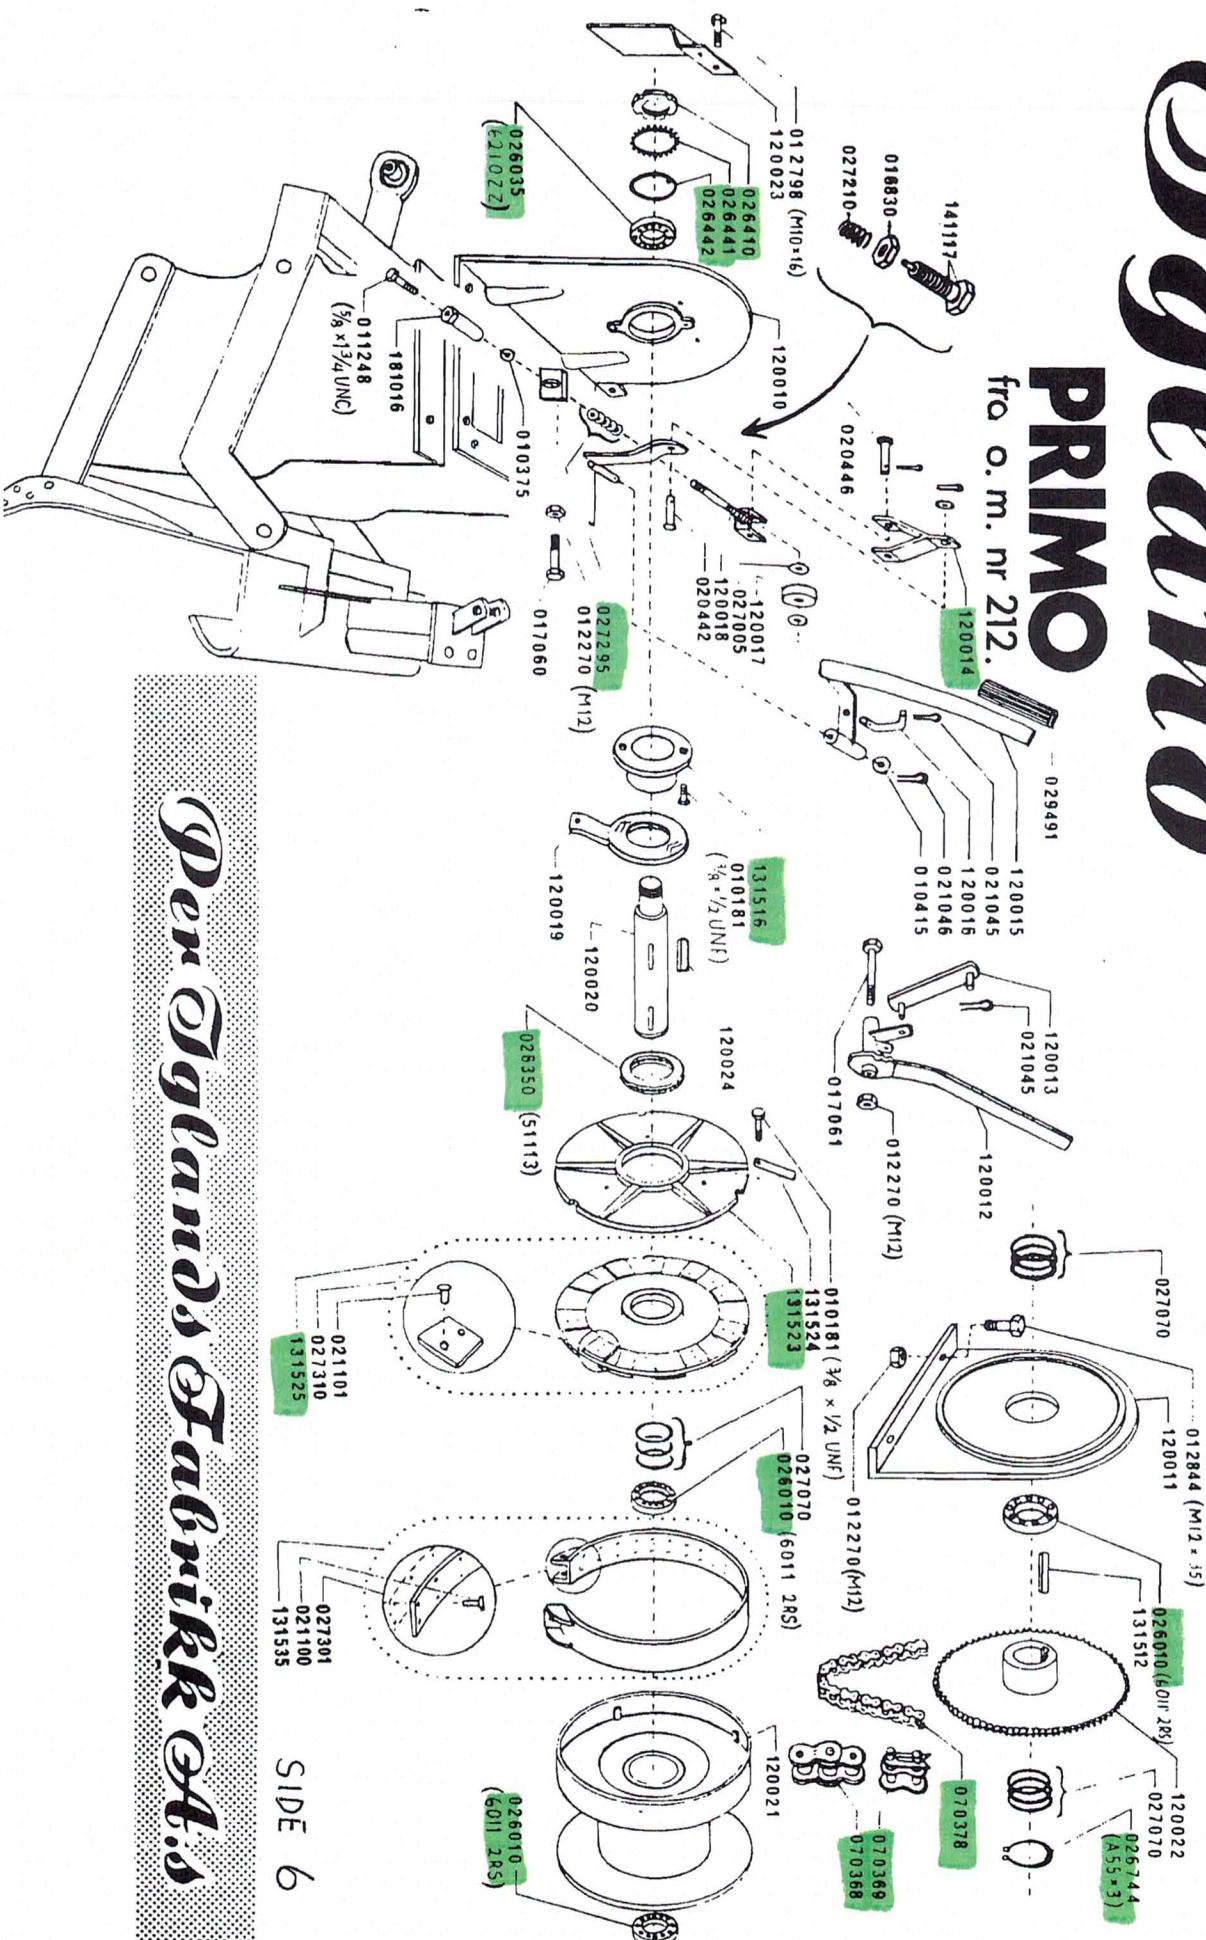

Oglands Fabrik A.S.


SIDE 6

Ogland

PRIMO

fra o. m. nr 212.

Deleliste
Ersatzteilliste
Parts List
nr. 1200-3
Nr. 1200-3
no. 1200-3

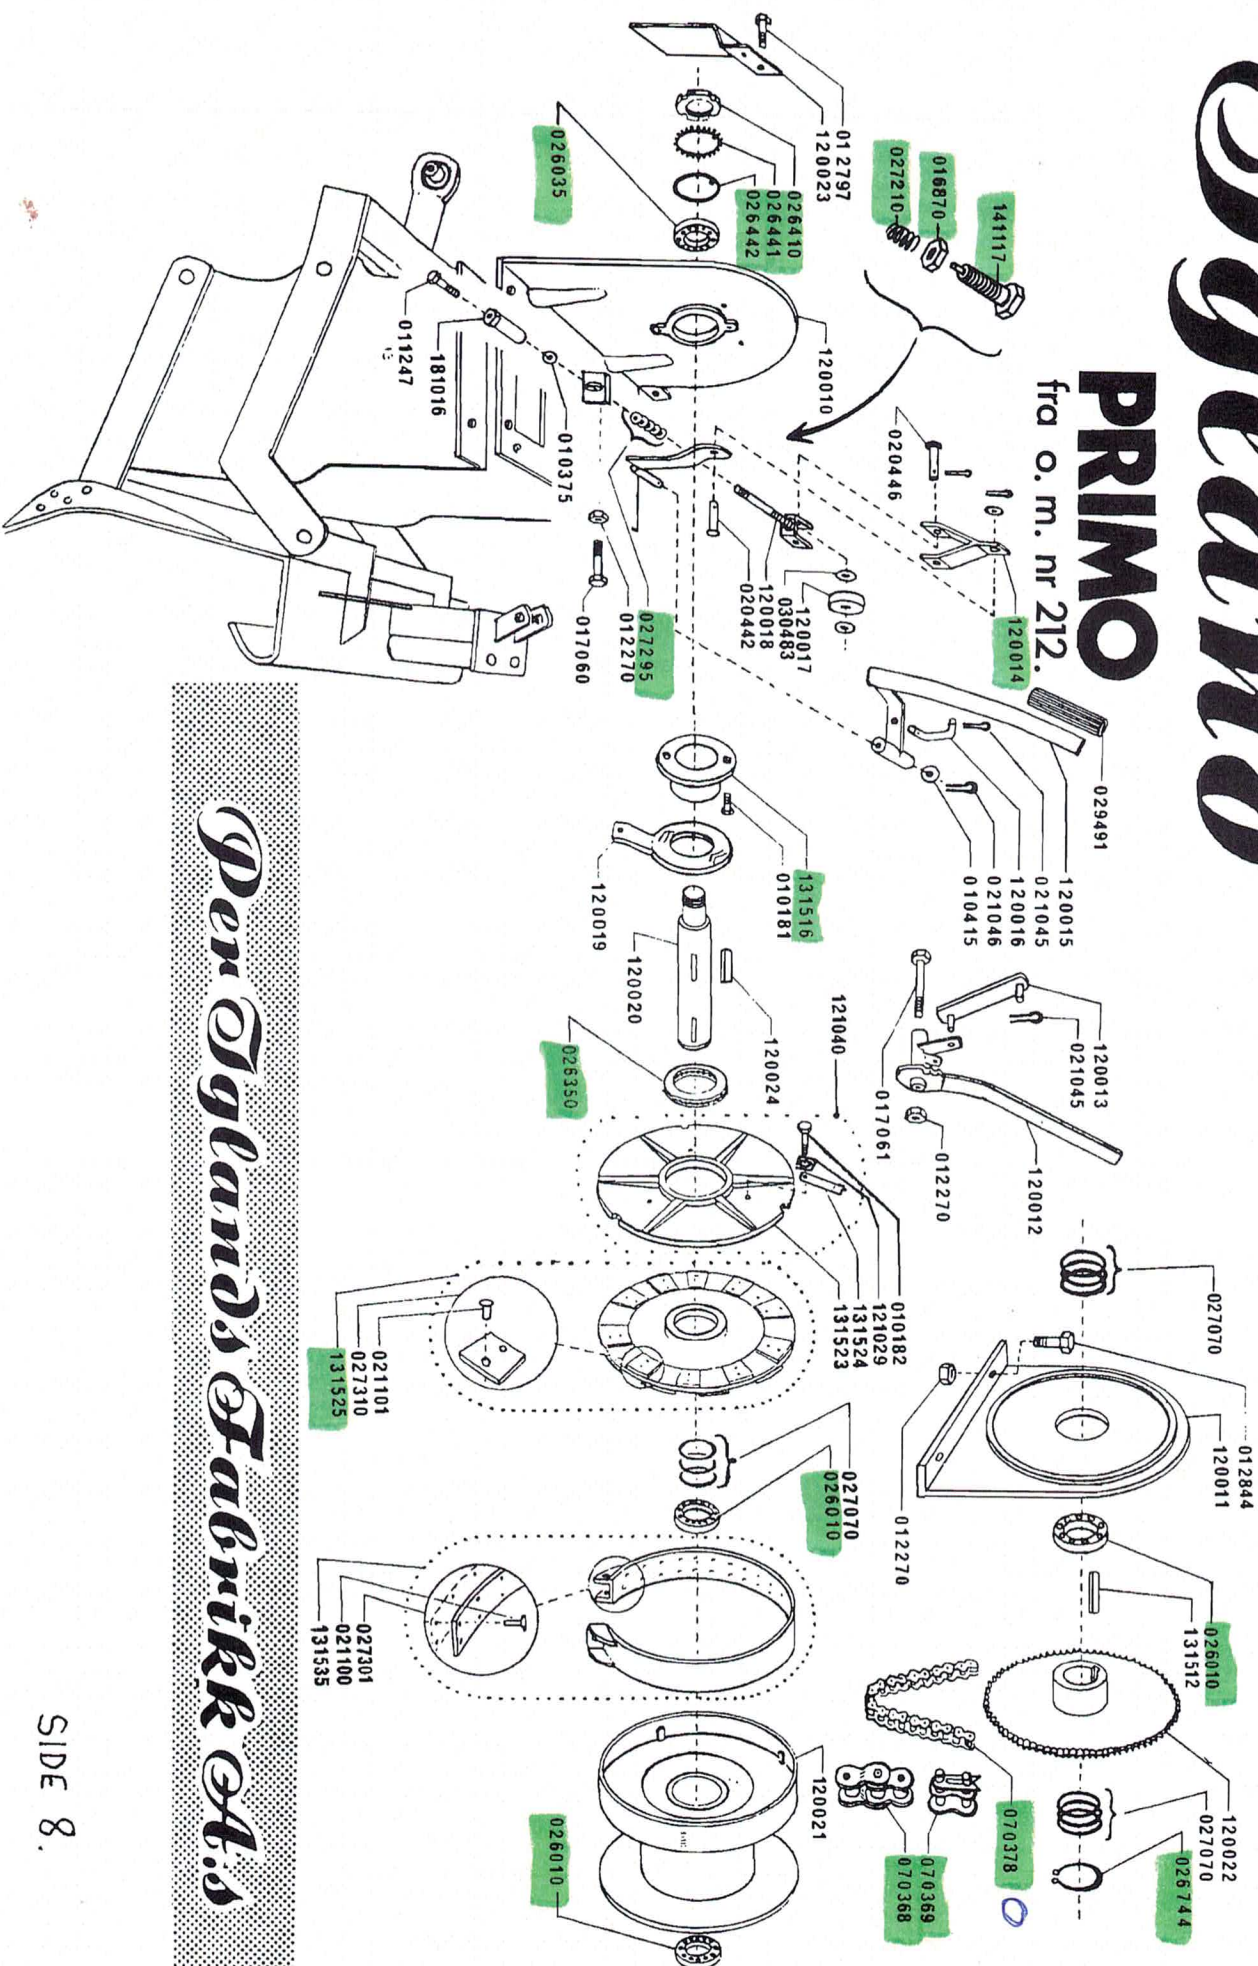

Oglands Fabrik A.S.

