
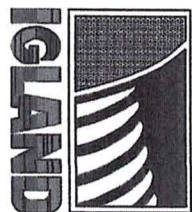


Pr 24.10.22 = Deter, tilgjengelig
1982 - 1999 = Utgått

IGLAND Grosso 8001, Parts Catalogue

Serial No.: 0001 →

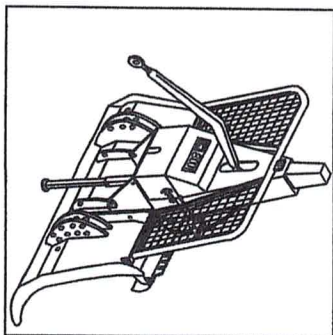

GENERAL INFO

This Parts Catalogue supersedes Parts Lists Nos. 1800-0, 1800-1, 1801-0, 1801-1, 932-0, 932-1 and 1806-1.


This Parts Catalogue consists of 28 numbered pages.

This Catalogue: P/N 390181

N/A: Not available.

© IGLAND AS

- Gjeldelse av tekst og tegnninger tillates forbeholdt.
- Reproduction of text or illustrations without permission is prohibited.
- Eine Wiedergabe von Texten und Zeichnungen ohne unsere Genehmigung ist nicht gestattet.
- Interdiction de toute reproduction de textes ou d'illustrations sans autorisation préalable.

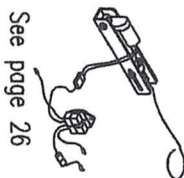

See page 26

See page 8

See page 2


See page 3

See page 7

See page 10
(Input and Output)




Infrared Remote Control
See page 23



Radio Remote Control
See page 24/25




See page 11

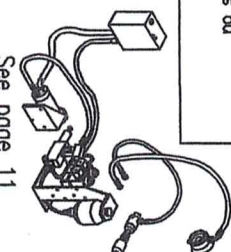

See page 11




See page 8

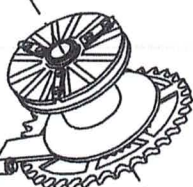


See page 4




See page 2

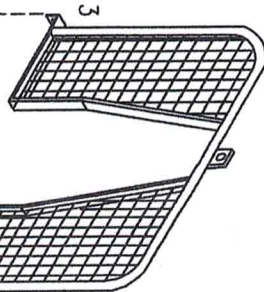


See page 3

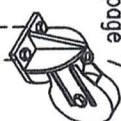


See page 7

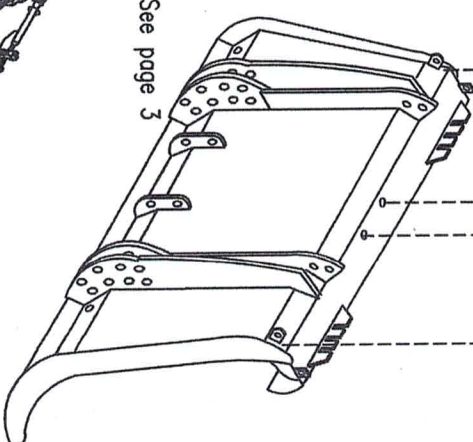


See page 3

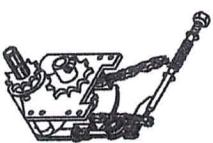


See page 10
(Input and Output)

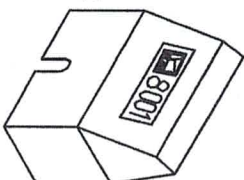

See page 2

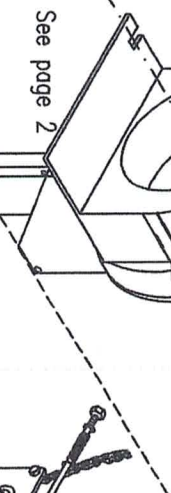


See page 2

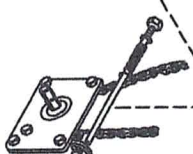


See page 9

(Standard Ratio 1:1.10)

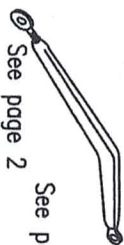


See page 2


See page 2

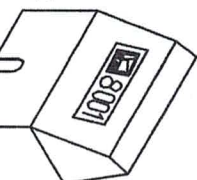

See page 2

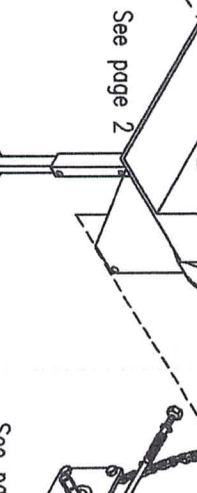


See page 2

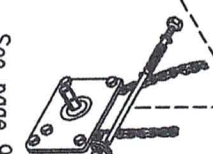

See page 9

(Standard Ratio 1:1.10)

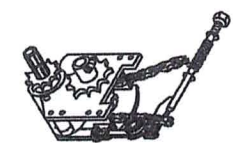

See page 10
(Input and Output)


Approved:

Revised: TK 30.10.01


Issued: AIS/dt 07.03.94

IGLAND Grosso 8001


BODY

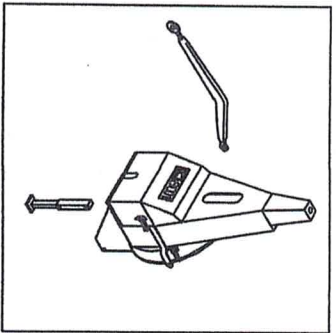


180061-
Early version
Not available
If exhausted
use P/N 180201

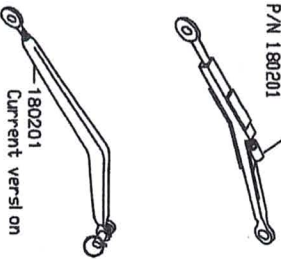


180201
Current version

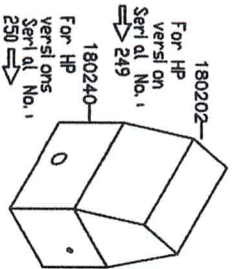

For HP
version
Serial No. 1
⇒ 249
180240-
For HP
versions
Serial No. 1
⇒ 250

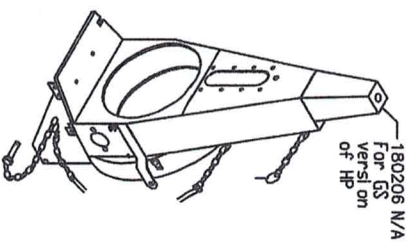


180206 N/A
For GS
version
of HP

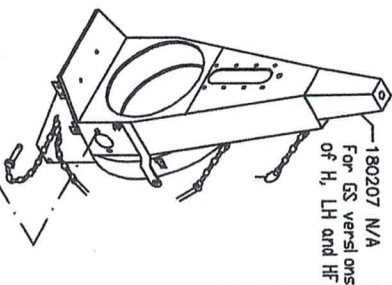


180207 N/A
For GS versions
of H, LH and HF




180214
For GS
versions
⇒ 012758
⇒ 012195

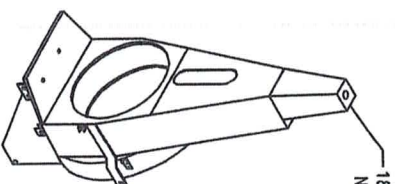


180010 N/A
NOTE: Part No. 180010

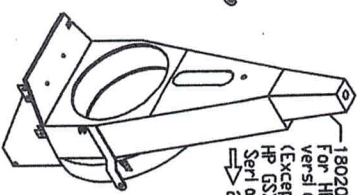

180200 N/A
For HP
version
(Except
HP GS)
Serial No. 1
⇒ 249

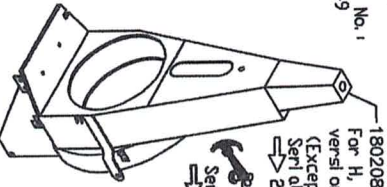

180208 N/A
For H, LH, HF
versions
(Except GS)
Serial No. 1
⇒ 249
156129
Serial No. 1
⇒ 249

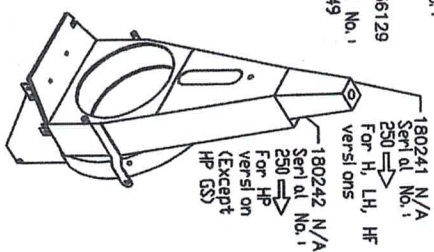

180241 N/A
Serial No. 1
⇒ 250
180242 N/A
For H, LH, HF
versions
Serial No. 1
⇒ 250
For HP
version
(Except
HP GS)




180216
For GS
versions



180020
Serial No. 1
⇒ 249




180021
Serial No. 1
⇒ 250



012234
Serial No. 1
⇒ 250



390925
Serial No. 1
⇒ 250

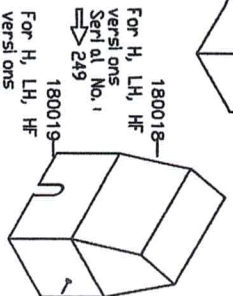


180018-
For H, LH, HF
versions
Serial No. 1
⇒ 249
180019-
For H, LH, HF
versions
Serial No. 1
⇒ 250




180027
For LH
version
only




012253
For H,
HP and HF
versions

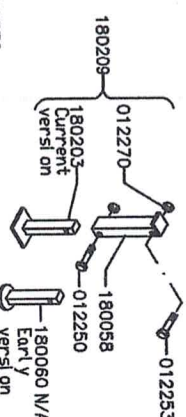

180203
Current
version
180058
Serial No. 1
⇒ 250
180060 N/A
Early
version
When
exhausted
use
P/N 180203

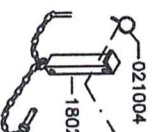







021004
Serial No. 1
⇒ 250

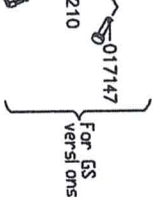


017147
For GS
versions

IGLAND Grosso 8001

LOGGING PLATE PROTECTION SCREEN

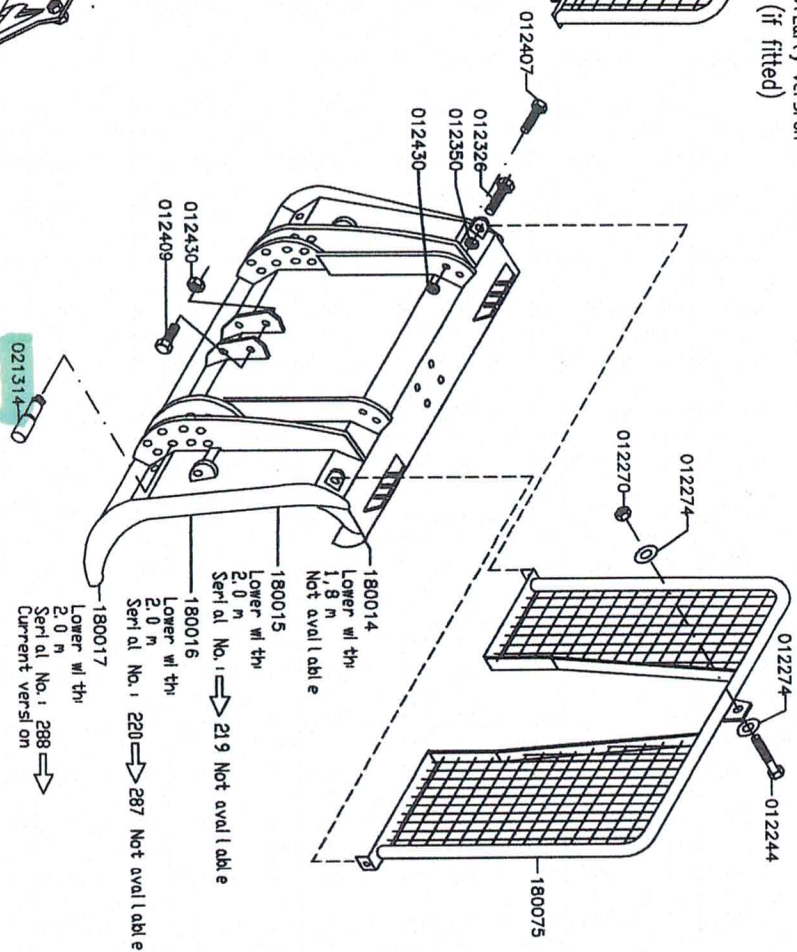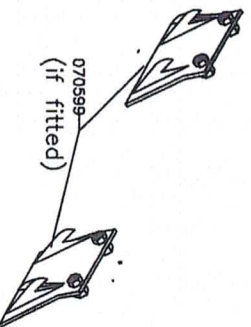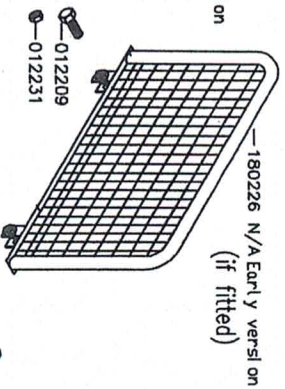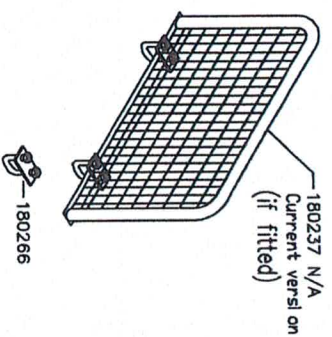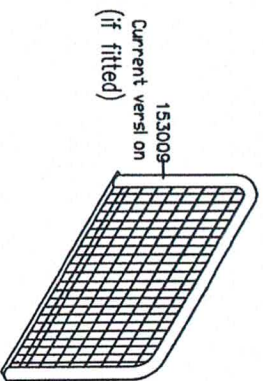
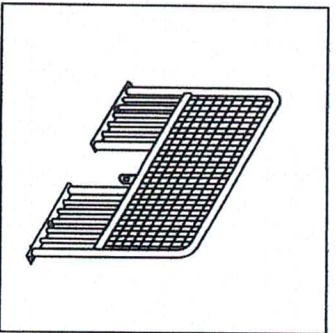


This diagram shows an exploded view of a mechanical assembly. It includes a large gear with many teeth at the bottom, a central hub with a circular face and radial spokes in the middle, and a bracket-like component at the top with a circular opening and a small protrusion. Dashed lines indicate the alignment and assembly path of the parts.

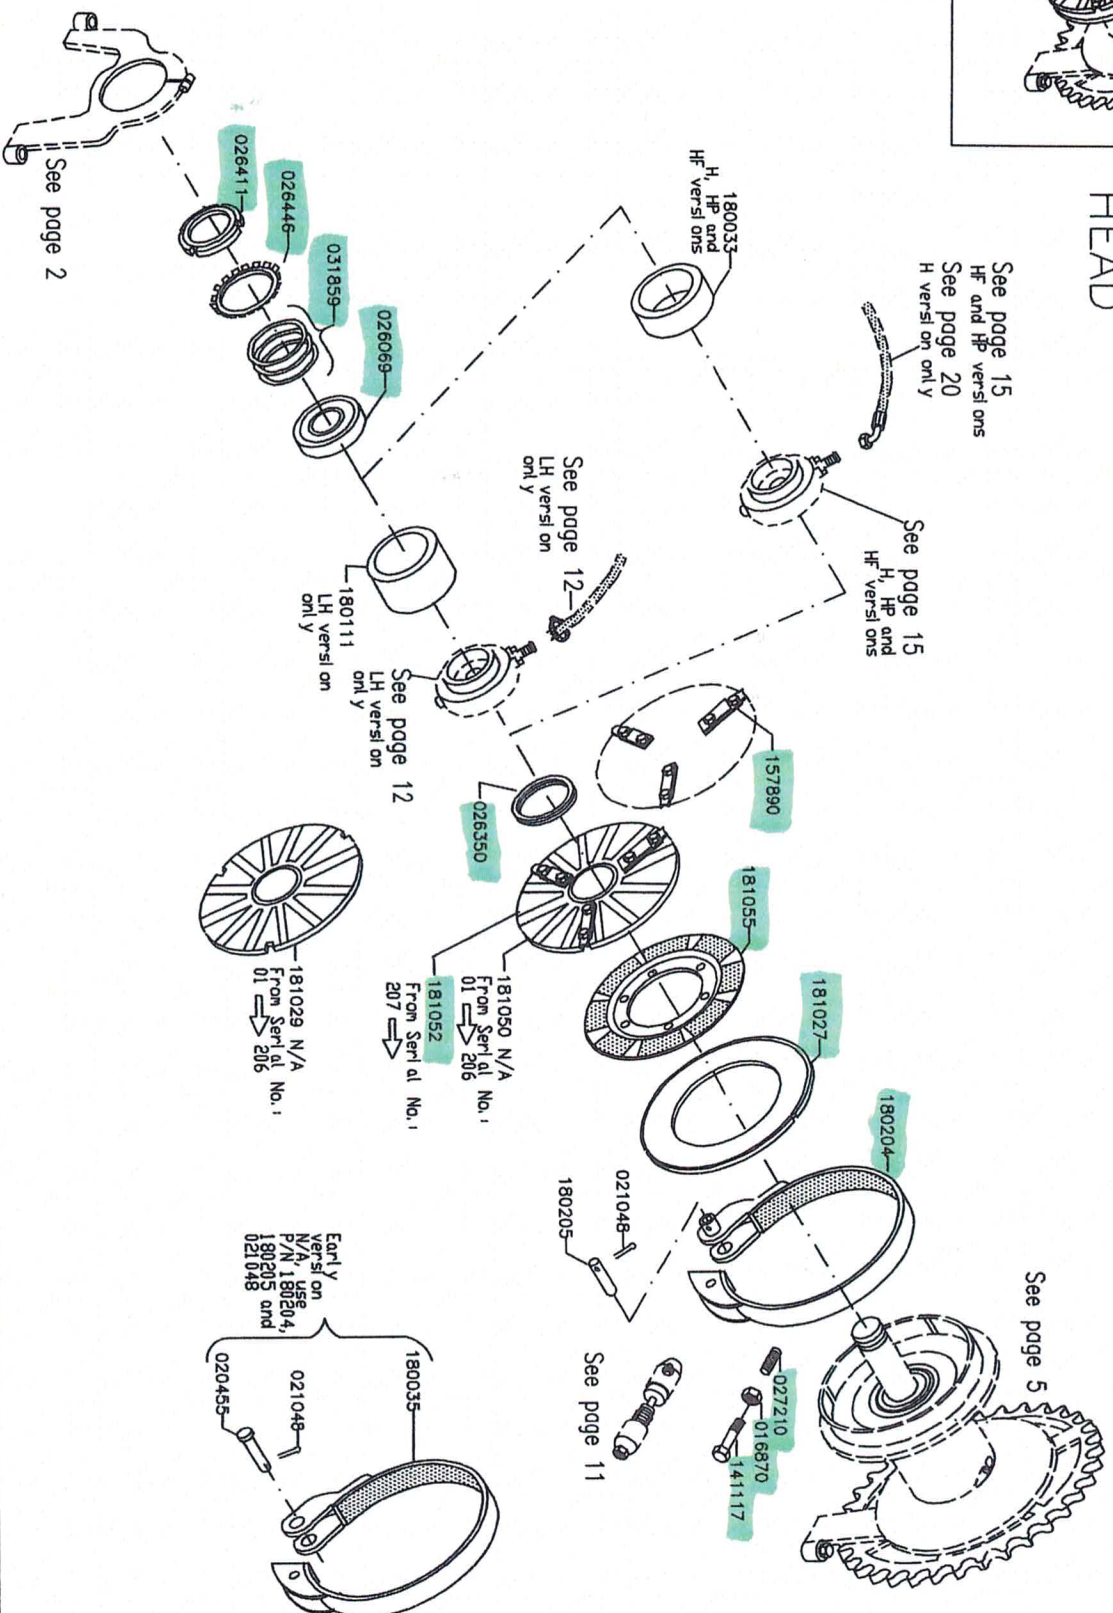



IGLAND Grosso 8001

HEAD

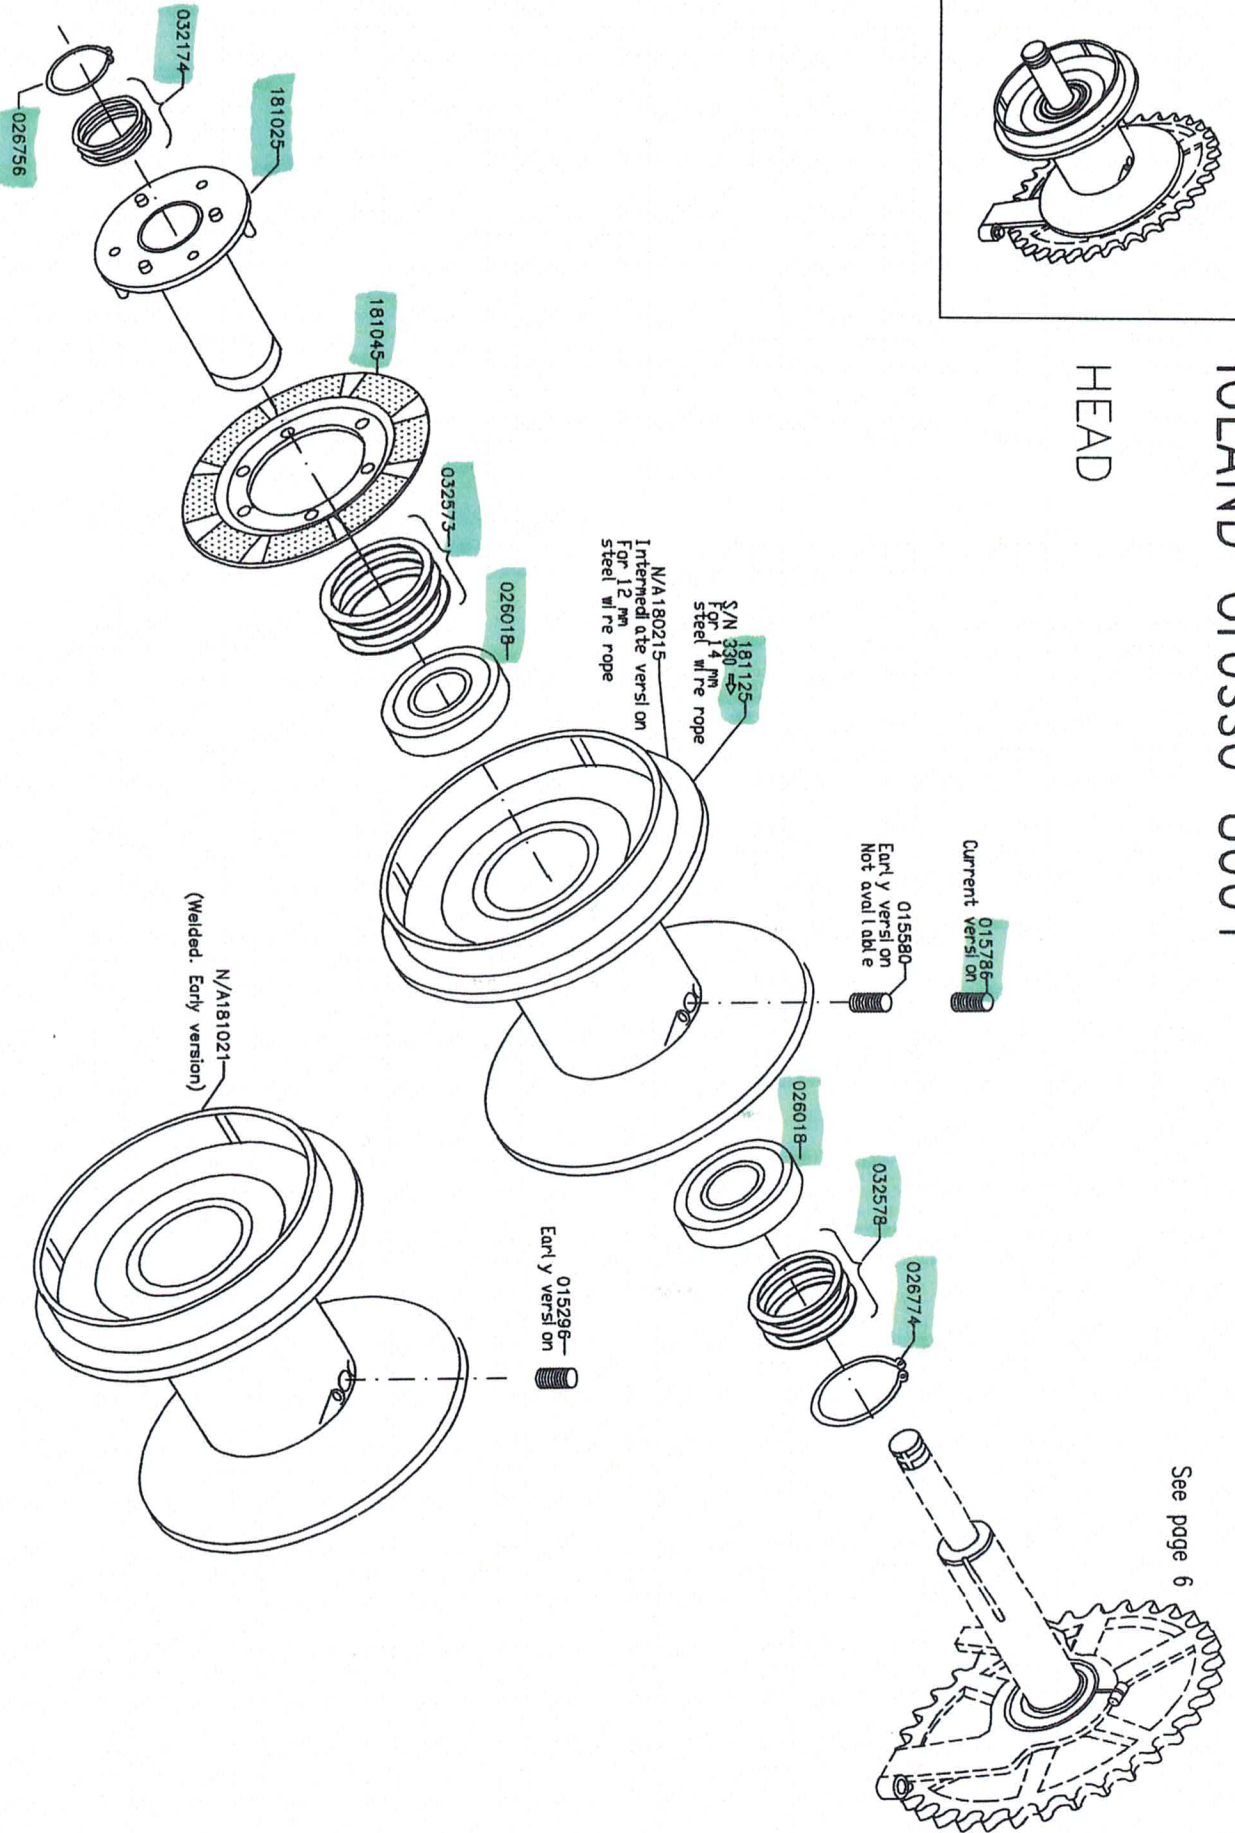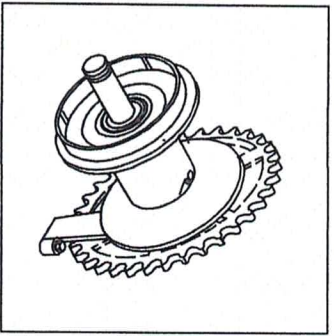



IGLAND Grosso 8001

HEAD

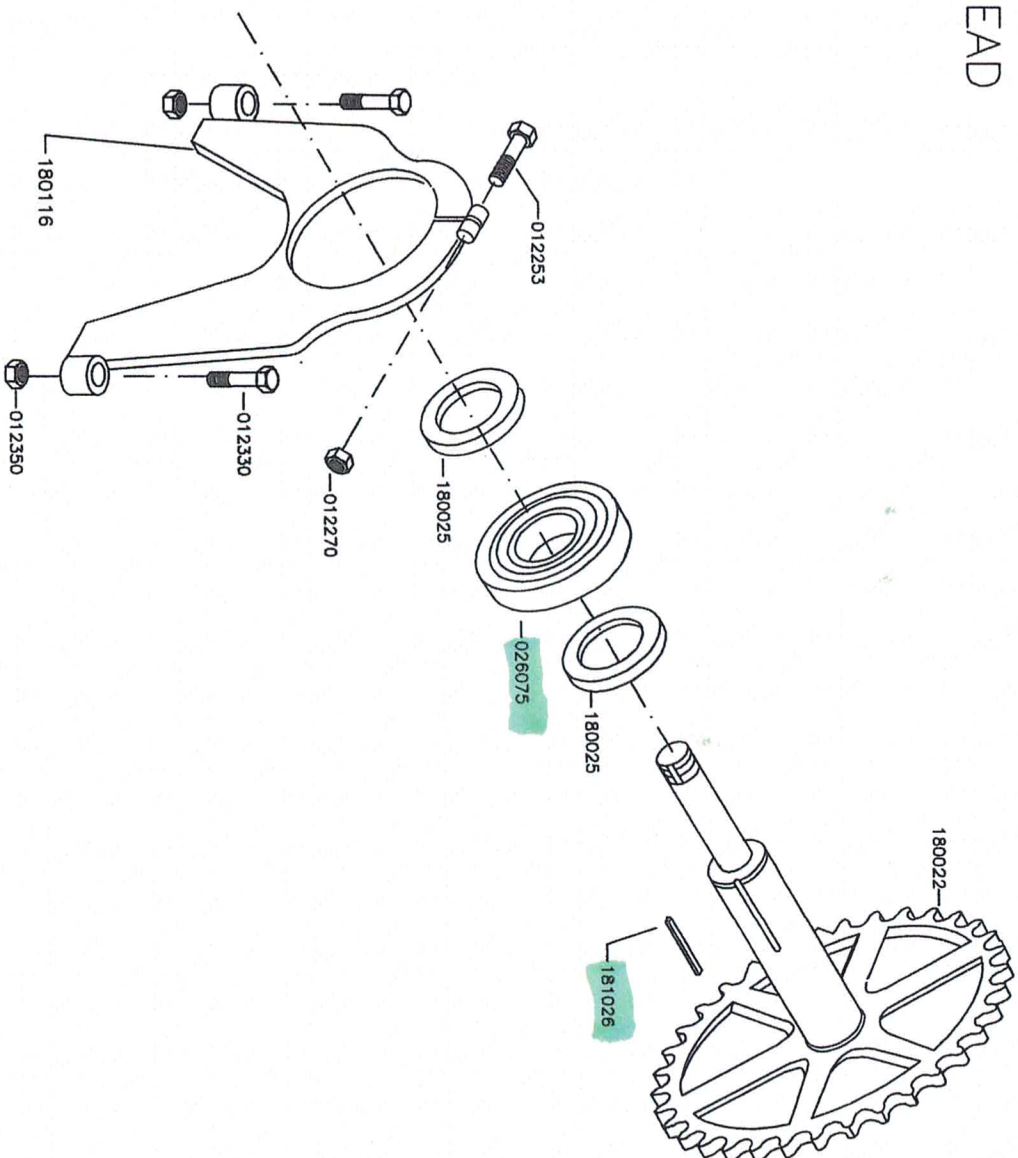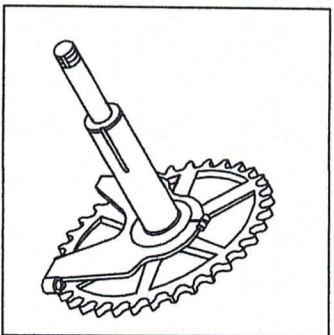

IGLAND Grosso 8001







LOWER BLOCK, STANDARD VERSION: 180270

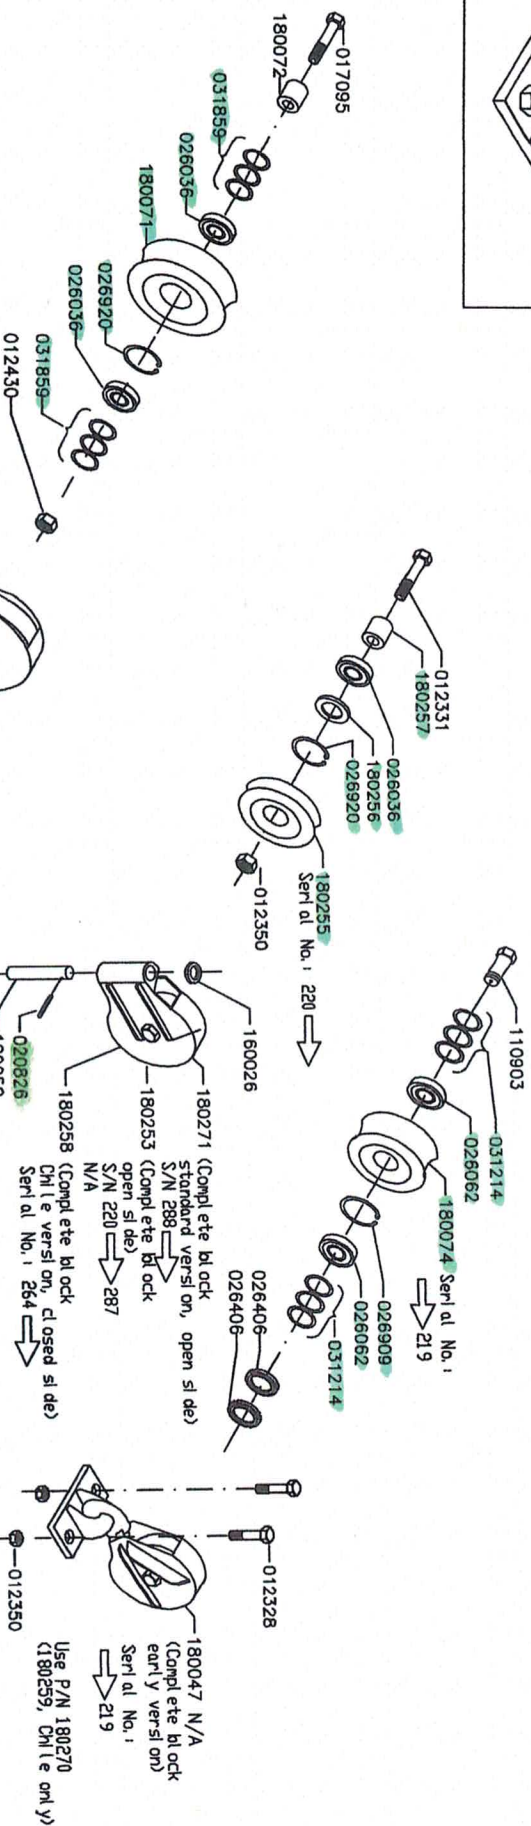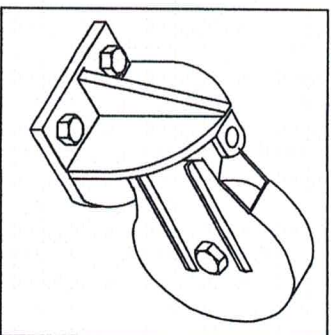


For Grosso-models older than S/N 220, two holes must be drilled

IGLAND Grosso 8001


TOP BLOCK: 180051

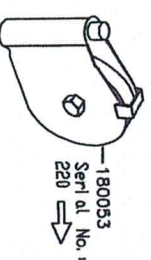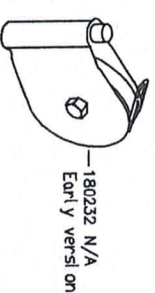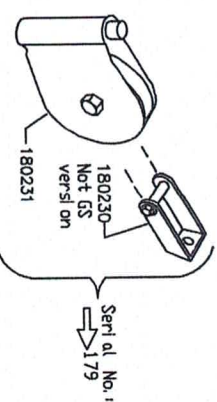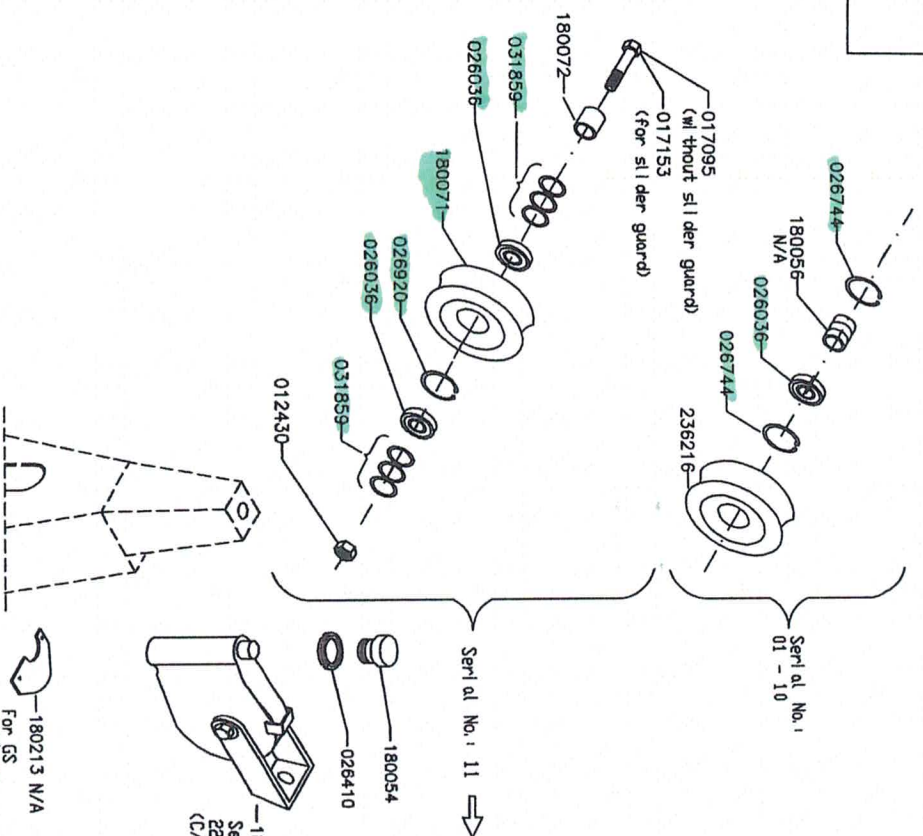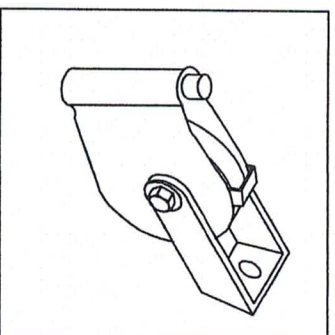

Standard 1 : 10

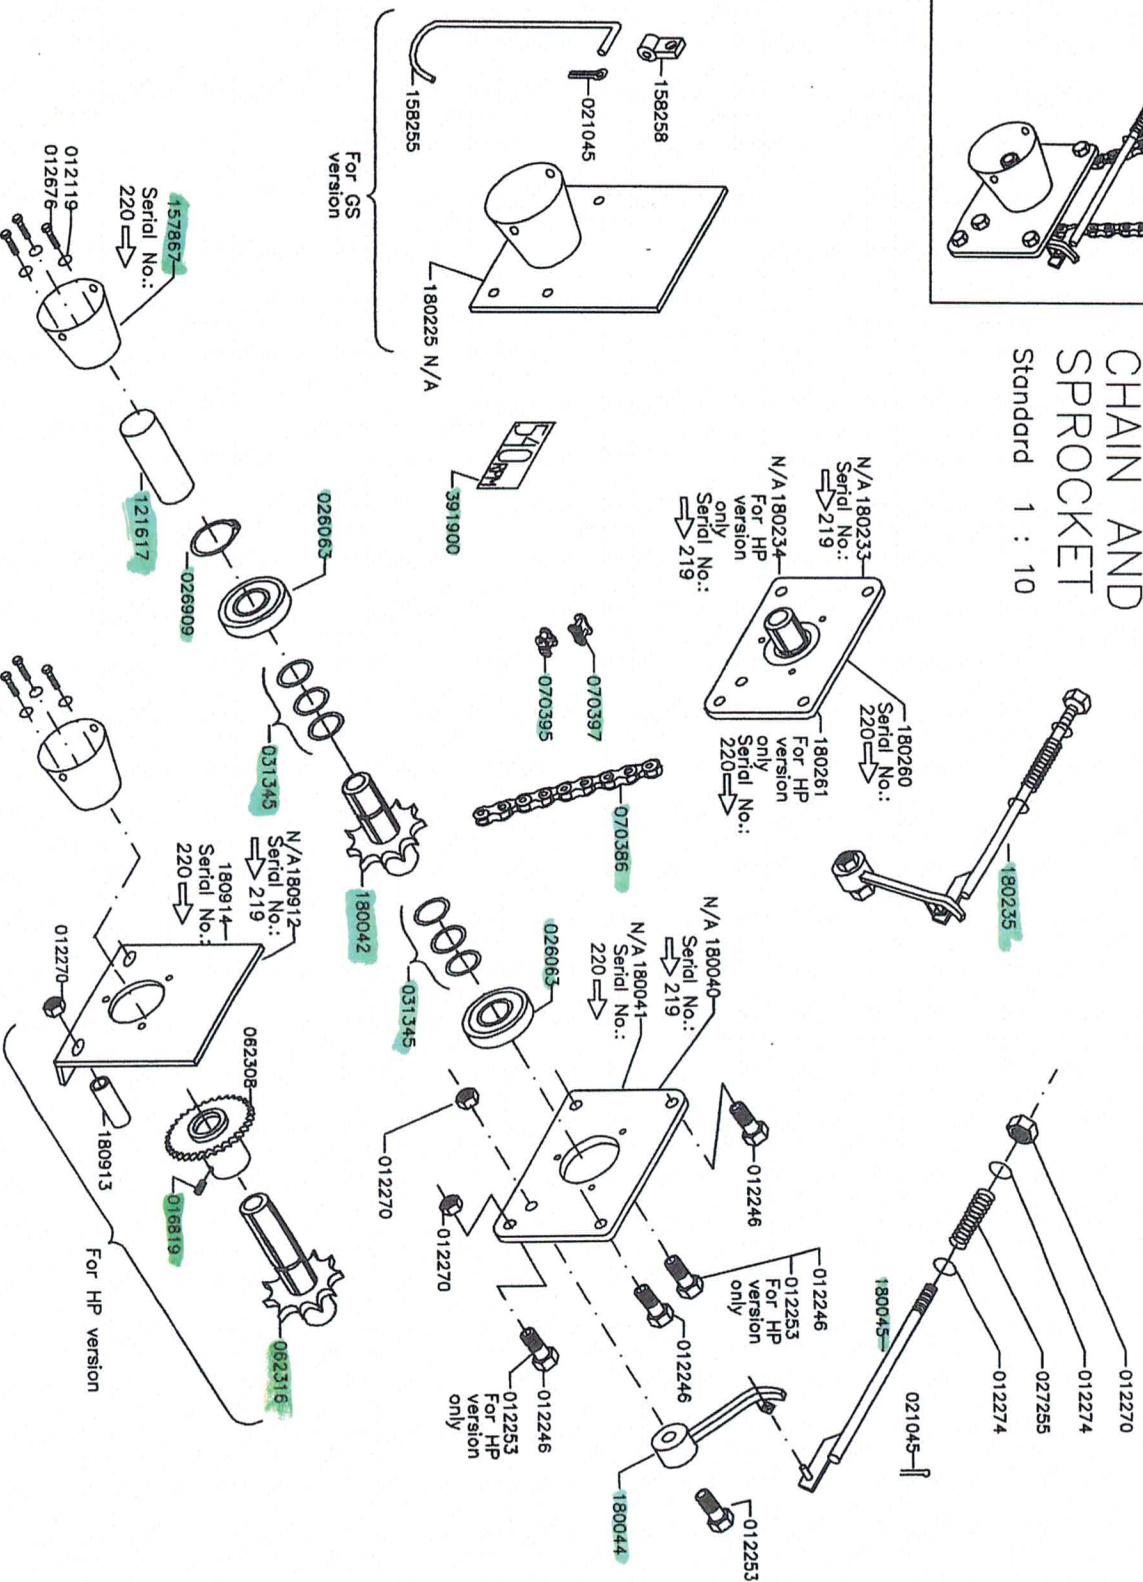


Low gear, 1 : 17,5

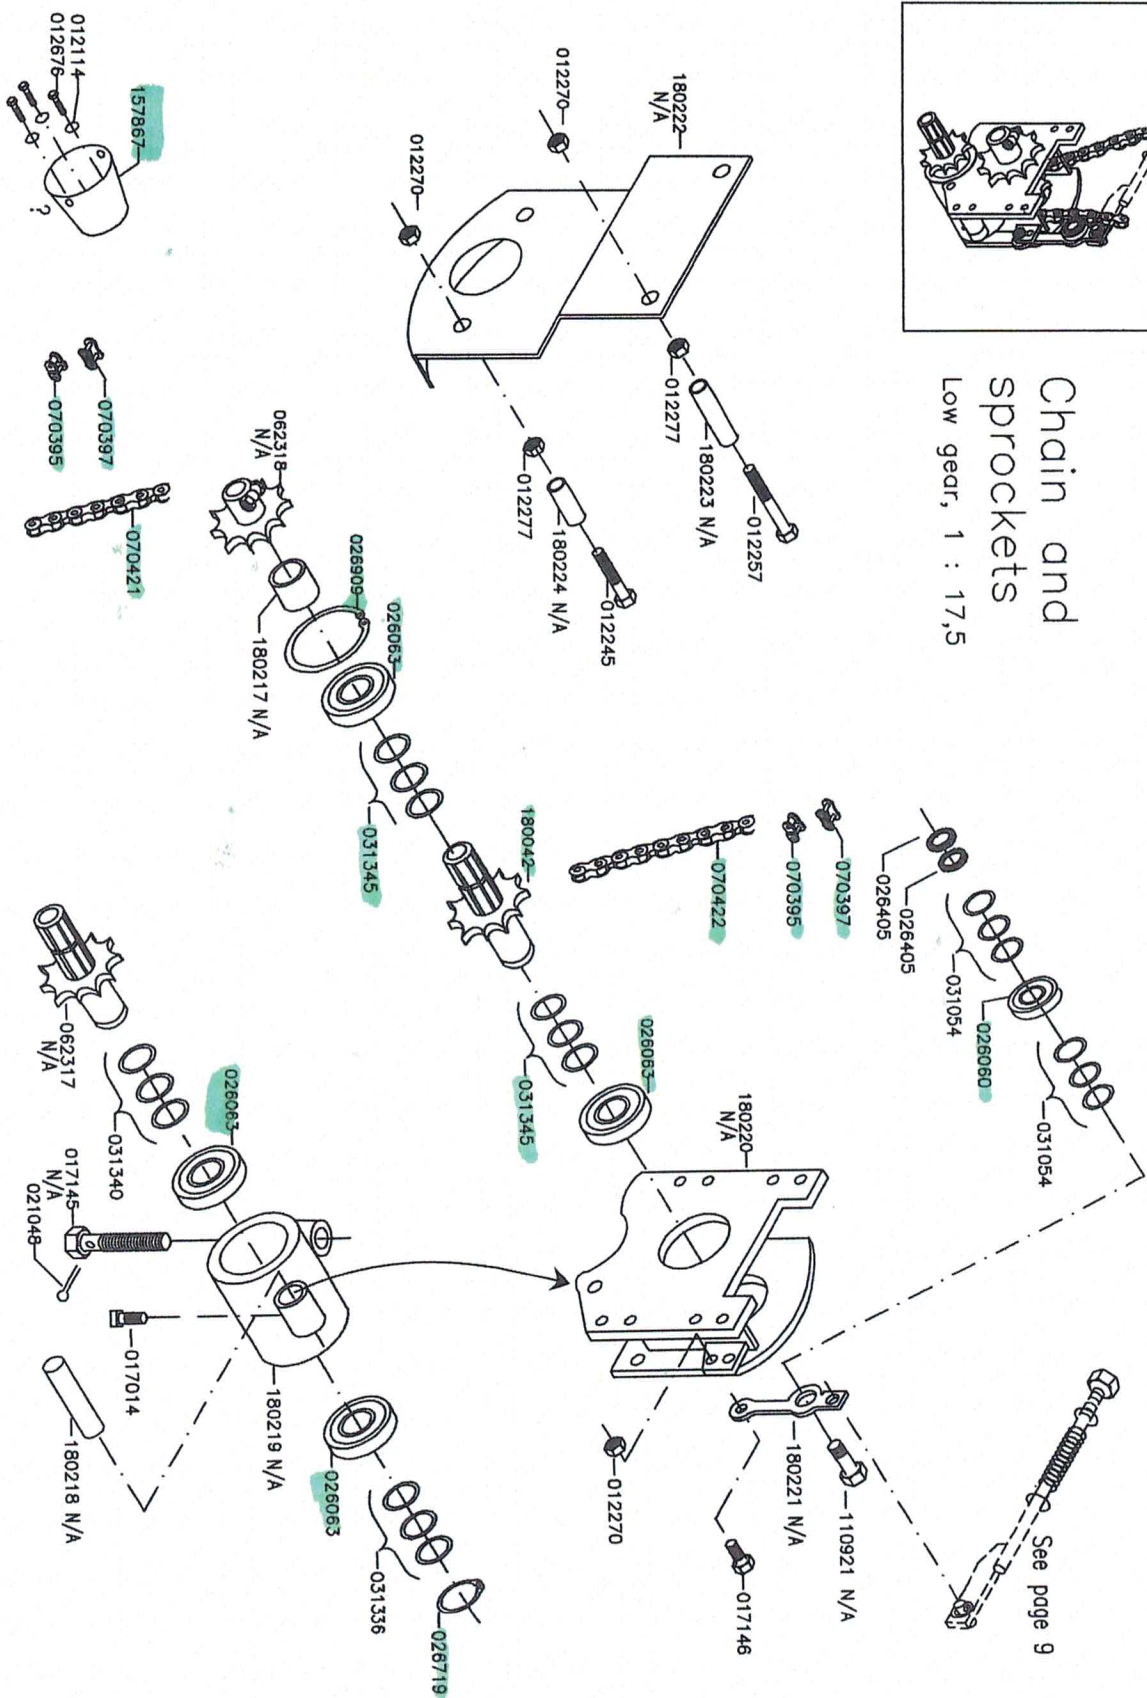


IGLAND Grosso 8001 CONTROL

Current versions:

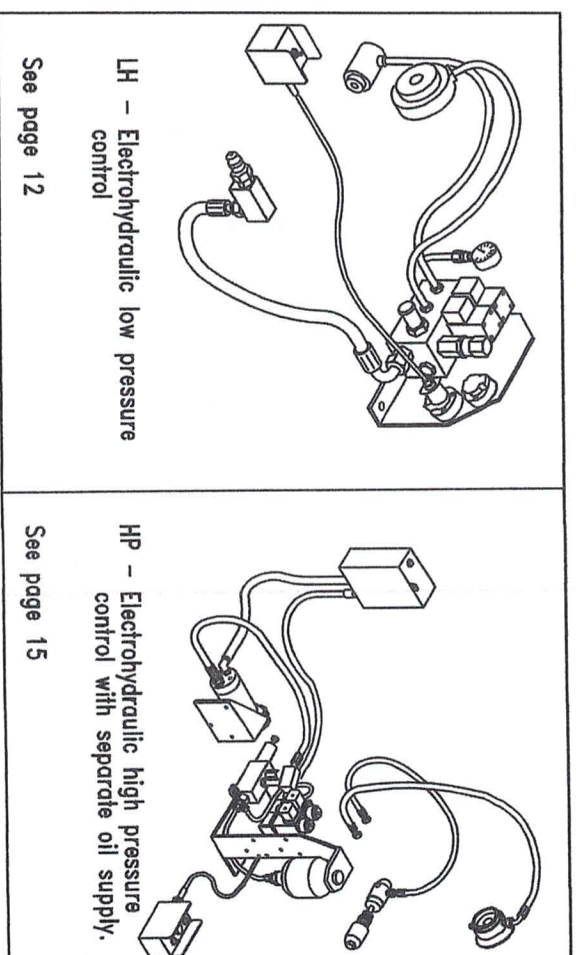


Early models:

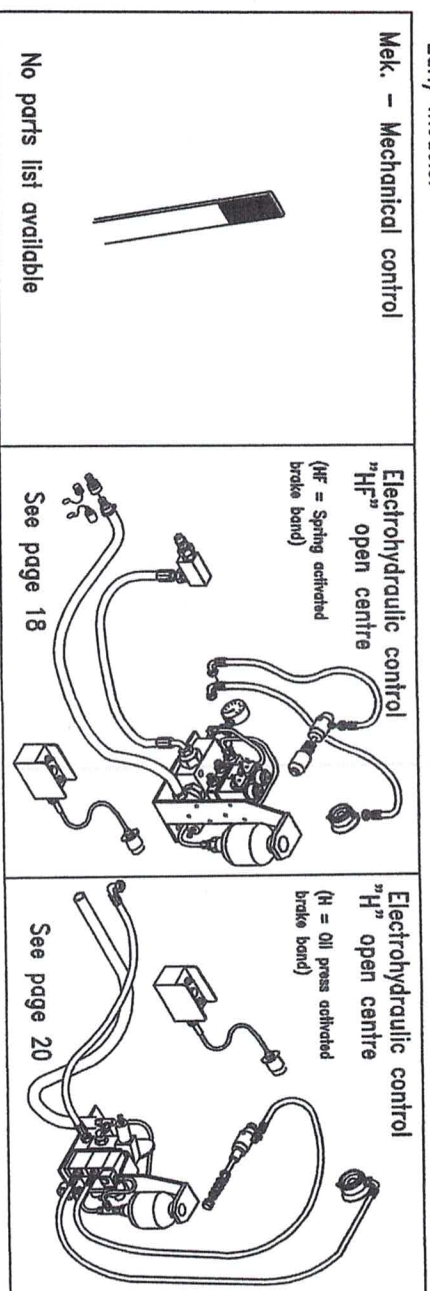

IGLAND Grosso 8001


ELECTROHYDRAULIC LOW PRESSURE CONTROL "LH"

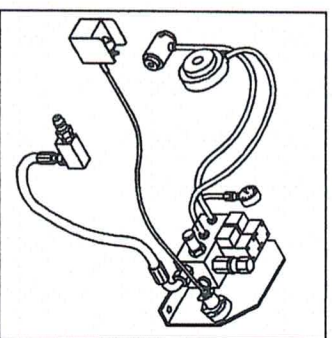

Early version
Serial No.:
⇒ 250

017485-
055061-

044054
Early version
Serial No.:
⇒ 250

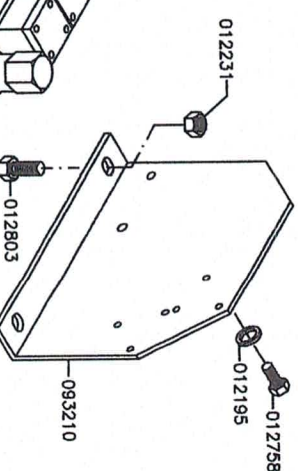

012231

012758
012195

093210

012803

391914
30mm


See page 14

057302
Current version
Serial No.:
251 ⇒

See page 13

180125
Early version
Serial No.:
⇒ 250

180126
Current version
Serial No.:
251 ⇒

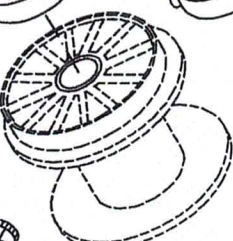

044056
Early version
Serial No.:
⇒ 250

057605
Current version
Serial No.:
251 ⇒

044211-

058311-

See page 22

See page 14

025001
Repair kit

If fitted
See page 13

047072

047074

047077

047079

047033

047035

047037

047039

047041

047043

047045

047047

047049

IGLAND AS




Should be used by LH winches.

Motstandsfri returkoblinger

TRACTOR TYPE	P/N:	DIMENSION:
BELARUS	049421	1 1/4" R
CASE 585-885 XL, 495-995 XLT, 3200, 4200	049445	1 1/4" BSP
DEUTZ	049423	M26 x 1,5
FENDT 308	049422	M18 x 1,5
FIAT 60-94, 65-94, 72-94, 82-94, 88-94, from -94	049444	M22 x 1,5
FIAT (not 90/90 or 100/90)	049426	M22 x 1,5
FIAT 90/90 and 100/90	049425	M30 x 1,5
FORD 4130, 4630, 5030, 5640, 6640, 7740	049434	3/4" R
FORD 6410 and 6610, From A -89 mod.	049434	3/4" R
FORD -10 SERIE	049400	Eksp. 34 mm
INTERNATIONAL TYPE 1	049428	1 5/16" UNF
INTERNATIONAL TYPE 2	049429	1" UNF
INTERNATIONAL TYPE 3	049430	3/4" UNF
JOHN DEERE -40 serie	049438	1" - 11,5 NPT
JOHN DEERE -50 serie	049439	3/4" - 14 NPT
JOHN DEERE -3000 serie	049446	M24 x 1,5
JOHN DEERE -6000 serie	049440	M22 x 1,5
KUBOTA 345 L	049411	3/8" R
KUBOTA M7950 DT	049415	1" R
MB TRAC	049419	M30 x 1,5
MASSEY FERGUSON 250-265	049441	1 1/16" JIC
MASSEY FERGUSON 600 series, from -84	049441	1 1/16" JIC
MASSEY FERGUSON 300 series, from -87	049442	7/8" JIC
MASSEY FERGUSON 3000 series, from -87	049443	1 1/16" JIC
VALMET 6100, 6300, 6400, 6600 MEZZO	049435	M30 x 2
VALMET 355, 455, 555, 465, 565, 665	049427	7/8" JIC
VALMET 305 - 405	049420	M30 x 2
VALMET 505 - 805	049412	
VALMET, Early model	049404	29 - 31 mm
ZETOR CRYSTAL 8145 - 4145	049433	M30 x 1,5
ZETOR 6520/40, 7520/40, 8520/40, 9520/40	049437	M48 x 1,5
ZETOR (all other models)	049414	
Universal type for oil supply	049404	29 - 31 mm
Universal type for oil supply	049400	34 - 36 mm
Universal type for oil supply	049405	37 - 39 mm
Universal type for oil supply	049402	49 - 51 mm
Universal sett, fits div Tractors	049450	—

IGLAND Grosso 8001

ELECTROHYDRAULIC LOW PRESSURE CONTROL ("LH") (Hydraulic components)

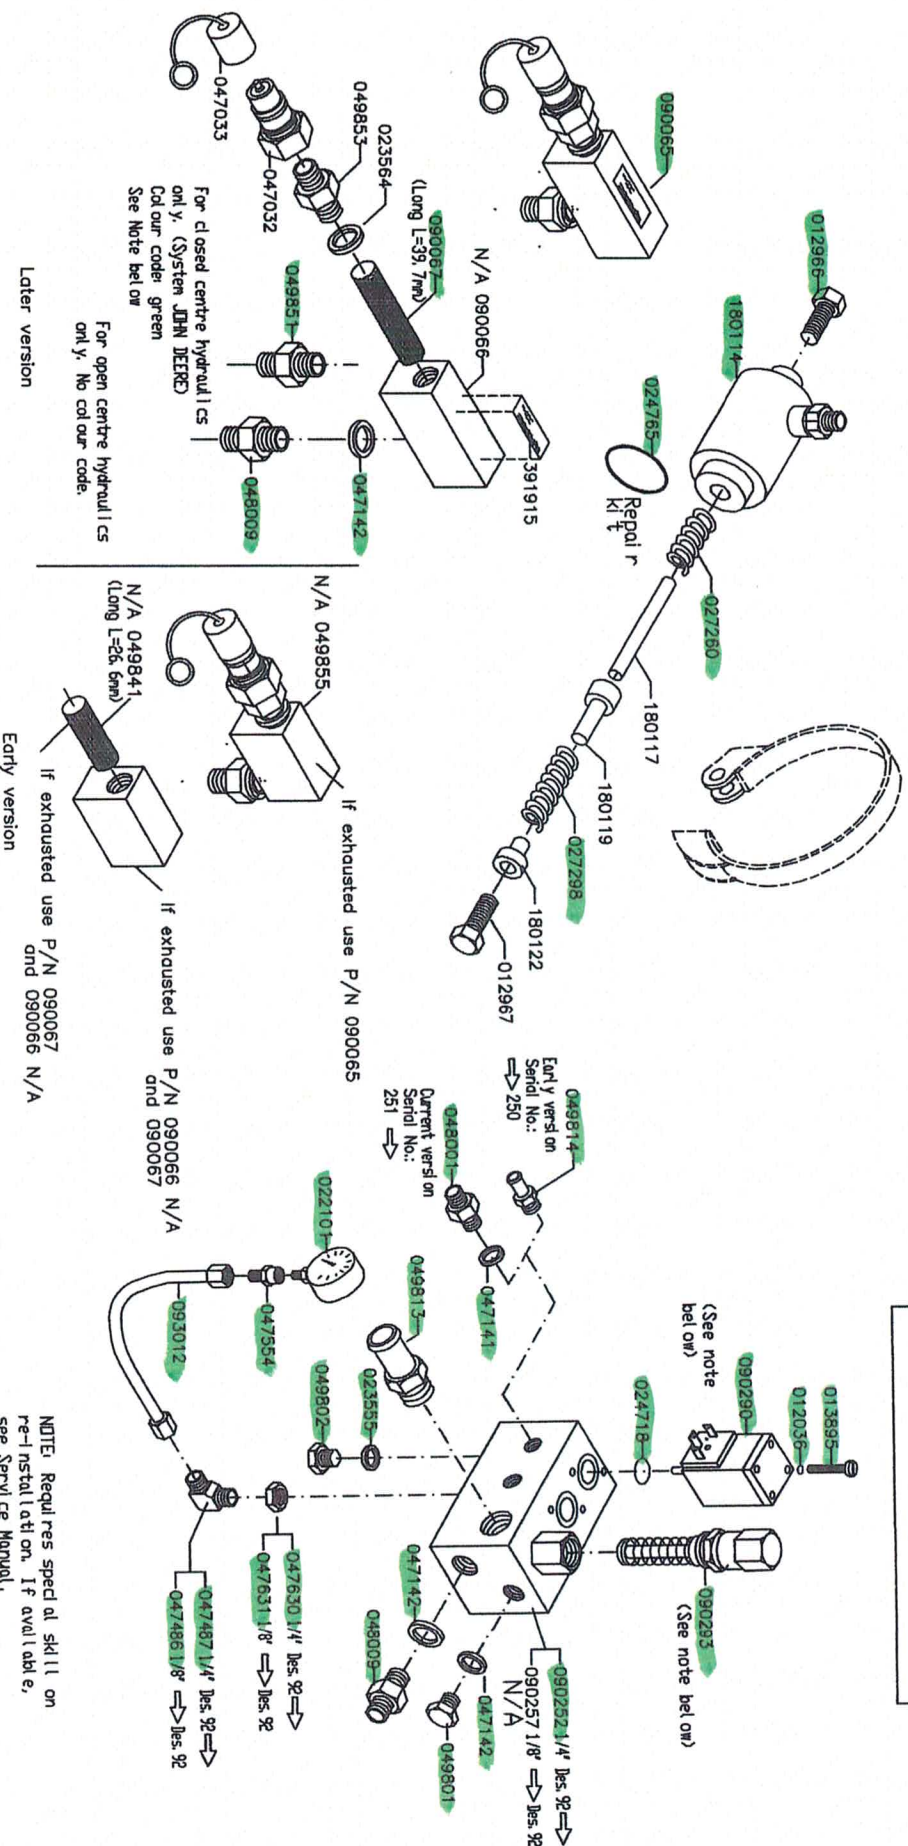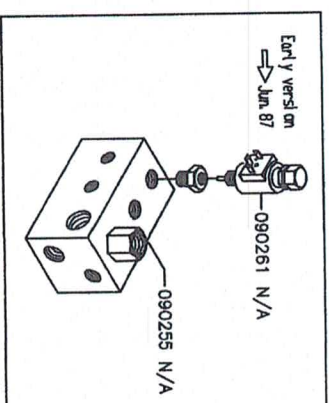
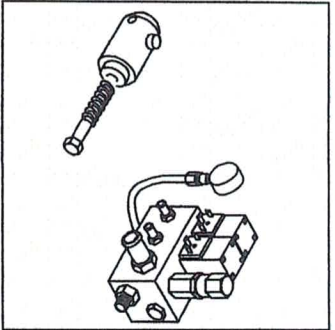


NOTE: Requires special skill on re-installation. If available, see Service Manual.

IGLAND Grosso 8001

ELECTROHYDRAULIC HIGH PRESSURE CONTROL. ("HP")

With separate oil supply.

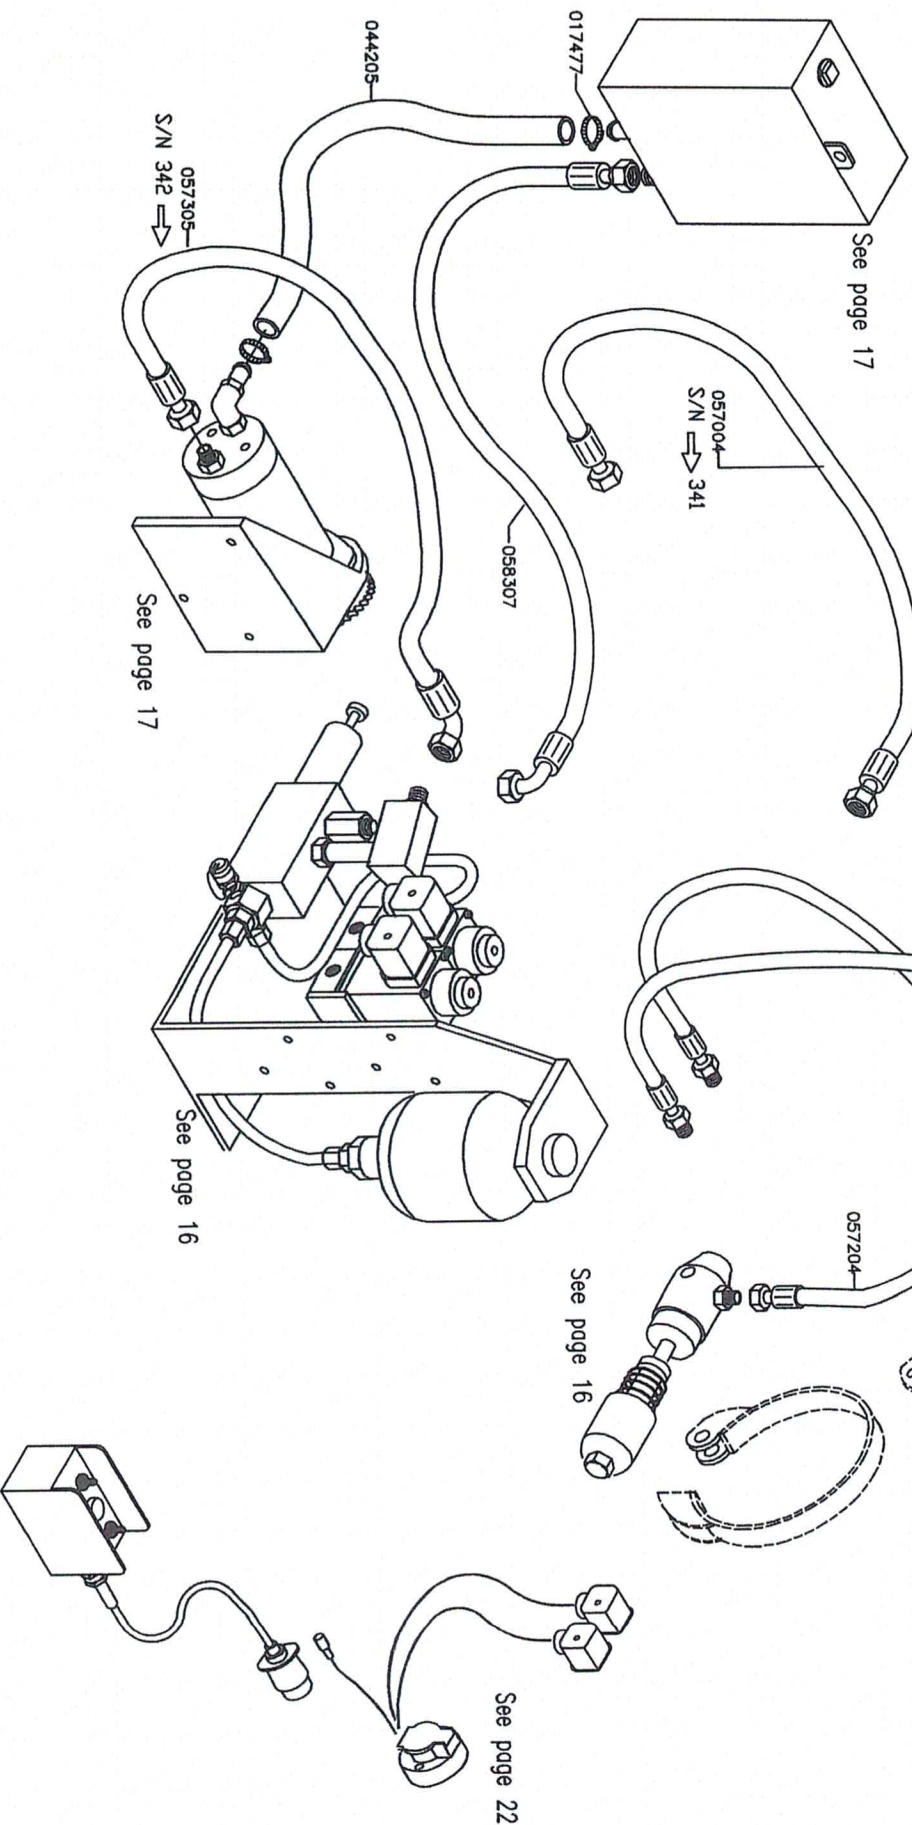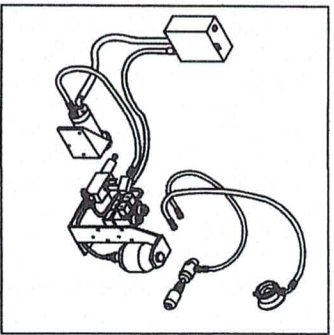

See page 17

057004
S/N → 341

See page 22


See page 16

See page 16



See page 17

057305—
S/N 342 →

With separate oil supply.

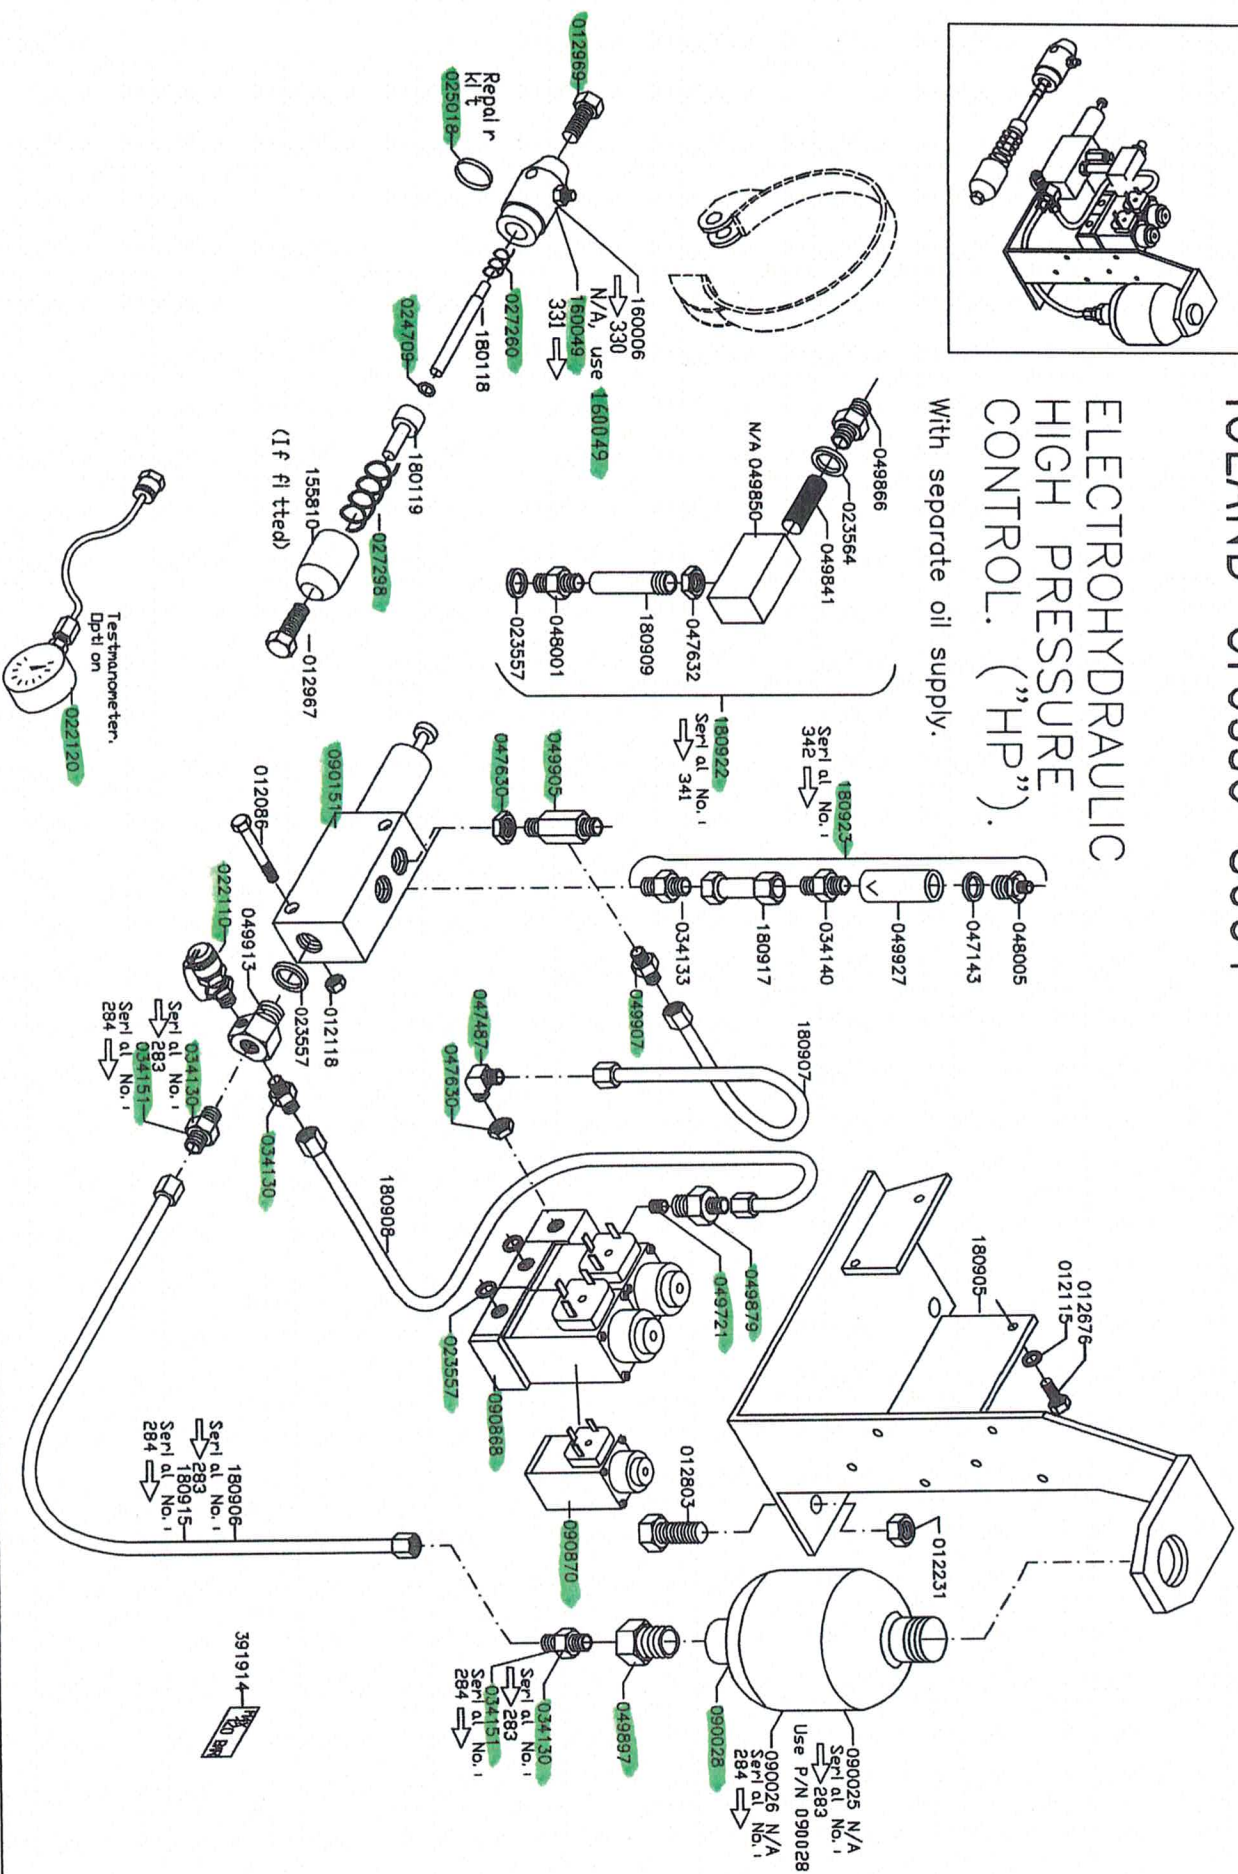


With separate oil supply.

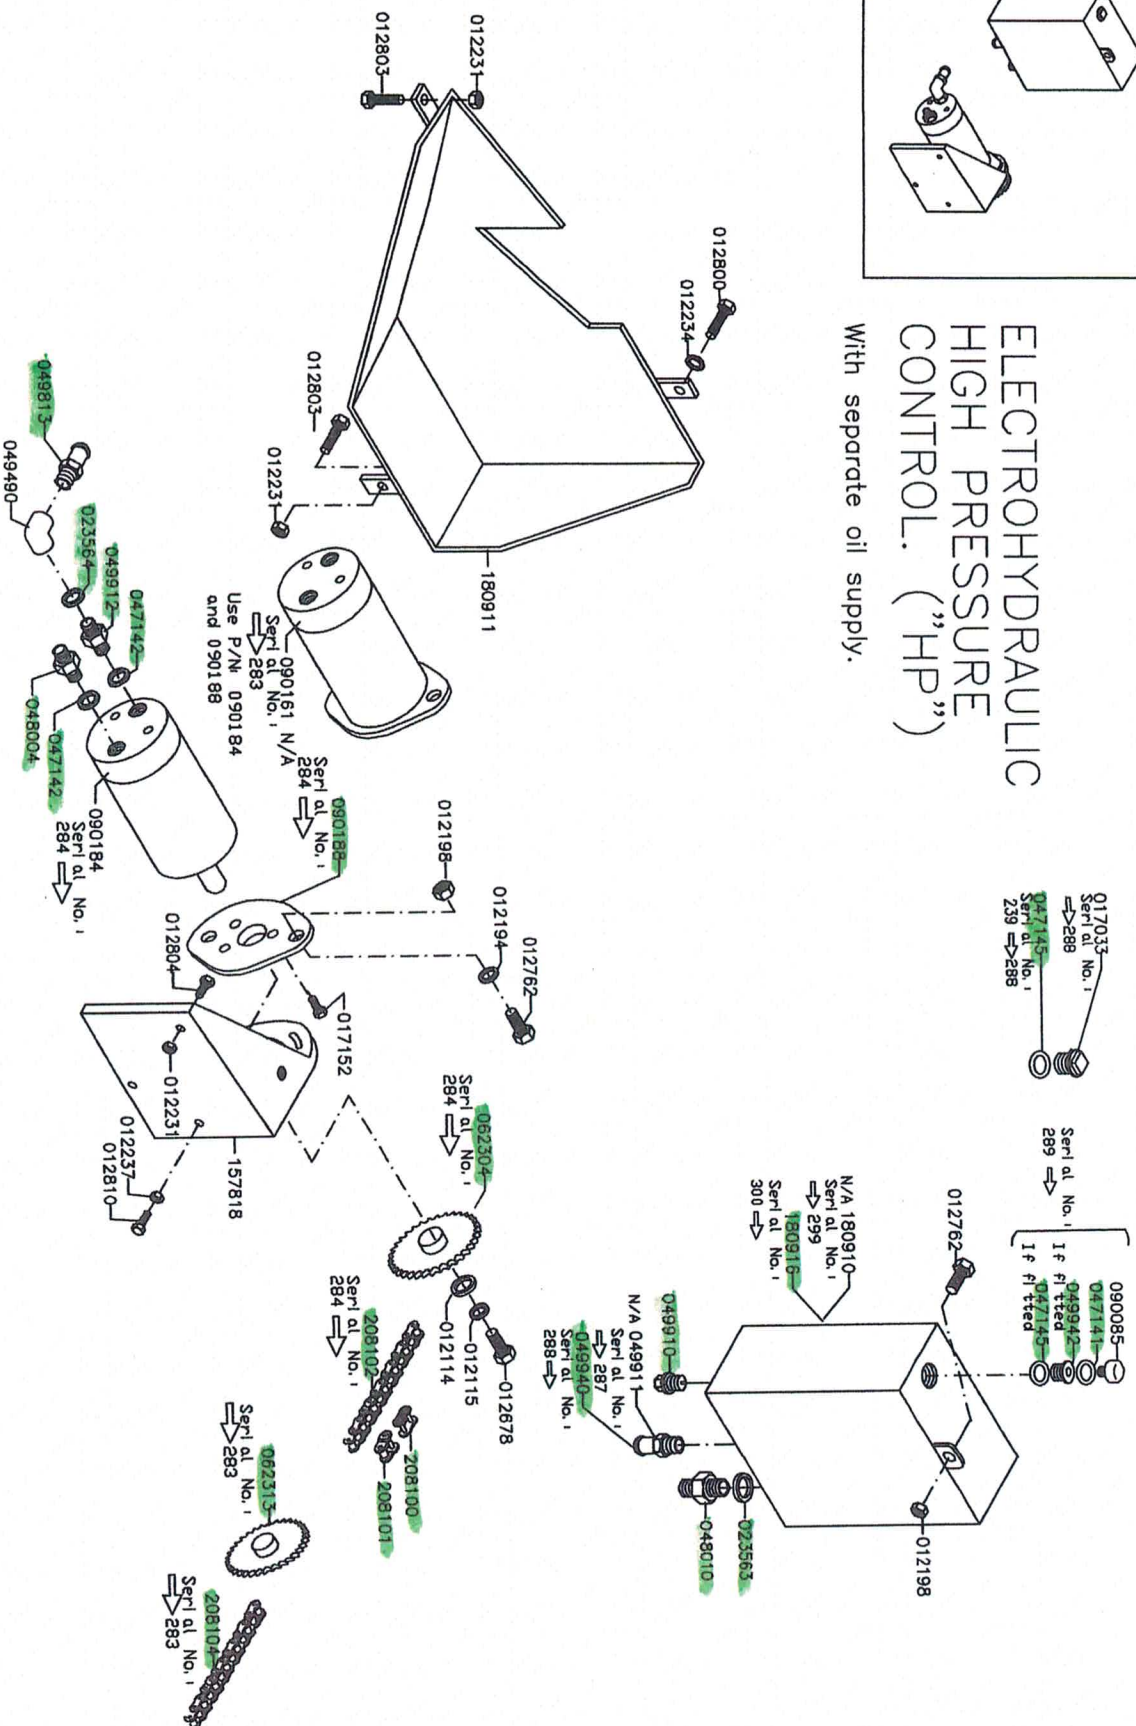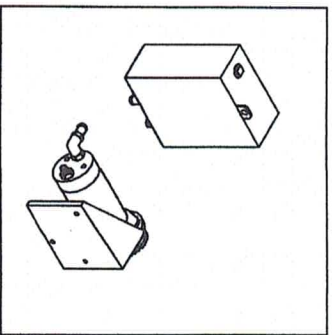

IGLAND Grosso 8001

ELECTROHYDRAULIC
HIGH PRESSURE
CONTROL. ("HF").

"Open centre"

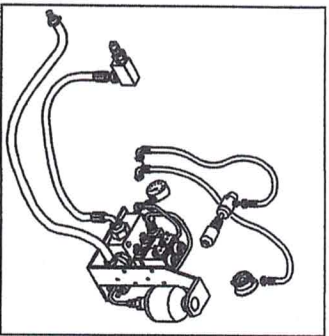

See page 22

See page 14

See page 12


See page 19

See page 16

See page 15



057303

057305

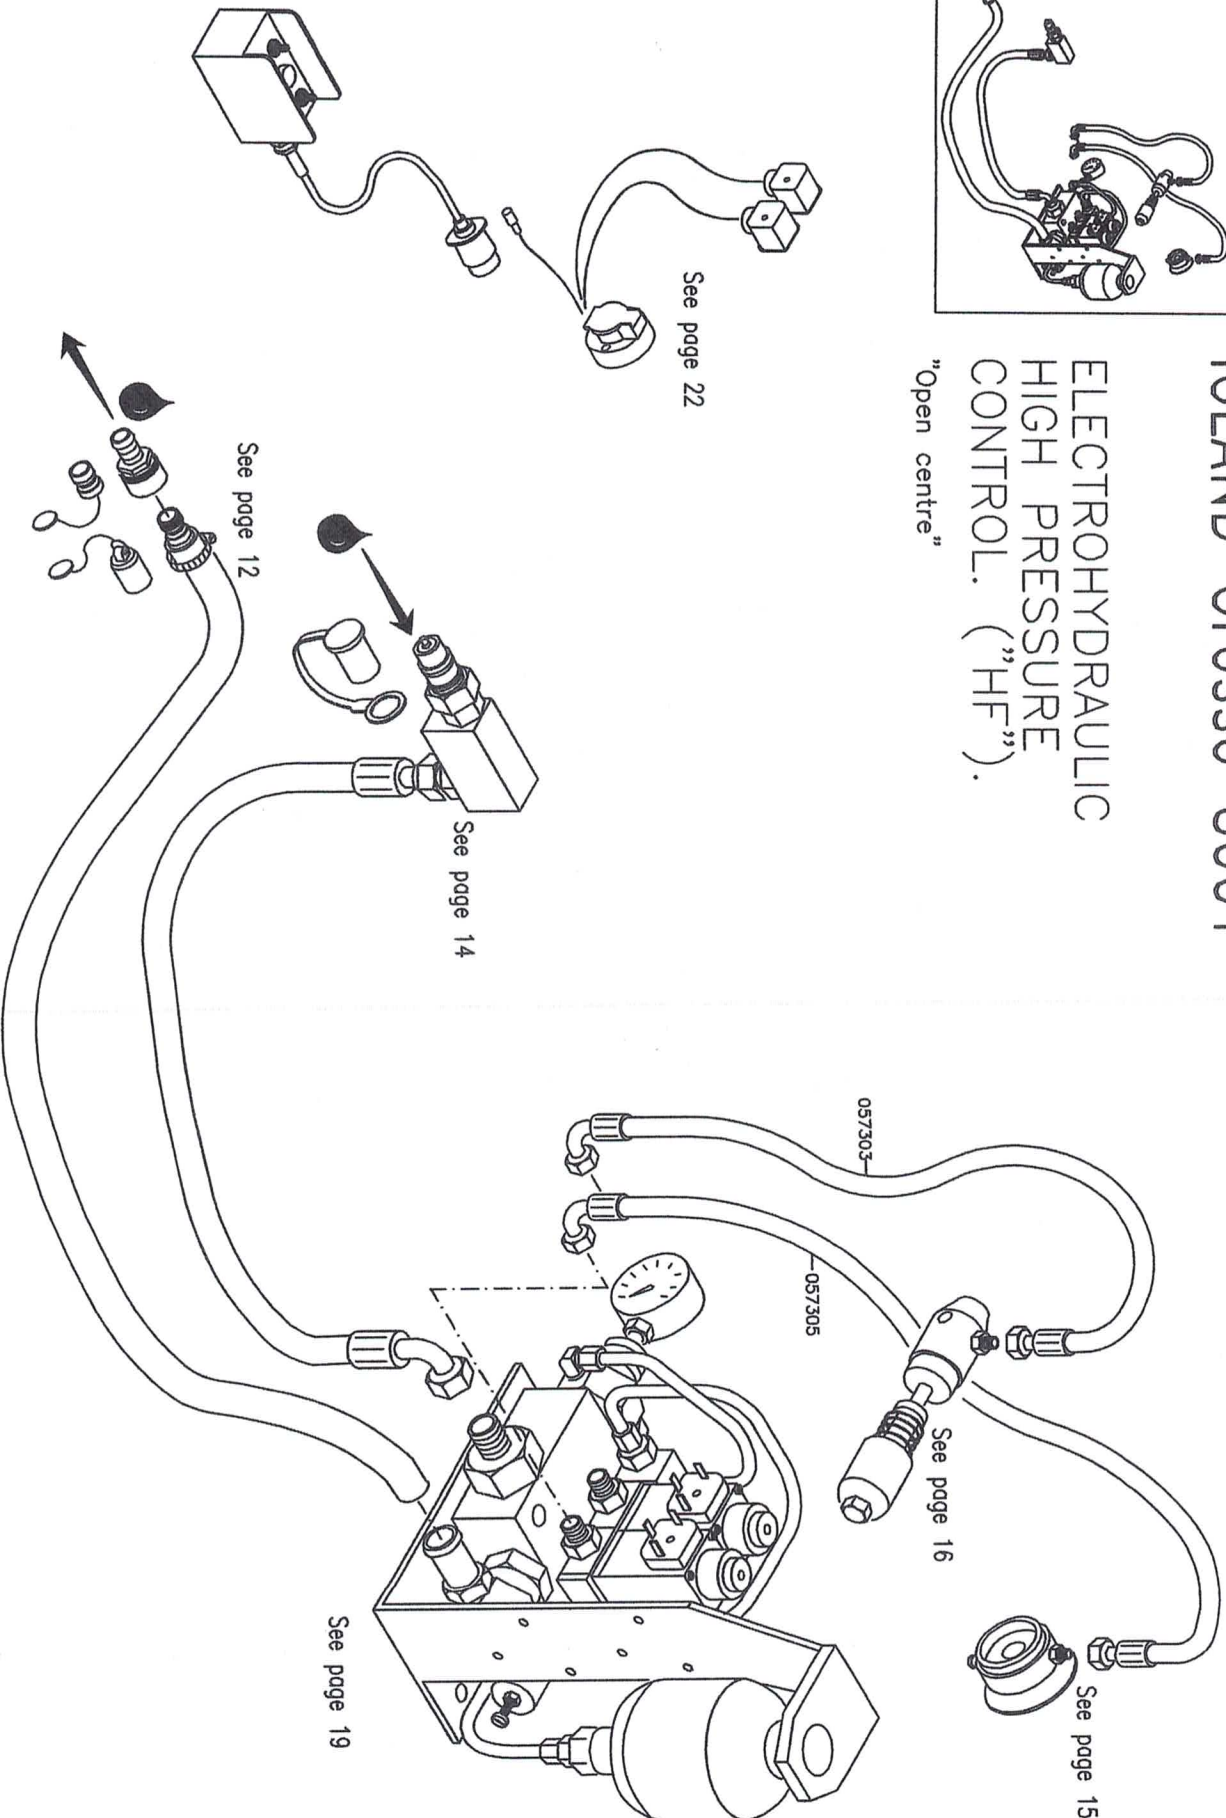



IGLAND Grosso 8001


ELECTROHYDRAULIC
HIGH PRESSURE
CONTROL. ("HF").
"Open centre"

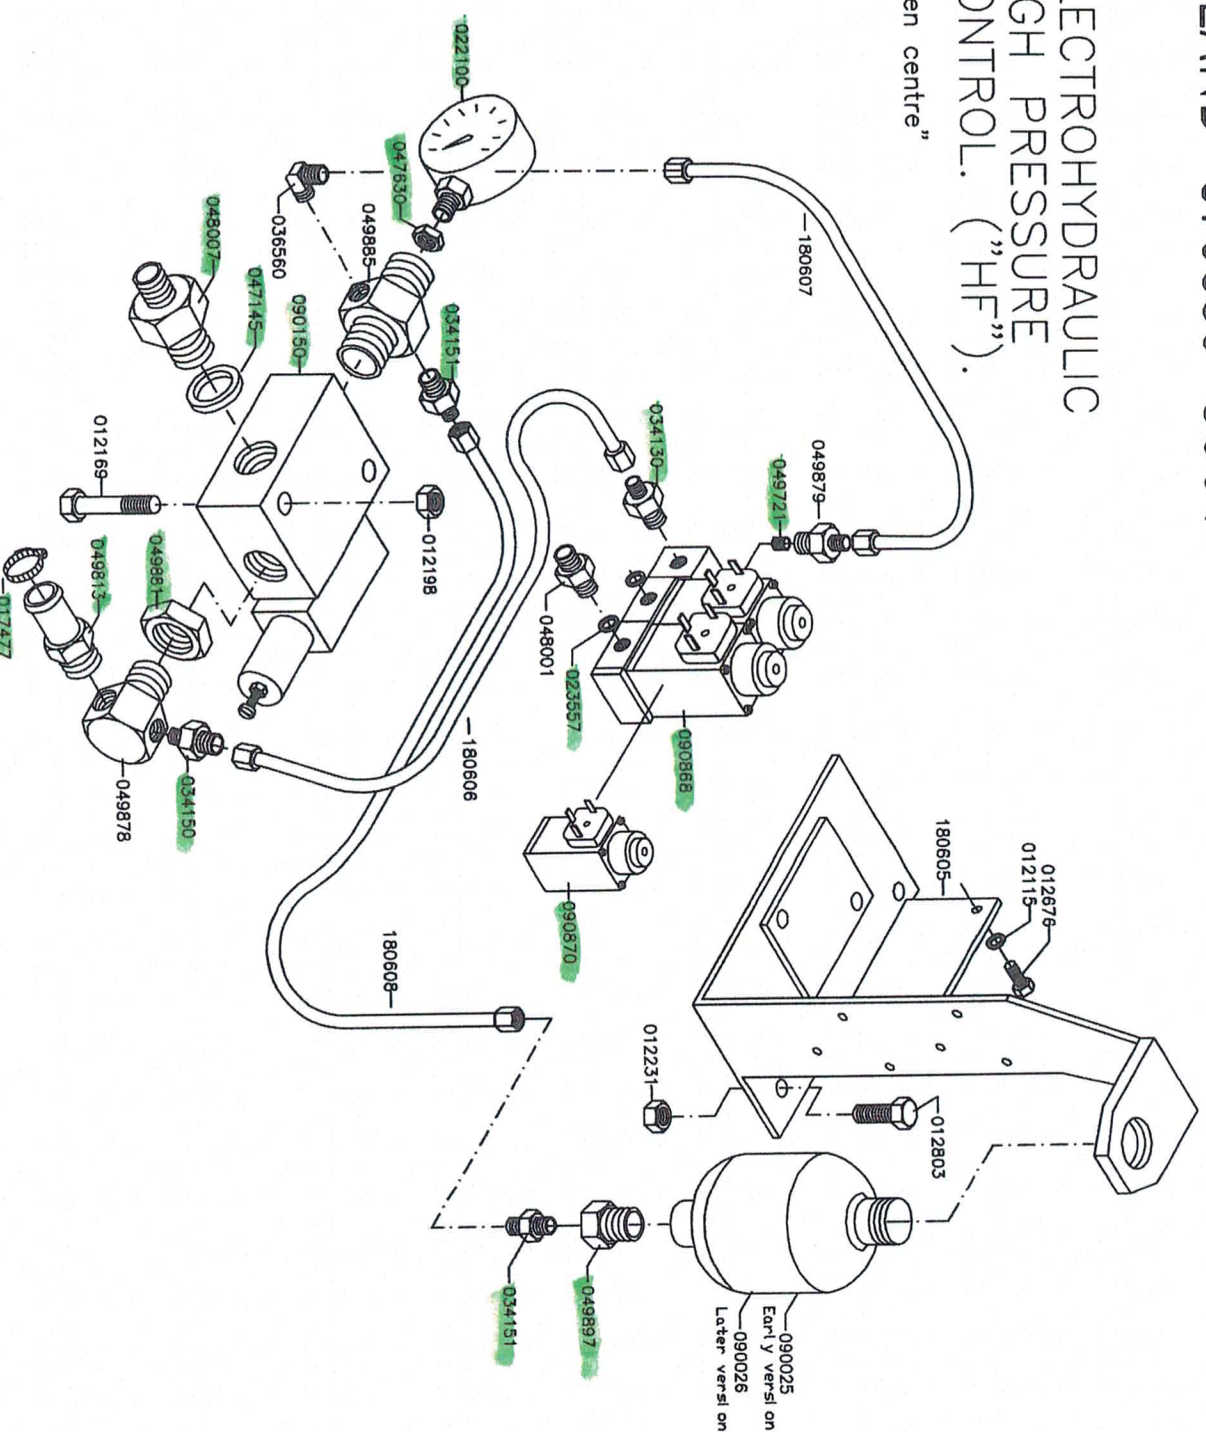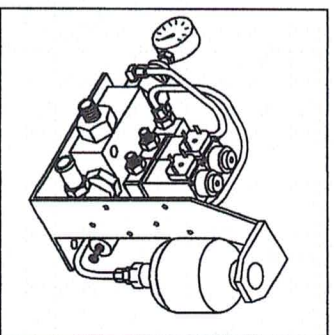

IGLAND Grosso 8001

ELECTROHYDRAULIC HIGH PRESSURE CONTROL. ("H")

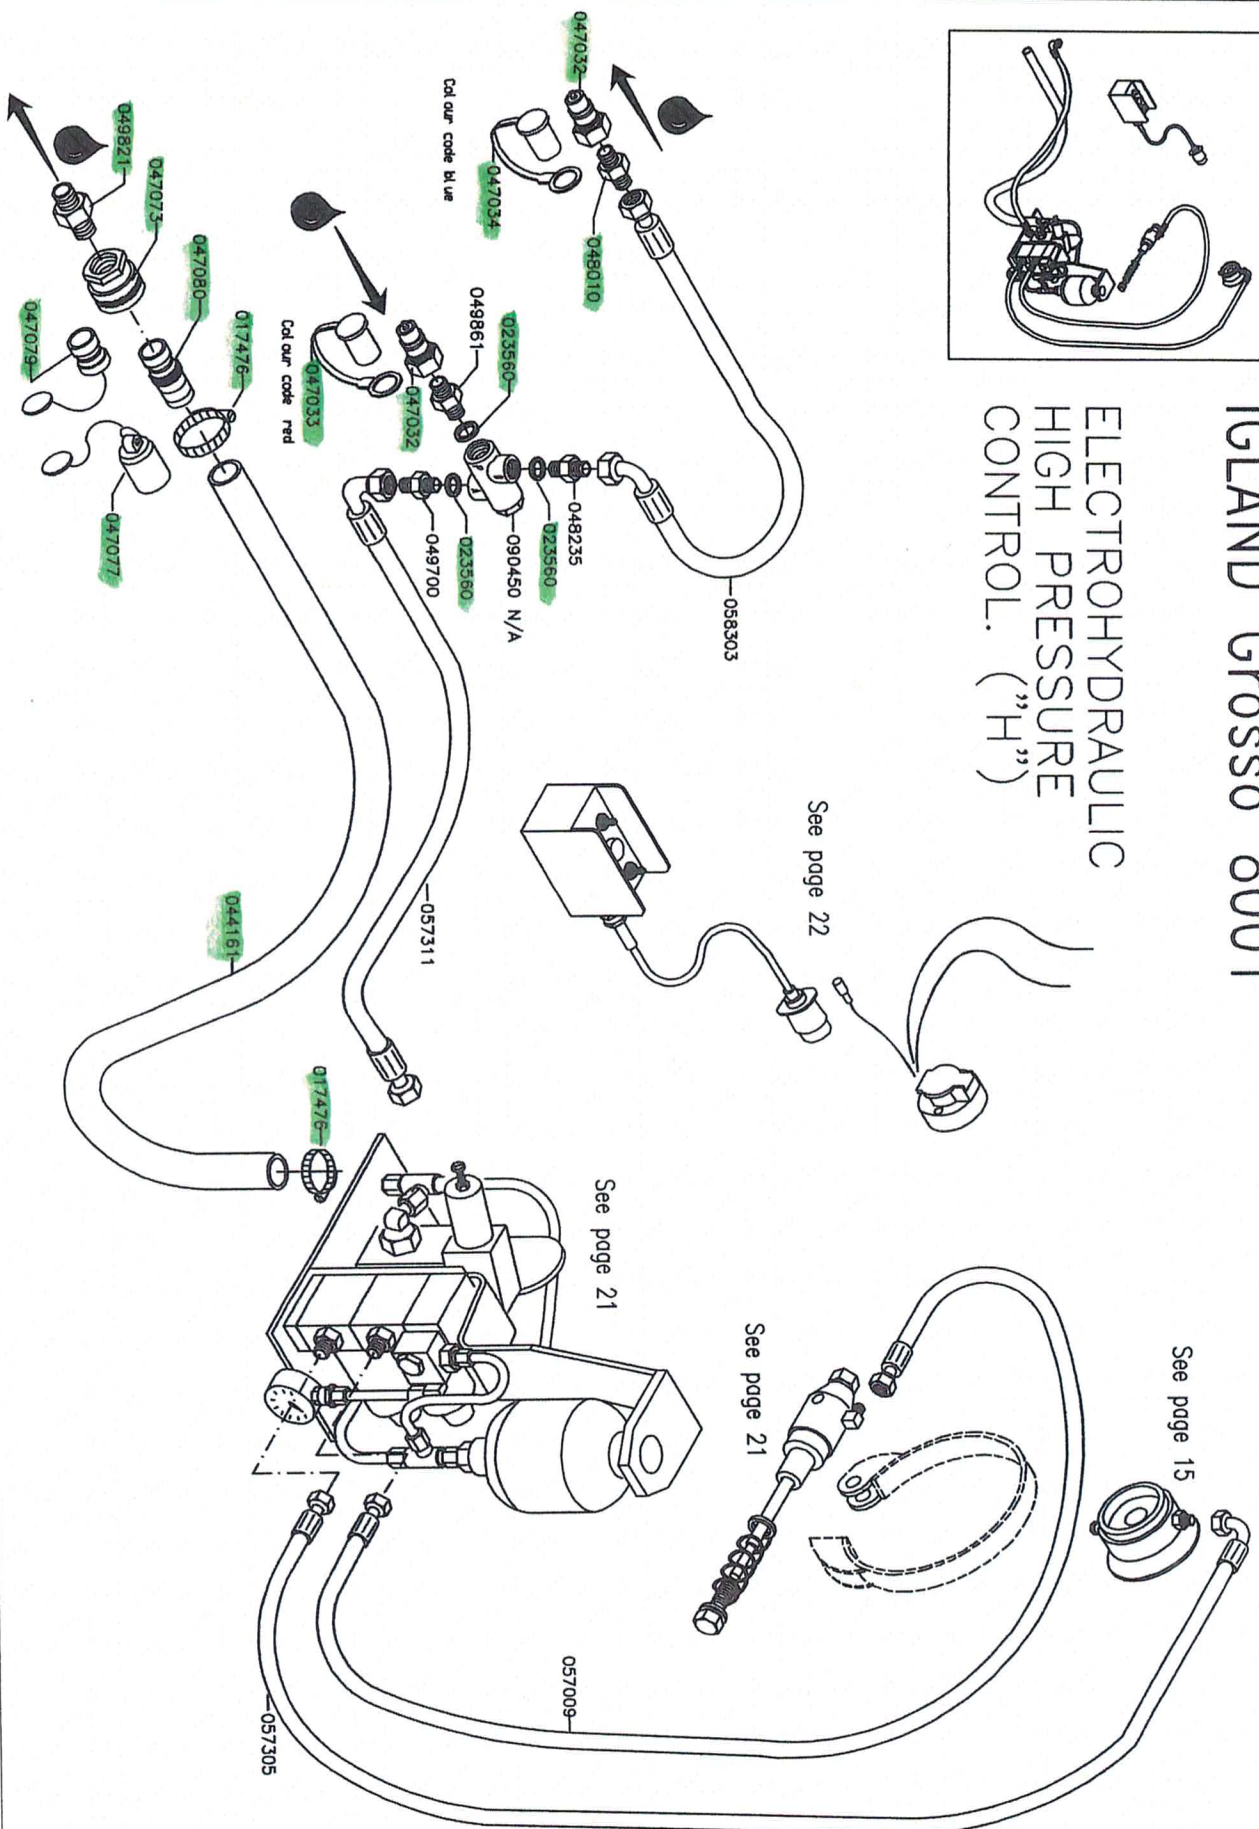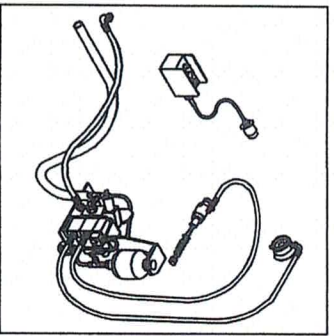


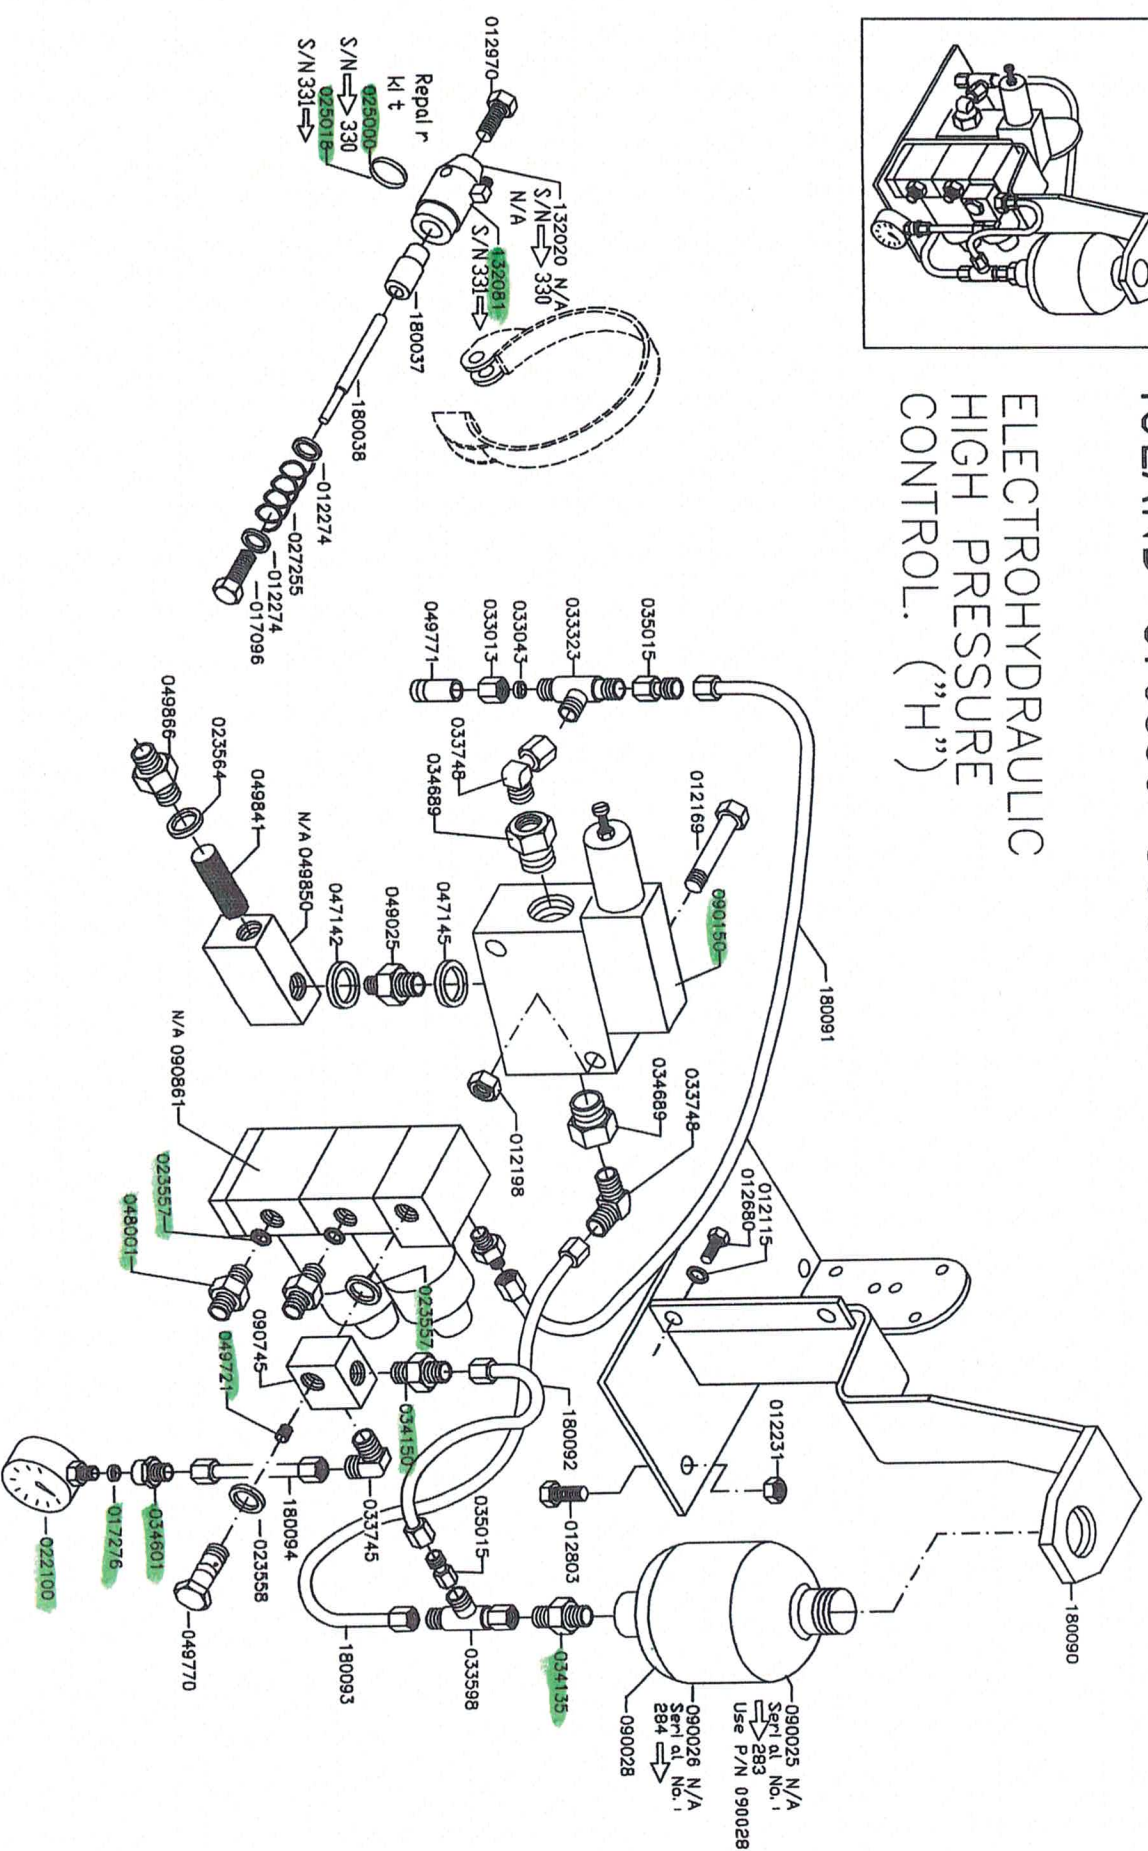



IGLAND Grosso 8001

ELECTROHYDRAULIC CONTROL


Electrical components

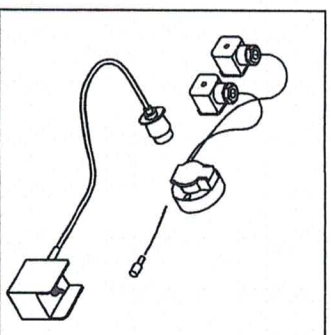

EARLY VERSION

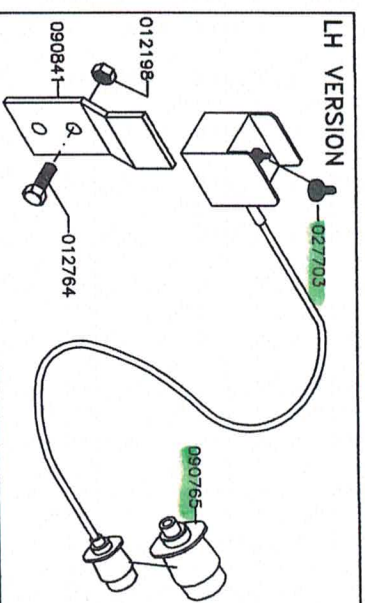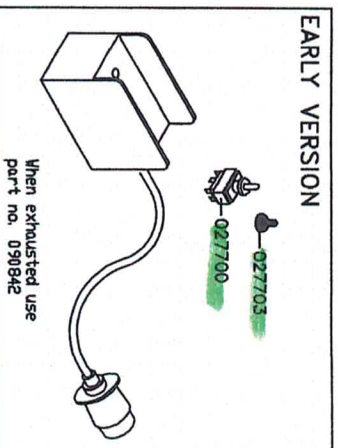


LH version on only
(and HP and HF version on Serial No.: => 194)

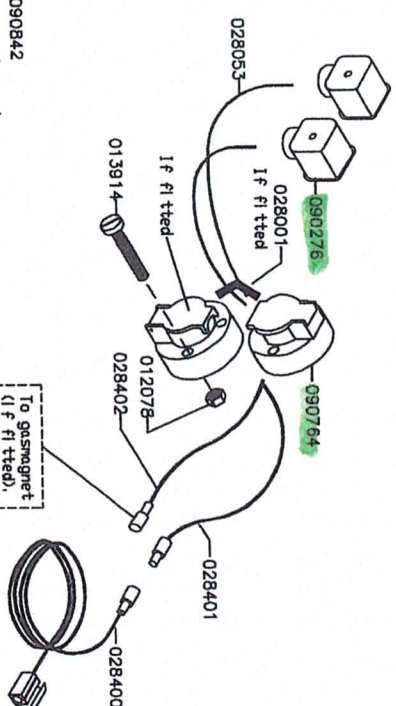


+12 V from "1 gnl ti on still tch"
(Use a BA fuse)
See service manual.

HP and HF VERSION

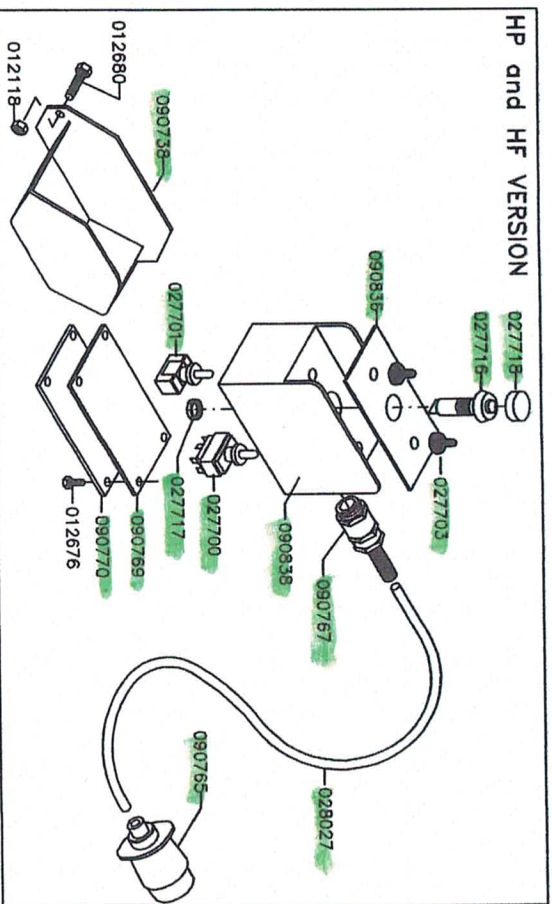



HP and HF version on only
Serial No.: 195 =>
HP and HF, 'GS' version on only

Early "GS" -versions only.

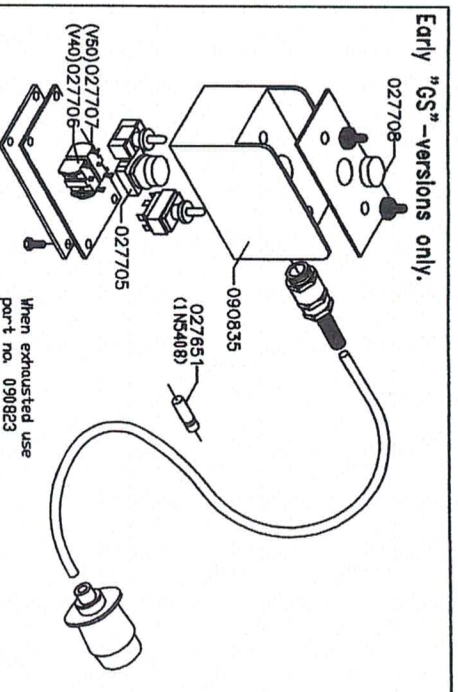

IGLAND Grosso 8001


INFRARED REMOTE CONTROL KIT: 091241 N/A
(Transmitter, Receiver and
Charger Unit)
If fitted.

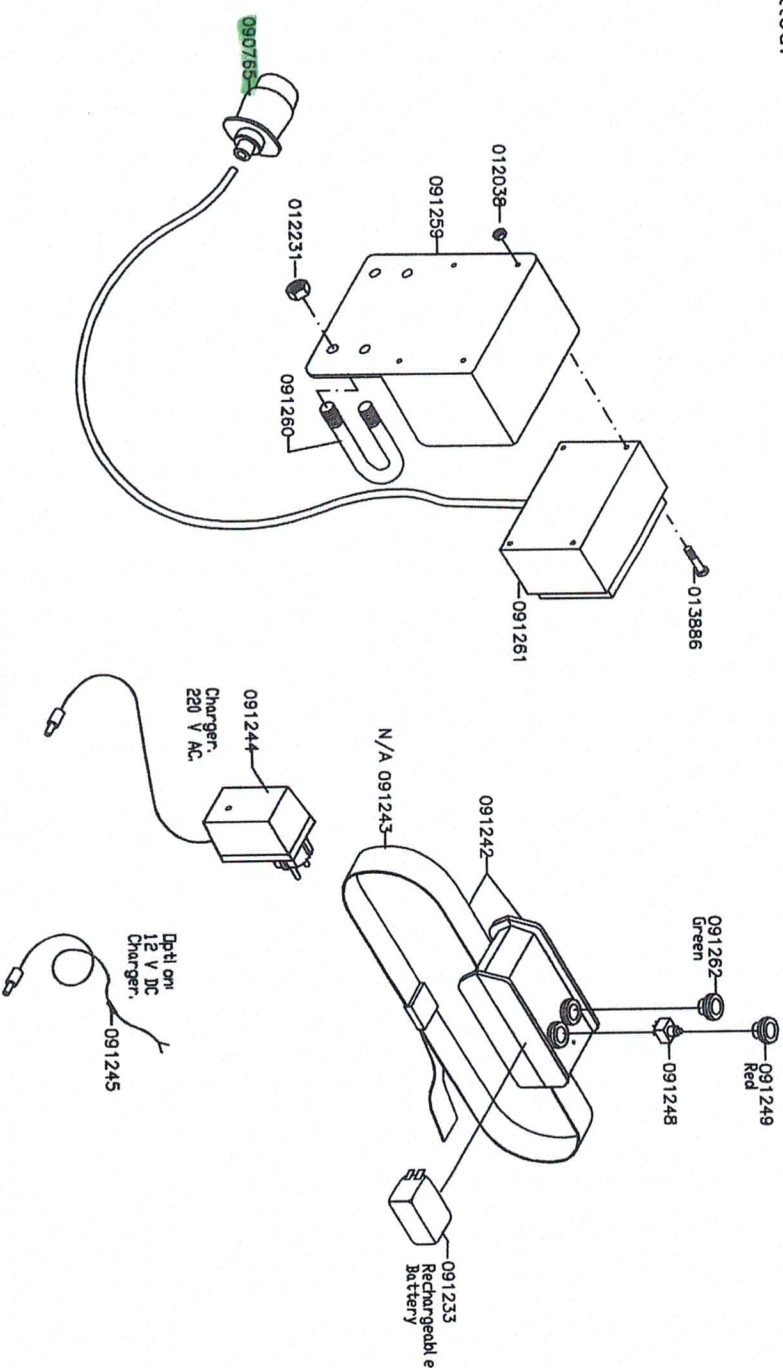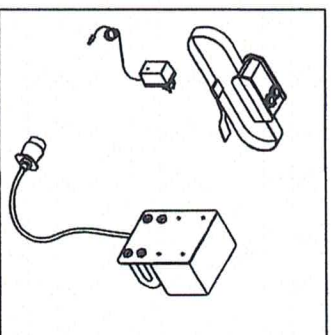

IGLAND Grosso 8001

RADIO REMOTE CONTROL KIT: 091141 N/A
(Transmitter and Receiver)
Frequency: 40.685 MHz.


"GS" Version, (frequency: 433,2 MHz): 091143 N/A
If fitted.

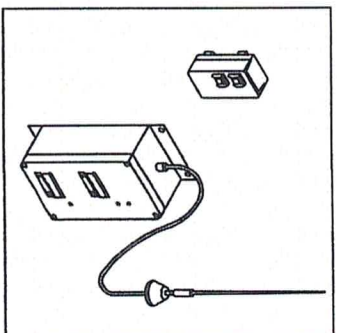


091143

091141

"GS" version.

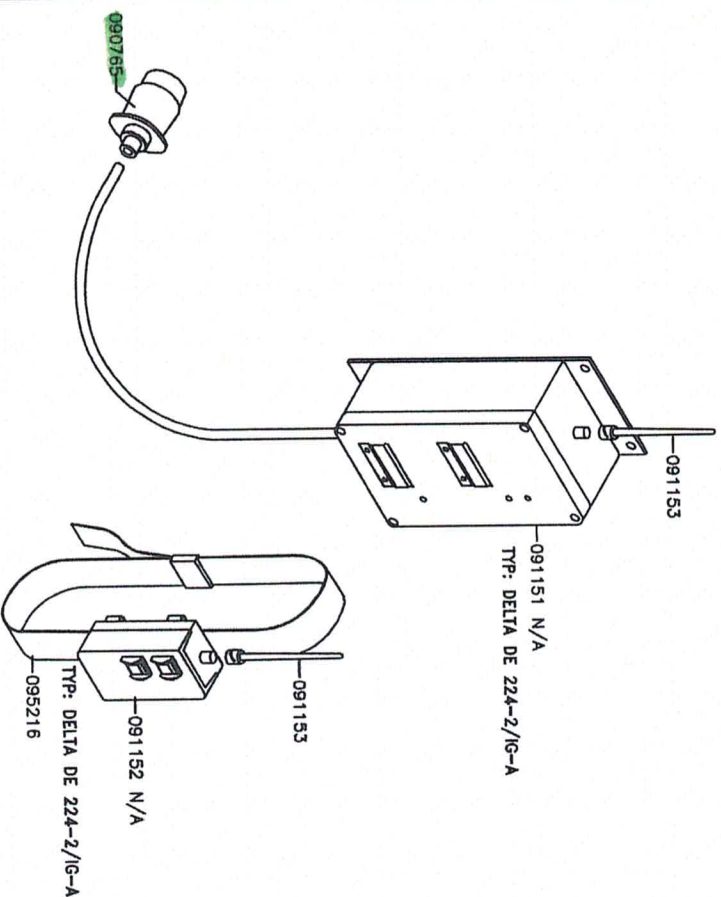


Standard version.

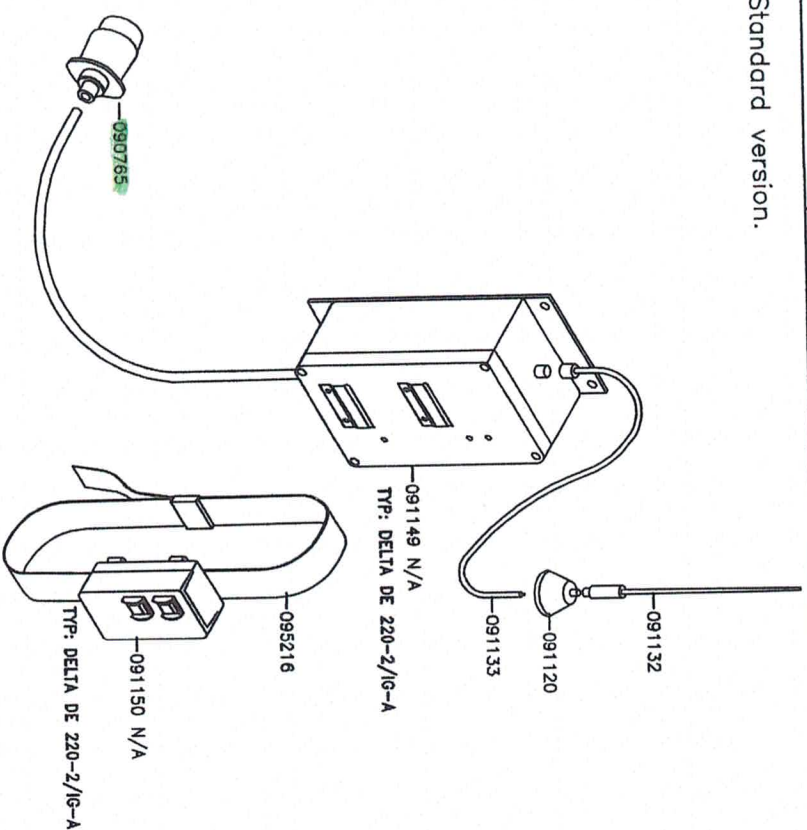


IGLAND Grosso 8001

RADIO REMOTE CONTROL KIT (T - 100): 091165
 RADIO REMOTE CONTROL KIT (T - 150): 091167 N/A

(Transmitter and Receiver)
 Add. price for extra 4 ch. transmitter/receiver - 091166
 Add. price for extra 4 ch. transmitter/receiver/RPM Actuator - 091168
 Add. price for frequency for Germany, Austria, Switzerland - 091162N/A
 Add. price for frequency for Great Britain - 091163

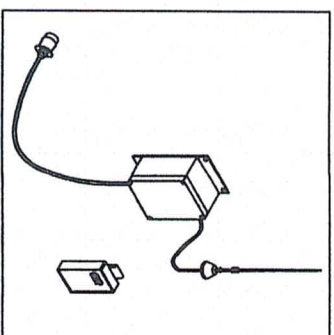


See page 26

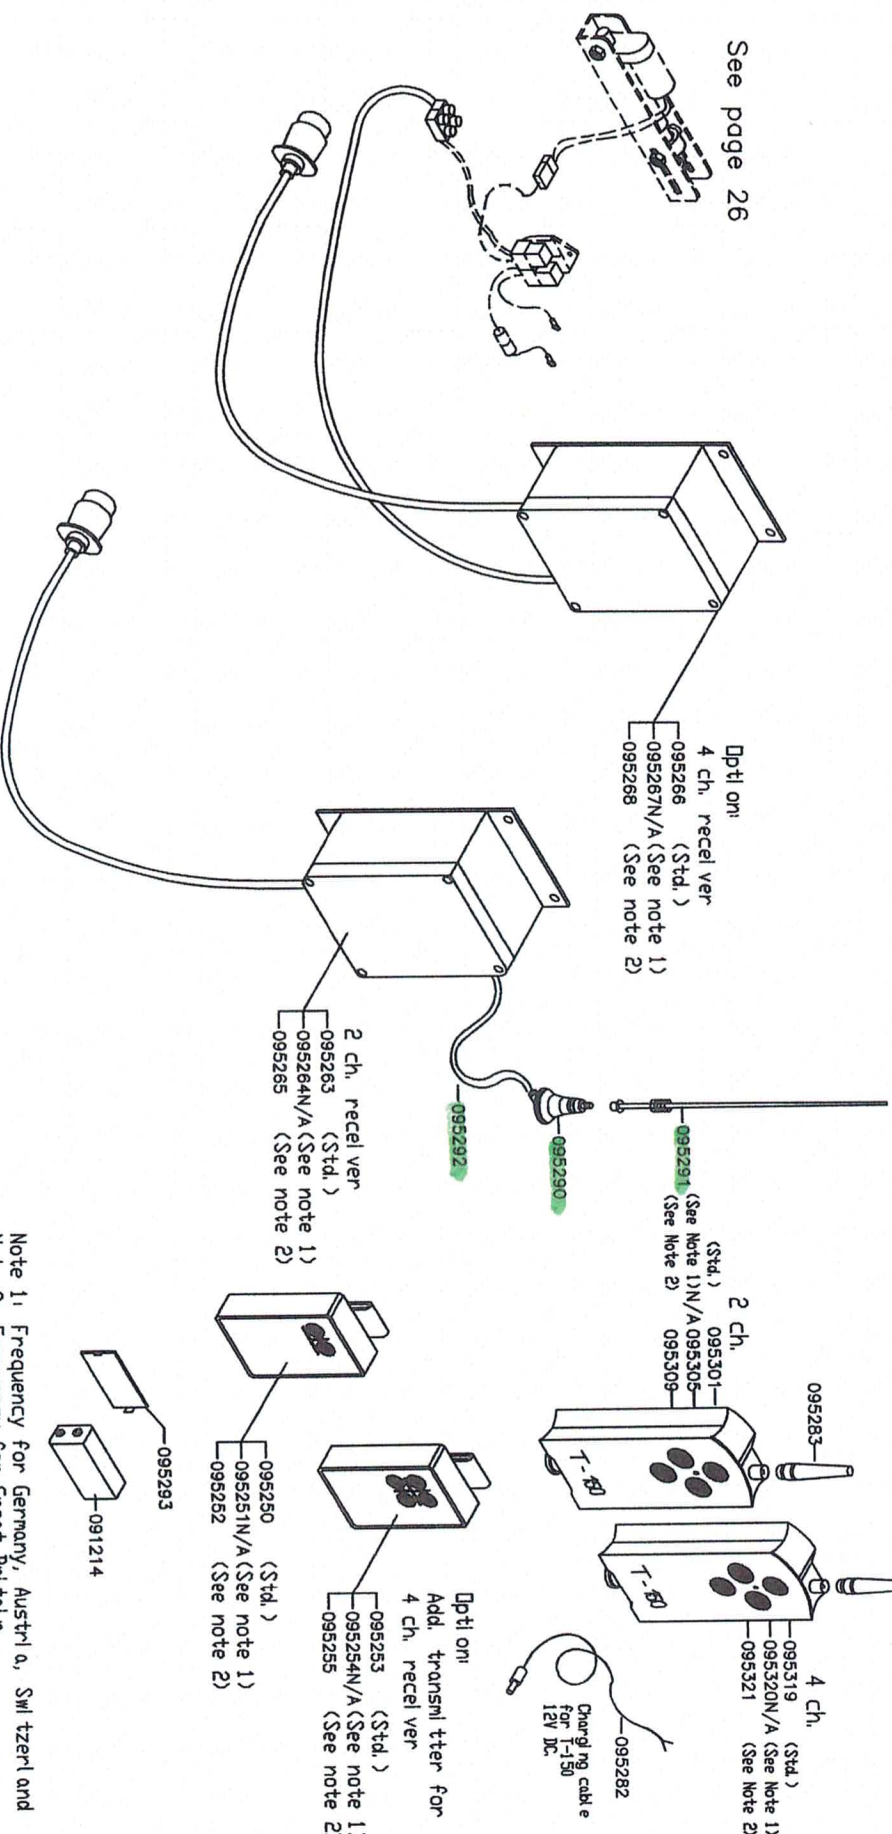

Note 1: Frequency for Germany, Austria, Switzerland and
 Note 2: Frequency for Great Britain


IGLAND Grosso 8001

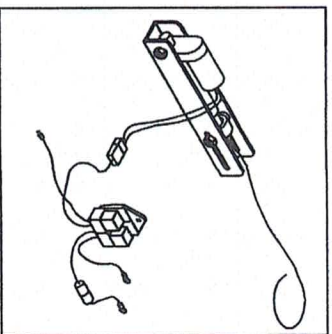


RPM ACTUATOR, compl.: 091440
 On/off function
 RPM ACTUATOR, compl.: 091441
 Steplless function.

If fitted.

Early version

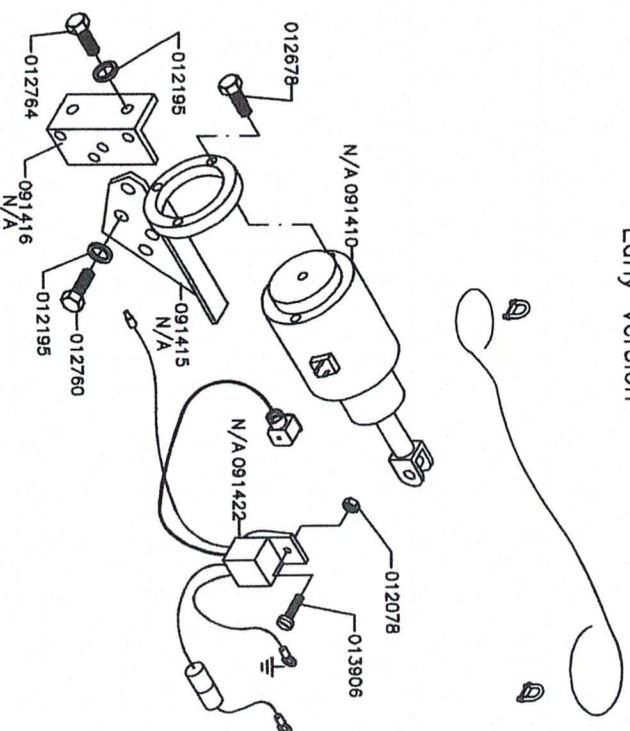


Current version

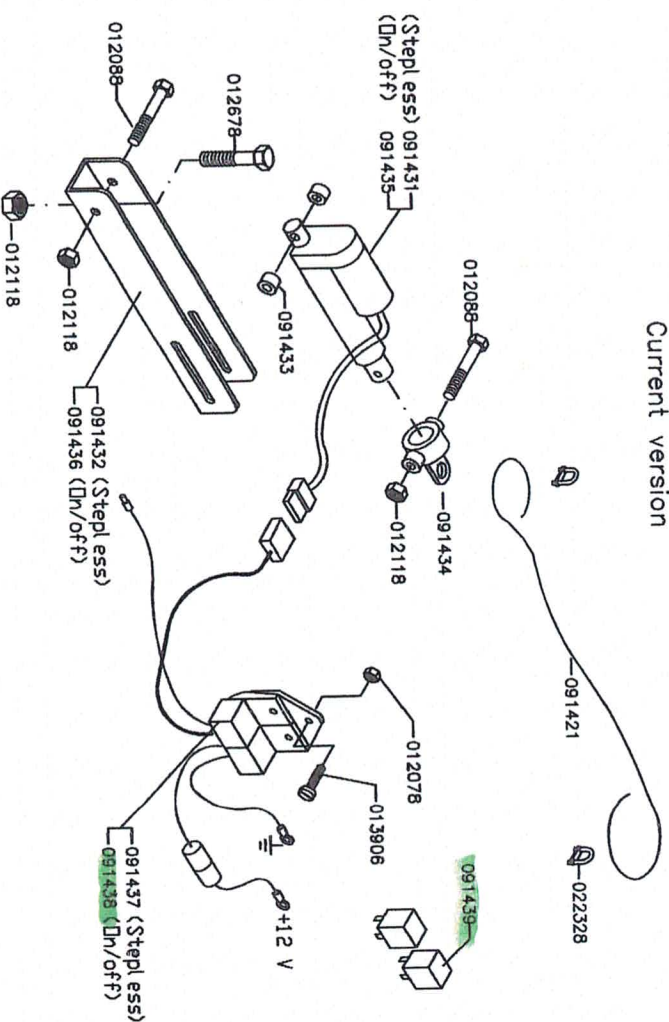

IGLAND Grosso 8001



Miscellaneous

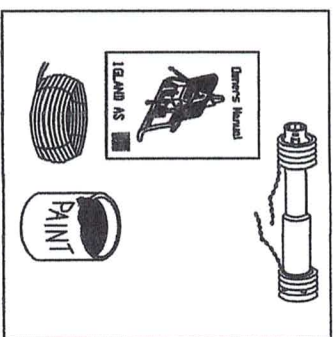


WIRE ROPE, 6x26WS+IWRC 180 kp, 14 mm




WIRE ROPE, according to ISO 4254-4

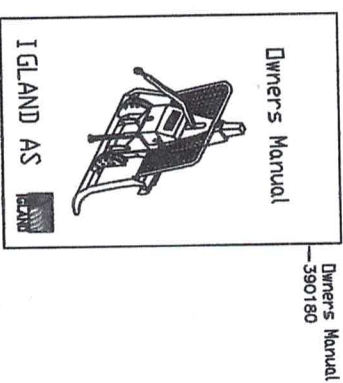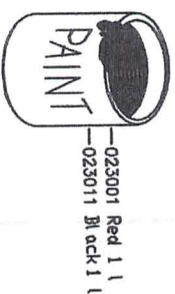

Parts Catalogue
Accessories for Sliding Machines

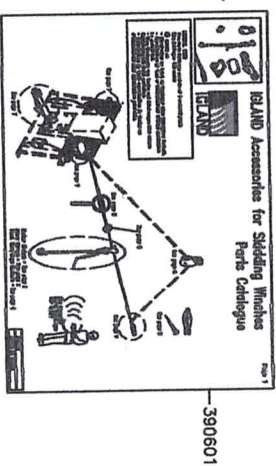

Parts Catalogue
IGLAND Grosso 8001, Parts Catalogue

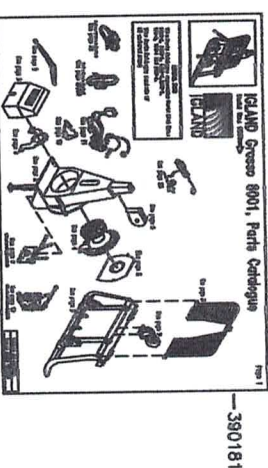

Intentionally blank