

IGLAND 36-63S

©IGLAND AS

- Gjengivelse av tekst og tegninger uten tillatelse forbudt.
- Reproduction of text or illustrations without permission is prohibited.
- Eine wiedergabe von Texten und Zeichnungen ohne unsere Genehmigung ist nicht gestattet.
- Interdiction de taute reproduction de texts ou d'illustrations sans autorisation préalable

Approved	Revised:
	Issued: 30.06..2017
	P/N: 390597

IGLAND AS

Roresanden 109

N-4885 Grimstad, Norway

Phone + 47 37 25 62 00

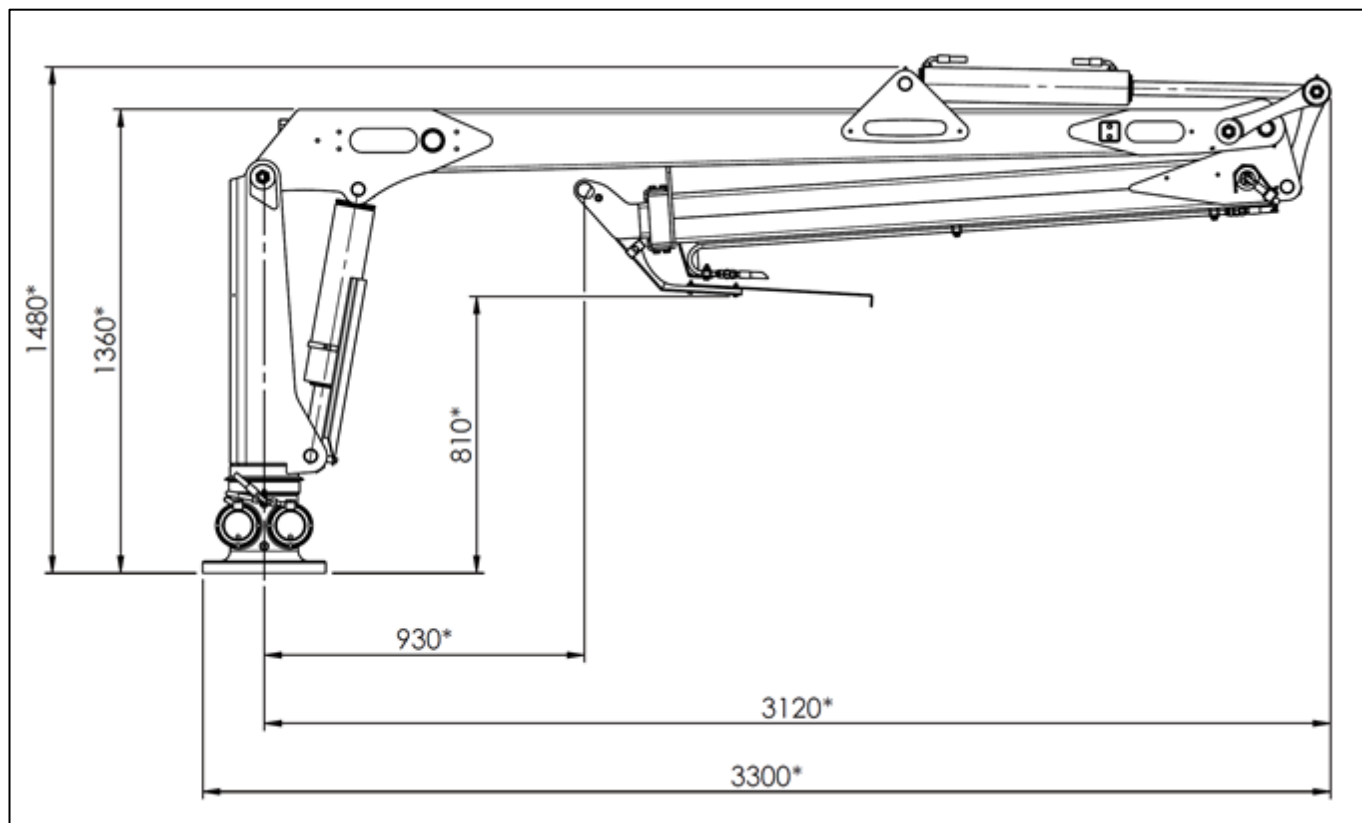
Fax + 47 37 25 62 01

Mail: corporate@igland-as.com

<http://www.igland-as.com>

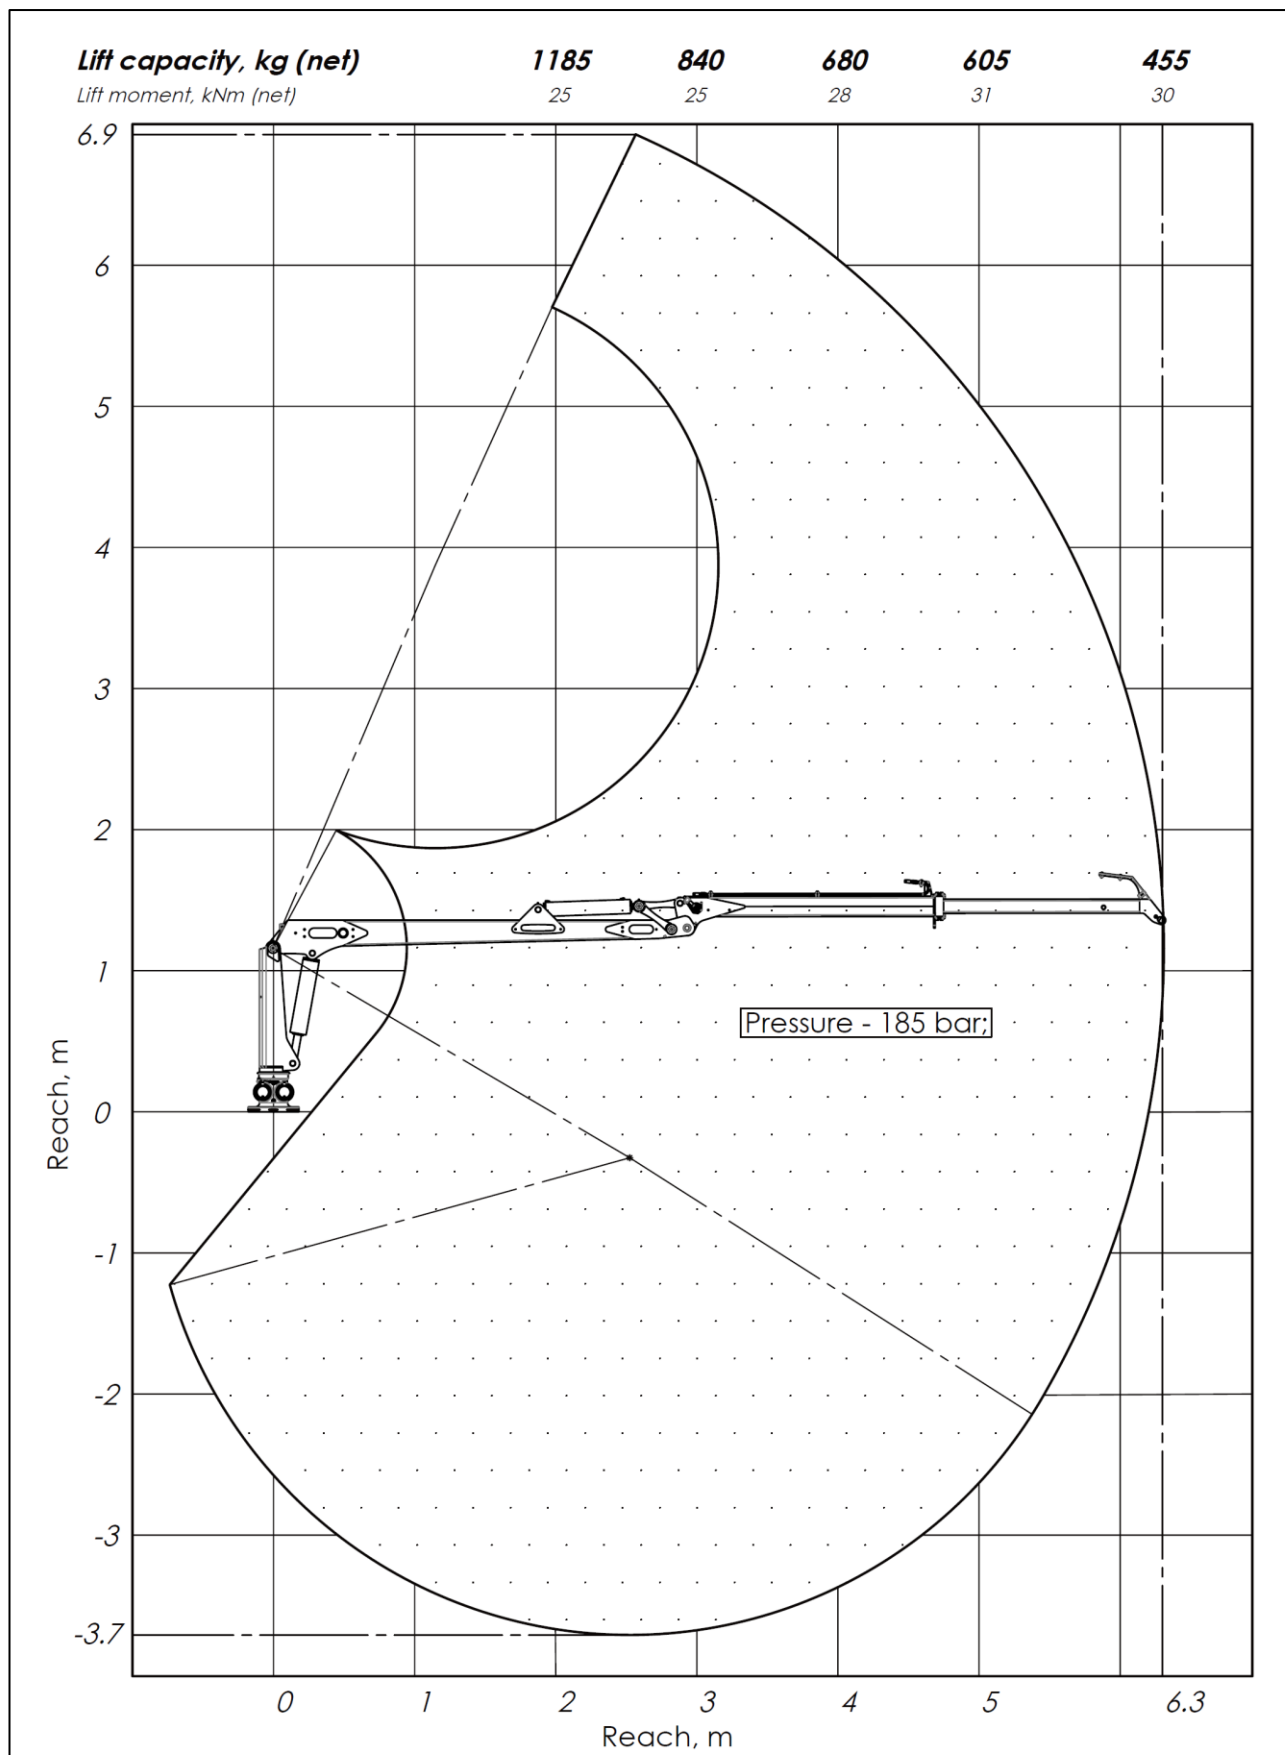
Index

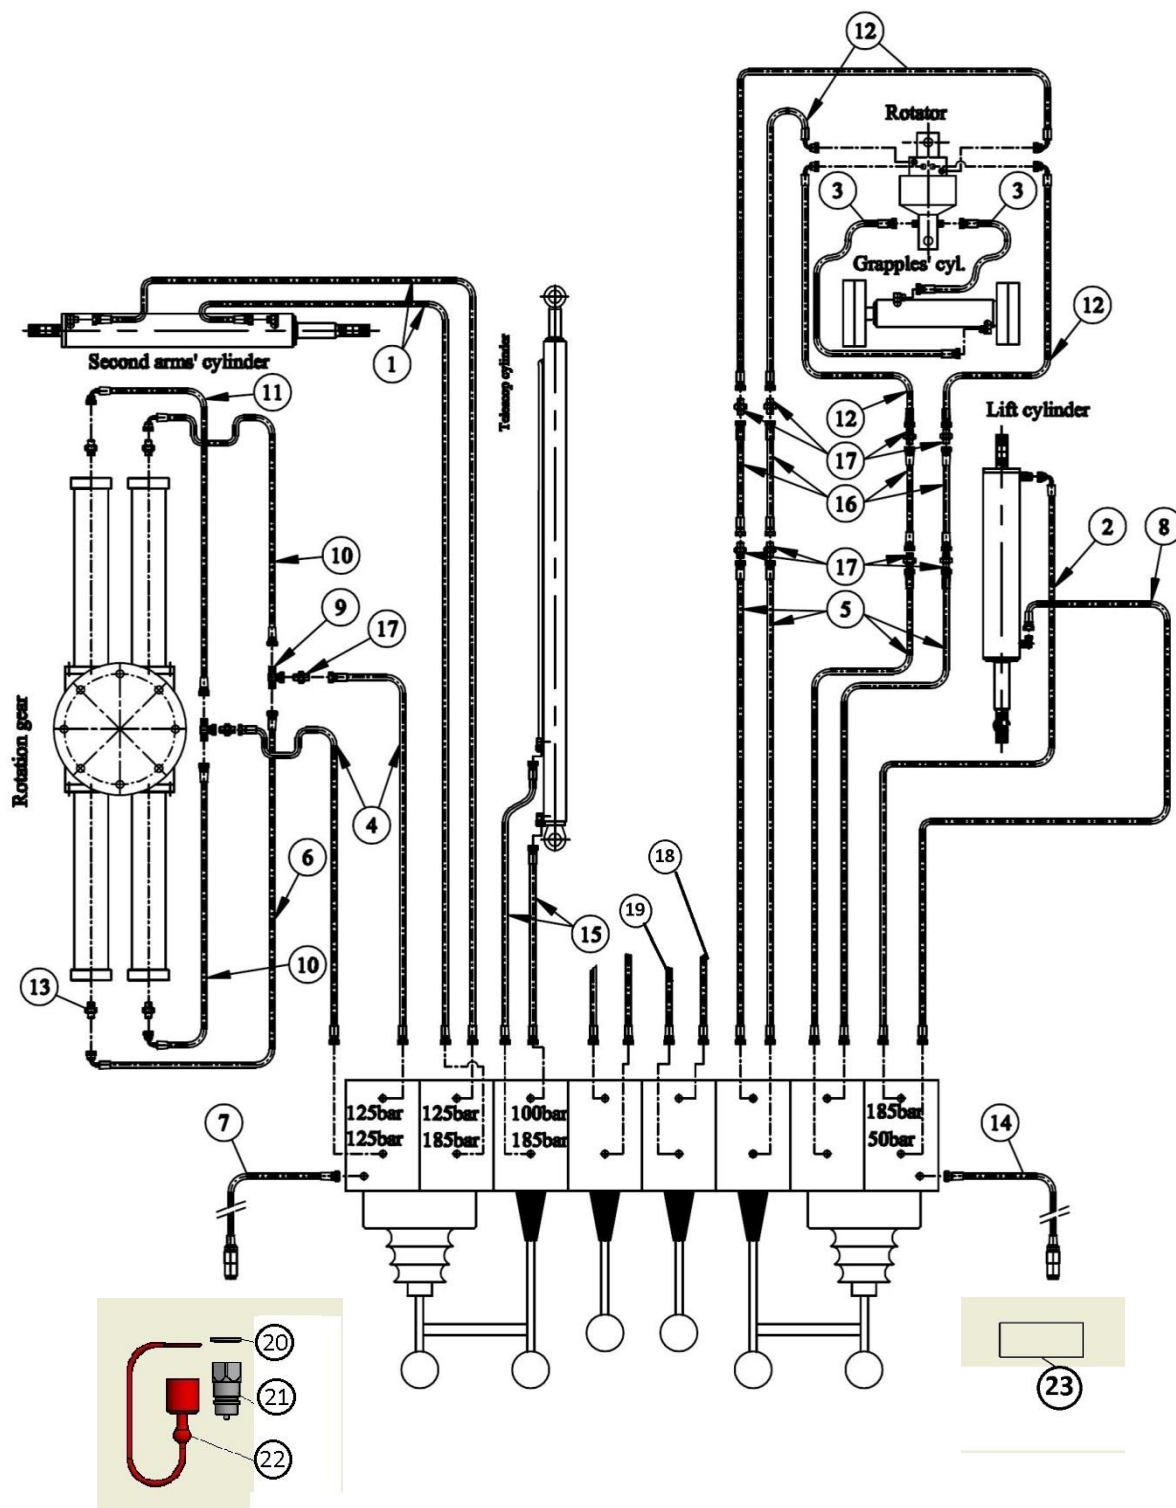
(N) Dimensjoner	3
(GB) Dimensions	
(D) Maßskizze	
(N) Hydraulikk slanger, 2 spaks betjening.....	5
(GB) Hydraulic hoses, 2 lever control panel	
(D) Schläuhe	
(N) Hydraulikk slanger, Lett 2 spaks betjening.....	9
(GB) Hydraulic hoses, Light 2 lever control,el. On/off	
(D) Schläuhe	
(N) Generelle deler	13
(GB) Common parts	
(D) Gemeinsame Teile	
(N) Svinghus komplett	16
(GB) Slew mechanism assy	
(D) Schwenkwerk kpl.	
(N) Betjeningsventil, 2 spaks betjening	18
(GB) Control valve equipment, , 2 lever control panel	
(D) Steuerventil	
(N) Betjeningsventil, Lett 2 spaks betjening	19
(GB) Control valve equipment, , Light 2 lever control,el. On/off	
(D) Steuerventil	
(N) Gripekloledd	25
(GB) Grapple link	
(D) Gelenk mit Pendelbremse	
(N) Rotator,.....	26
(GB) Rotator	
(D) Rotator	
(N) Gripeklo komplett	27
(GB) Grapple complete	
(D) Greifer	
(N) 3-pkt. ramme med hydrauliske lavett støttebein	29
(GB) 3-point frame with fold-down stab.legs	
(D) 3-pkt. Gestell mit hydr. Klappfüße	

CRANE IGLAND 36-63S**Overall dimensions**

<u>GENERAL INFORMATION</u>	
Outreach, m	6.3
Telescopic boom	Yes
Linkage system	Yes
Lift capacity at max. reach (net), kg	455
Lift capacity at 4 m (net), kg	680
Lift torque, kNm, bto	35,4
Working pressure, bar	185
Oil flow, l/min	30-40
Slewing torque, kNm	8.5
Slewing angle, °	360°
Weight (with grapple/rotator/valve block), kg	620

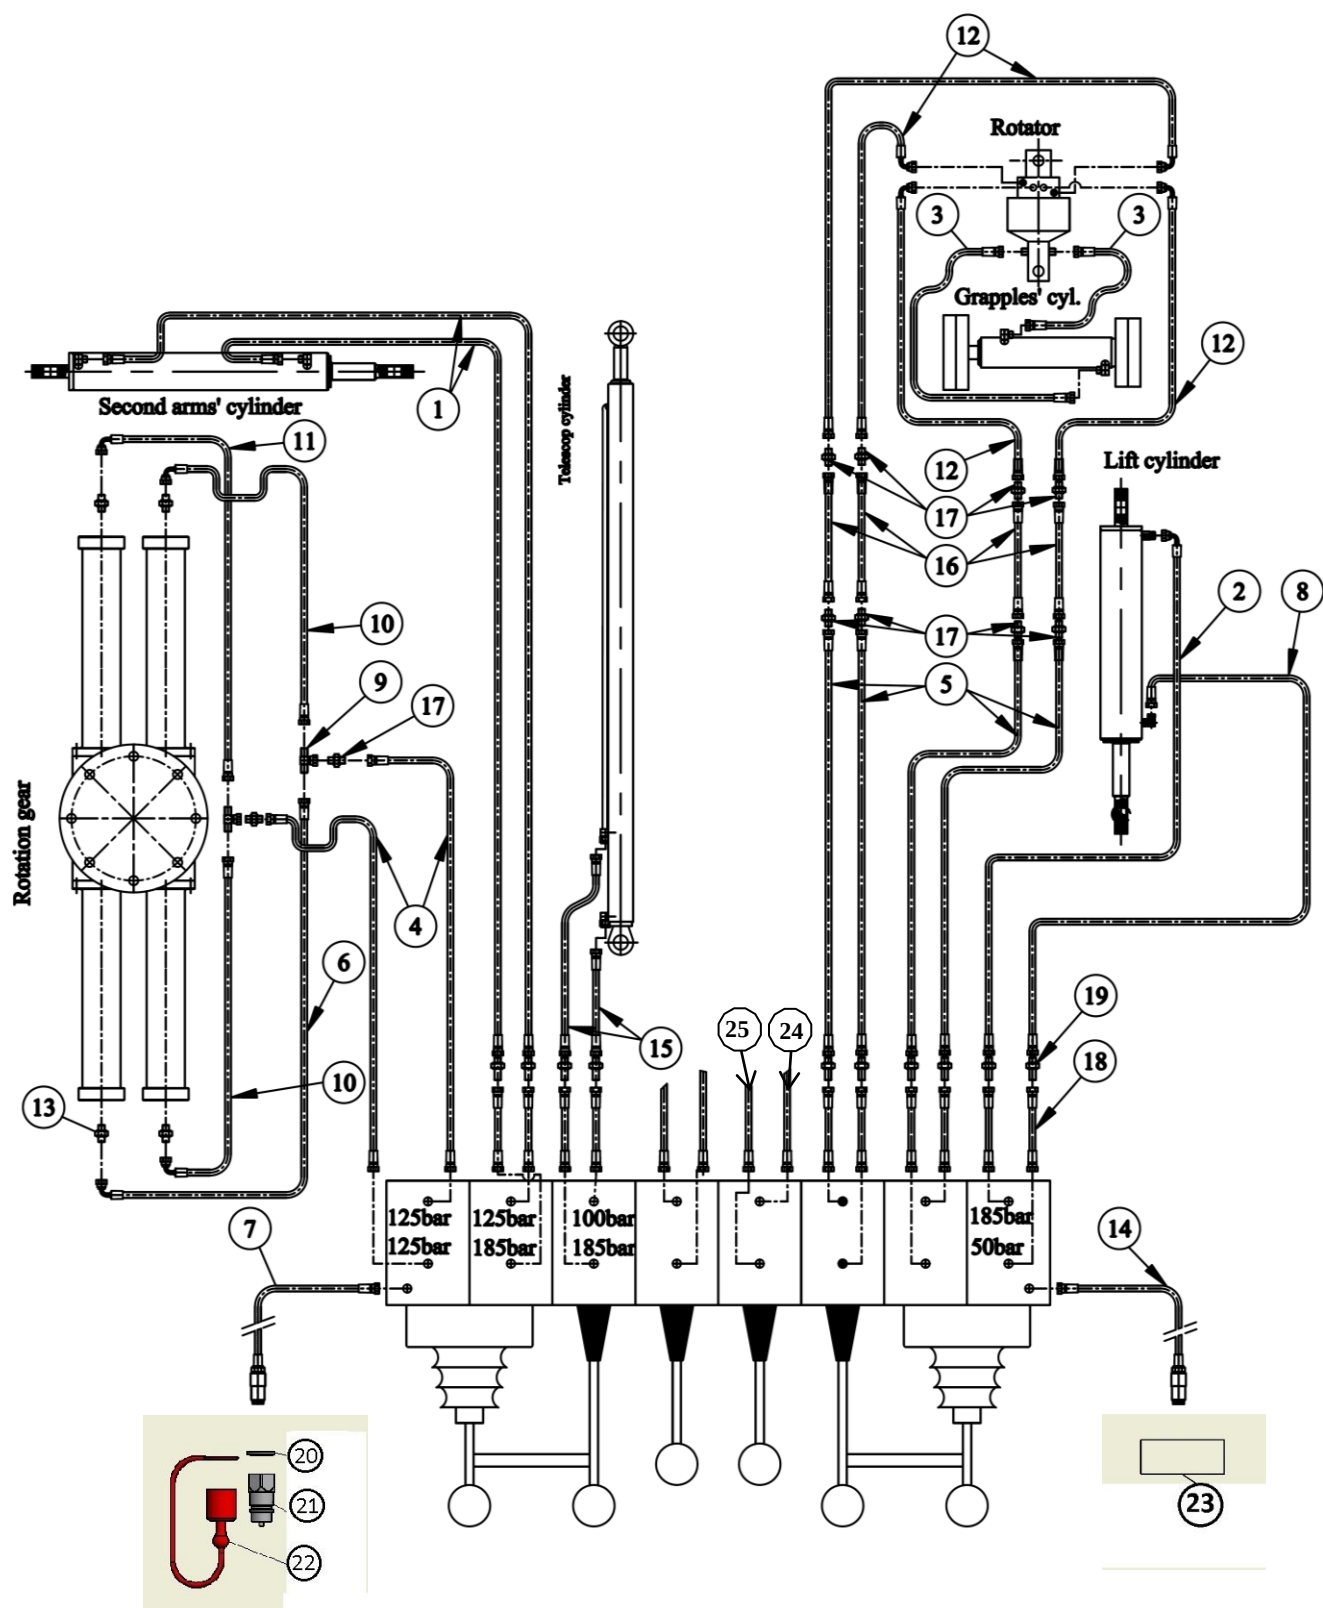
Lift capacity / reach diagram – 36-63S



Hydraulic diagram 36-63S, 2 lever control panel**Early version, SN -> 0771503**

Hydraulic components

Pos.	Qty.	Description	Mod. Dim.	Art. No.
1.	2	Hydraulic Hose	IR ^{3/8} -5970(^{3/8})-IR ^{3/8} 90°	431551
2.	1	Hydraulic Hose	IR ^{3/8} -3700(^{3/8})-IR ^{3/8} 90°	431544
3.	2	Hydraulic Hose	^{3/8} IR-550- ^{3/8} 90° Compact	431583
4.	2	Hydraulic Hose	IR ^{3/8} -2500(^{3/8})-IR ^{3/8} 90°	431549
5.	4	Hydraulic Hose	IR ^{3/8} -6960(^{3/8})-IR ^{3/8}	431552
6.	1	Tube	456010	431584
7.	1	Hydraulic Hose	IR ^{1/2} -3000(^{1/2})-FC ^{1/2}	431585
8.	1	Hydraulic Hose	IR ^{3/8} -4150(^{3/8})-IR ^{3/8} 90°	431545
9.	2	Adaptor	i-v-i 12L M18x15	431586
10.	2	Tube	456011	431587
11.	1	Tube	456009	431588
12.	4	Hydraulic Hose	IR ^{3/8} -2800(^{3/8})-IR ^{3/8} 90°	431553
13.	4	Adaptor	M18x1.5x3/8 Banjo	431589
14.	1	Hydraulic Hose	IR ^{1/2} -3000(^{1/2})-FC ^{1/2} (with valve)	431590
15.	2	Hydraulic Hose	IR ^{3/8} -6980(^{3/8})-IR ^{3/8}	431543
16.	2	Tube	-	431602
17.	10	Adaptor	URM18x1.5xUR ^{3/8}	431591
18.	2	Hydraulic hose, for support leg, up		058581
19.	2	Hydraulic hose, for support leg, down		058577
20.	1	Seal		047143
21.	1	Quick coupling		047032
22.	1	Cap for quick coupling		047033
23.	1	Non pressorized fittings, set		049451

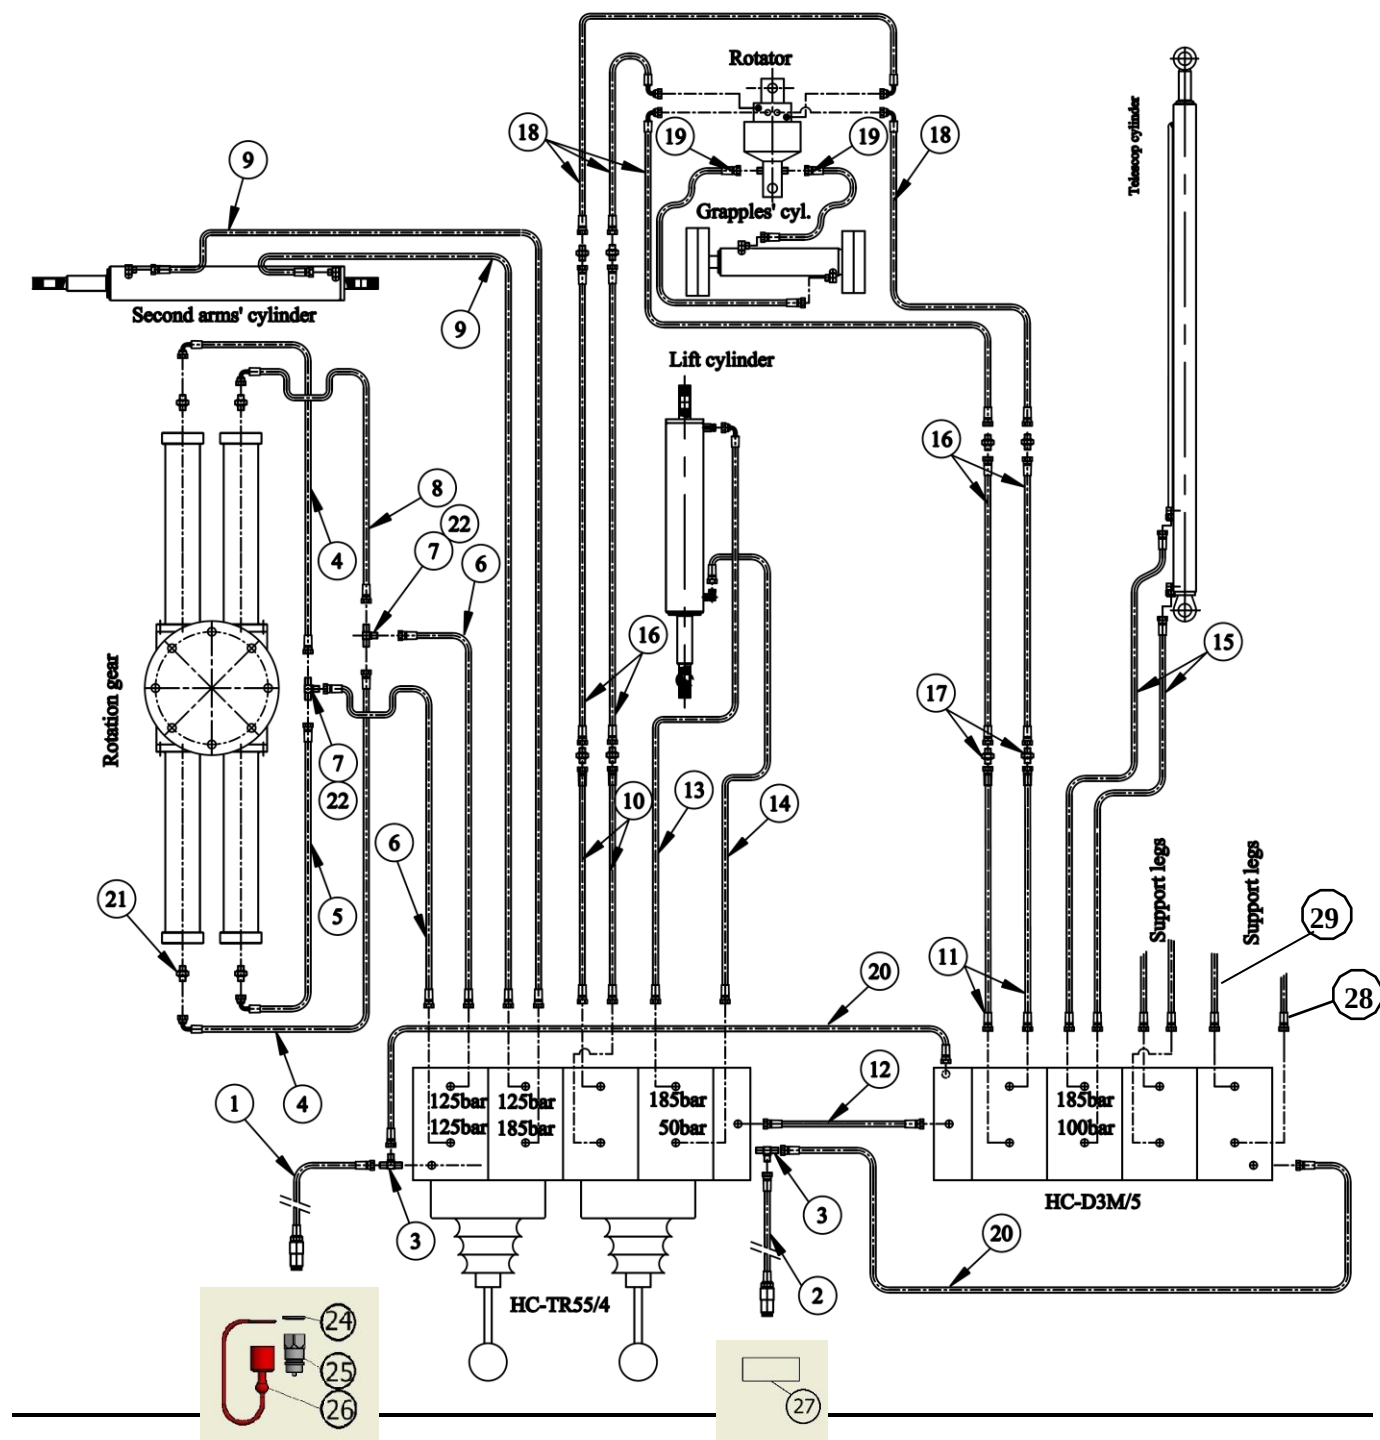
Hydraulic diagram 36-63S, 2 lever control panel**Current version SN 0871510 ->**

Hydraulic components

Pos.	Qty.	Description	Mod. Dim.	Art. No.
1.	2	Hydraulic Hose	IR ^{3/8} -3420(^{3/8})-IR ^{3/8} 90° Compact	431595
2.	1	Hydraulic Hose	IR ^{3/8} -1600(^{3/8})-IR ^{3/8} 90° Compact	431607
3.	2	Hydraulic Hose	^{3/8} 'IR-550- ^{3/8} ' 90° Compact	431583
4.	2	Hydraulic Hose	IR ^{3/8} -2500(^{3/8})-IR ^{3/8} 90°	431549
5.	4	Hydraulic Hose	IR ^{3/8} -4410(^{3/8})-IR ^{3/8}	431596
6.	1	Tube	456010	431584
7.	1	Hydraulic Hose	IR ^{1/2} -3000(^{1/2})-FC ^{1/2}	431585
8.	1	Hydraulic Hose	IR ^{3/8} -1350(^{3/8})-IR ^{3/8} 90° Compact	431600
9.	2	Adaptor	i-v-i 12L M18x15	431586
10.	2	Tube	456011	431587
11.	1	Tube	456009	431588
12.	4	Hydraulic Hose	IR ^{3/8} -2800(^{3/8})-IR ^{3/8} 90°	431553
13.	4	Adaptor	M18x1.5x3/8 Banjo	431589
14.	1	Hydraulic Hose	IR ^{1/2} -1600(^{1/2})-FC ^{1/2} (with valve)	431608
15.	2	Hydraulic Hose	IR ^{3/8} -4430(^{3/8})-IR ^{3/8} 90°	431609
16.	4	Tube	-	431602
17.	10	Adaptor	URM18x1.5xUR ^{3/8}	431591
18.	10	Hydraulic Hose	IR ^{3/8} -2550(^{3/8})-IR ^{3/8}	431597
19.	10	Adaptor	UR ^{3/8} -UR ^{3/8} (long)	431598
20.	1	Seal		047143
21.	1	Quick coupling		047032
22.	1	Cap for quick coupling		047033
23.	1	Non pressorized fittings, set		049451
24.	2	Hydraulic hose, for support leg, up		058581
25.	2	Hydraulic hose, for support leg, down		058577

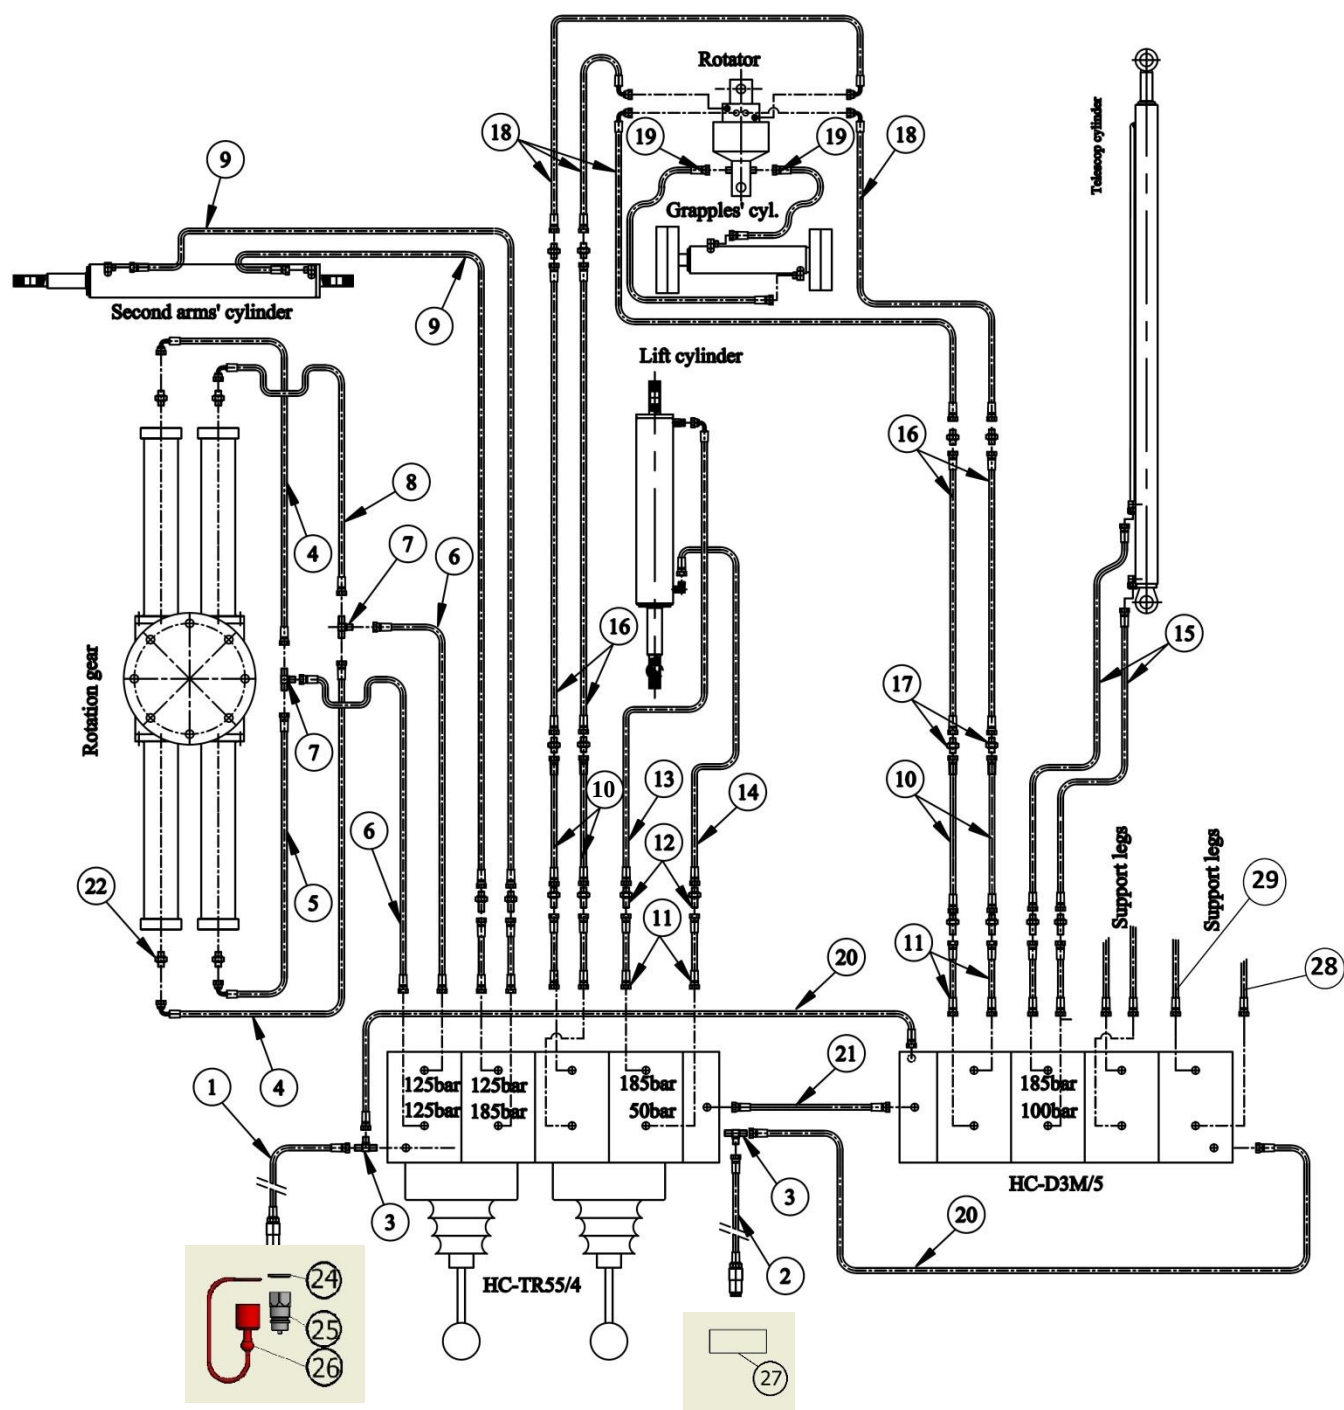
Hydraulic diagram 36-63S, Light 2 lever control, el. on/off, OPTION

Early version SN ->1281704



Hydraulic components

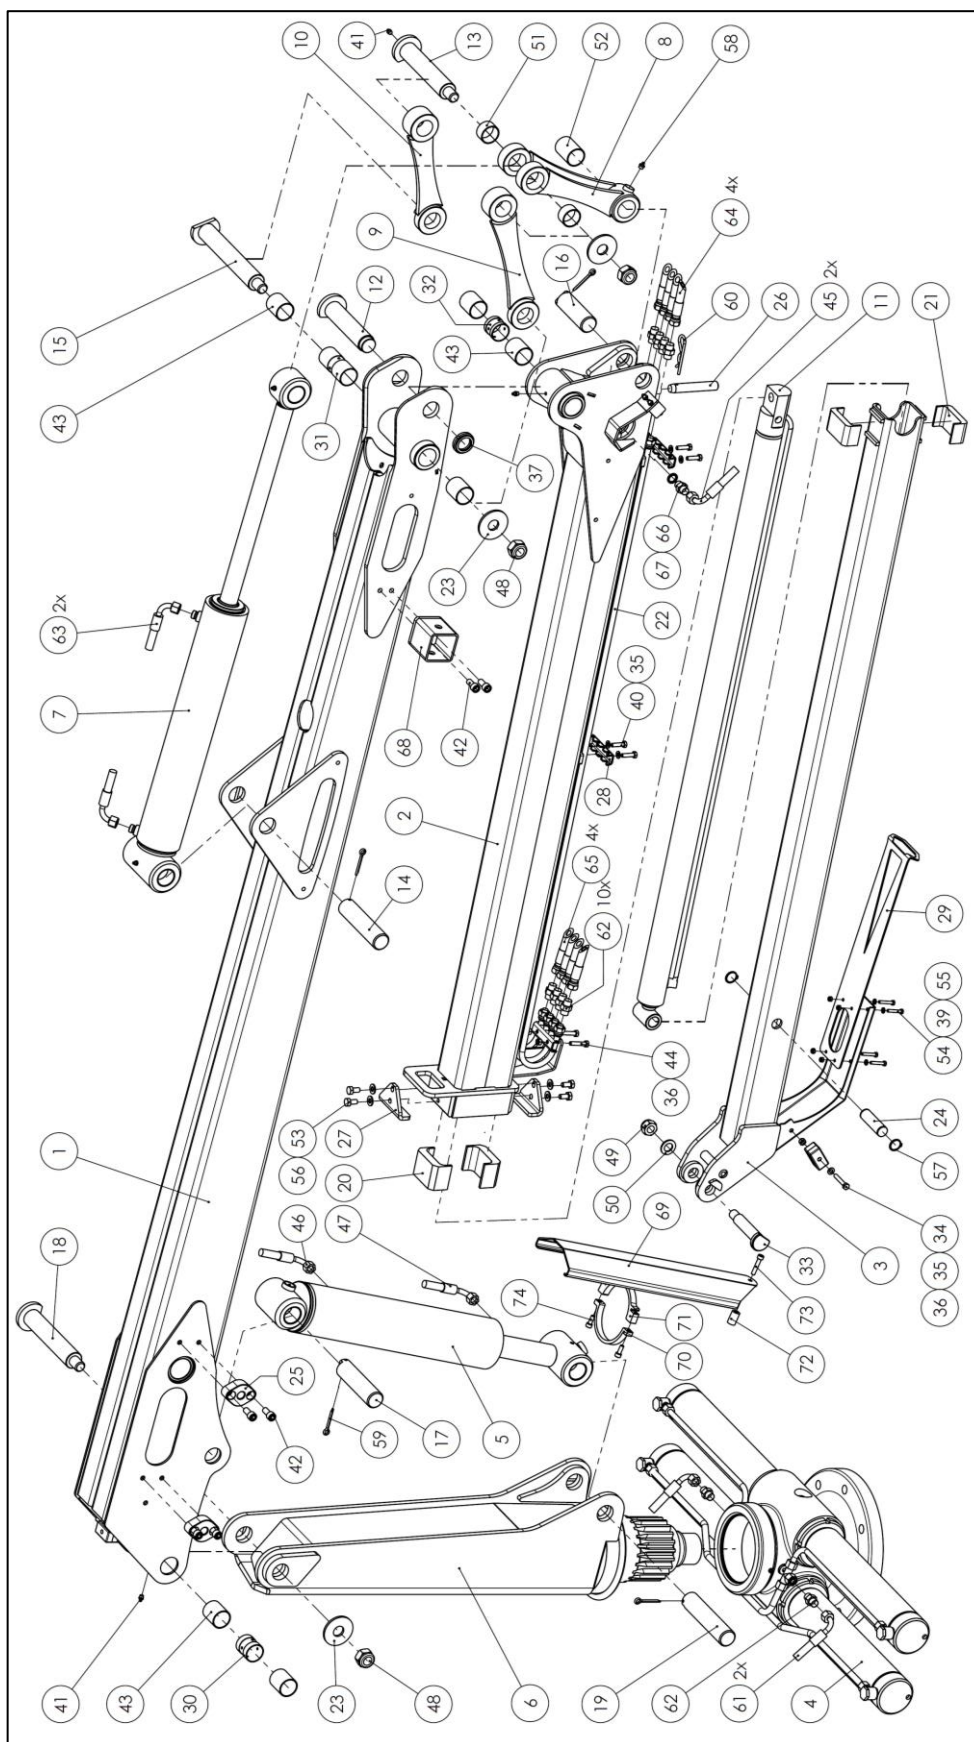
Pos.	Qty.	Description	Mod. Dim.	Art. No.
1.	1	Hydraulic Hose	IR ¹ / ₂ -1600(³ / ₈)-IR ¹ / ₂ FC	431592
2.	1	Hydraulic Hose	IR ¹ / ₂ -1600(³ / ₈)-IR ¹ / ₂ FC (with valve)	431593
3.	2	Adaptor	UR ³ / ₈ -IR ³ / ₈ -UR ³ / ₈	431594
4.	2	Tube	456011	431587
5.	1	Tube	456010	431584
6.	2	Hydraulic Hose	IR ³ / ₈ -2500(³ / ₈)-IR ³ / ₈ 90°	431549
7.	2	Adaptor	i-v-i 12L M18x15	431586
8.	1	Tube	456009	431588
9.	2	Hydraulic Hose	IR ³ / ₈ -5970(³ / ₈)-IR ³ / ₈ 90° (compact)	431612
10.	2	Hydraulic Hose	IR ³ / ₈ -6960(³ / ₈)-IR ³ / ₈	431552
11.	2	Hydraulic Hose	IR ³ / ₈ -5510(³ / ₈)-IR ³ / ₈	431613
12.	1	Hydraulic Hose	IR ³ / ₈ -2550(³ / ₈)-IR ³ / ₈	431597
13.	1	Hydraulic Hose	IR ³ / ₈ -370(³ / ₈)-IR ³ / ₈ 90° (compact)	431614
14.	1	Hydraulic Hose	IR ³ / ₈ -4150(³ / ₈)-IR ³ / ₈ 90° (compact)	431615
15.	2	Hydraulic Hose	IR ³ / ₈ -5530(³ / ₈)-IR ³ / ₈ 90°	431601
16.	4	Tube	BA0196	431602
17.	10	Adaptor	UR ³ / ₈ -UR ³ / ₈	431603
18.	4	Hydraulic Hose	IR ³ / ₈ -2800(³ / ₈)-IR ³ / ₈ 90°	431553
19.	2	Hydraulic Hose	IR ³ / ₈ -550(³ / ₈)-IR ³ / ₈ 90° (compact)	431604
20.	2	Hydraulic Hose	IR ³ / ₈ -2700(³ / ₈)-IR ³ / ₈ 90°	431605
21.	4	Adaptor	M18x1.5x3/8 Banjo	431589
22.	2	Adaptor	URM18x1.5xUR ³ / ₈	431591
23.	-	-	-	-
24.	1	Seal		047143
25.	1	Quick coupling		047032
26.	1	Cap for quick coupling		047033
27.	1	Non pressorized fittings, set		049451
28.	2	Hydraulic hose, for support leg, 1,65m		058916
29.	2	Hydraulic hose, for support leg, 1,85m		058918

Hydraulic diagram 36-63S, Light 2 lever control, el. on/off, OPTION**Current version, SN 1291704 ->**

Hydraulic components

Pos.	Qty.	Description	Mod. Dim.	Drawing No.	Art. No.
1.	1	Hydraulic Hose	IR ^{1/2} -1600(^{3/8})-IR ^{1/2} FC		431592
2.	1	Hydraulic Hose	IR ^{1/2} -1600(^{3/8})-IR ^{1/2} FC (with valve)		431593
3.	2	Adaptor	UR ^{3/8} -IR ^{3/8} -UR ^{3/8}		431594
4.	2	Tube	456011		431587
5.	1	Tube	456010		431584
6.	2	Hydraulic Hose	IR ^{3/8} -2500(^{3/8})-IR ^{3/8} 90°		431549
7.	2	Adaptor	i-v-i 12L M18x15		431586
8.	1	Tube	456009		431588
9.	2	Hydraulic Hose	IR ^{3/8} -3420(^{3/8})-IR ^{3/8} 90° (compact)		431595
10.	4	Hydraulic Hose	IR ^{3/8} -4410(^{3/8})-IR ^{3/8}		431596
11.	6	Hydraulic Hose	IR ^{3/8} -2550(^{3/8})-IR ^{3/8}		431597
12.	10	Adaptor	UR ^{3/8} -UR ^{3/8} (long)		431598
13.	1	Hydraulic Hose	IR ^{3/8} -900(^{3/8})-IR ^{3/8} 90° (compact)		431599
14.	1	Hydraulic Hose	IR ^{3/8} -1350(^{3/8})-IR ^{3/8} 90° (compact)		431600
15.	2	Hydraulic Hose	IR ^{3/8} -5530(^{3/8})-IR ^{3/8} 90°		431601
16.	4	Tube	BA0196		431602
17.	13	Adaptor	UR ^{3/8} -UR ^{3/8}		431603
18.	4	Hydraulic Hose	IR ^{3/8} -2800(^{3/8})-IR ^{3/8} 90°		431553
19.	2	Hydraulic Hose	IR ^{3/8} -550(^{3/8})-IR ^{3/8} 90° (compact)		431604
20.	2	Hydraulic Hose	IR ^{3/8} -2700(^{3/8})-IR ^{3/8} 90°		431605
21.	1	Hydraulic Hose	IR ^{3/8} -2550(^{3/8})-IR ^{3/8} 90°		431606
22.	4	Adaptor	M18x1.5x3/8 Banjo		431589
23.	2	Adaptor	URM18x1.5xUR ^{3/8}		431591
24.	1	Seal			047143
25.	1	Quick coupling			047032
26.	1	Cap for quick coupling			047033
27.	1	Non pressorized fittings, set			049451
28.	2	Hydraulic hose, for support leg, 1,65m			058916
29.	2	Hydraulic hose, for support leg, 1,85m			058918

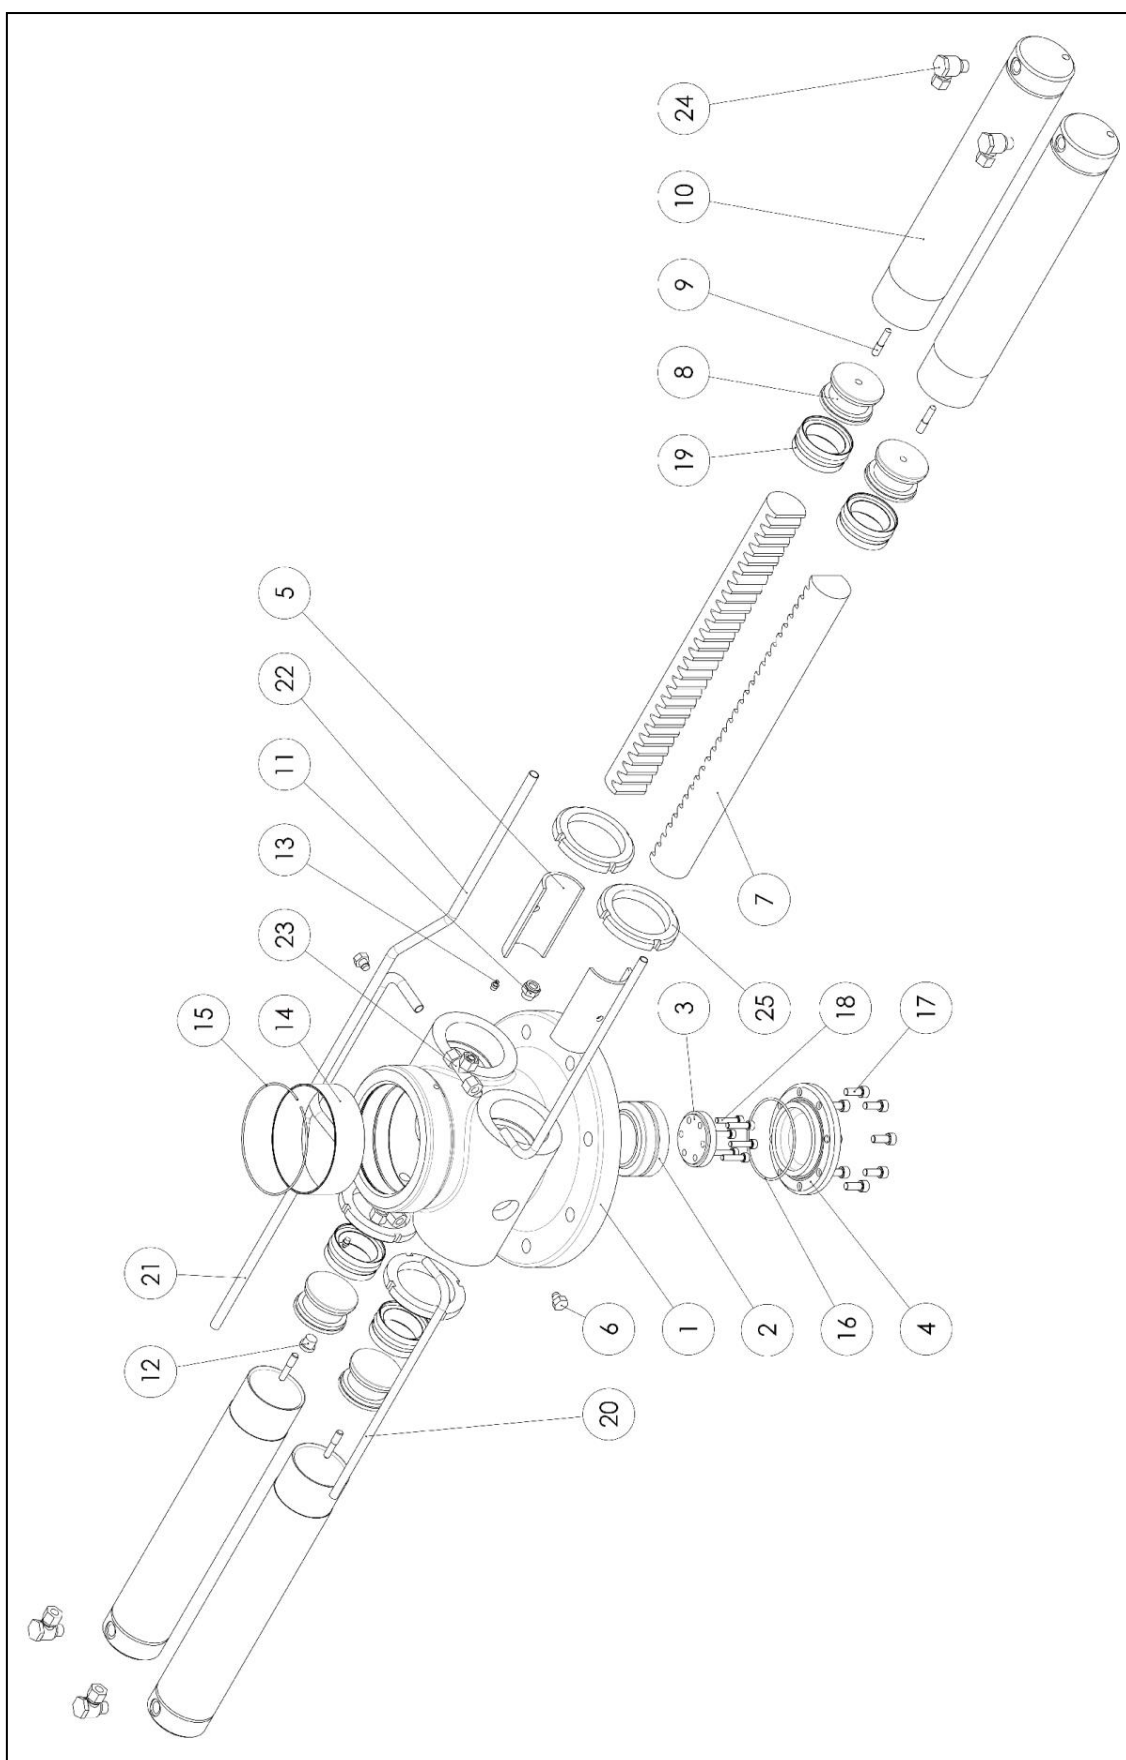
CRANE 36-63S



Spare part list for crane 36-63S

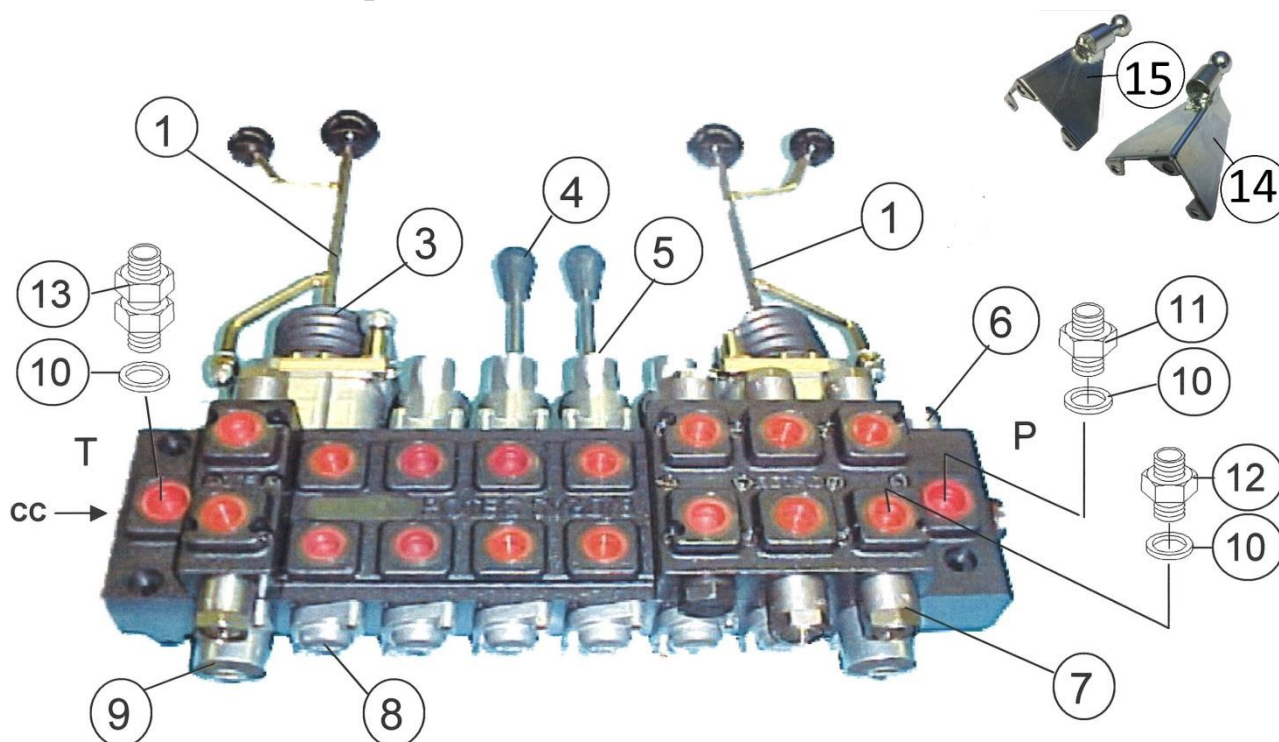
Pos.	Qty.	Description	Mod. Dim.	Art. No.
1	1	Lift arm	-	431510
2	1	Jib arm	-	431511
3	1	Telescope arm (inside)	-	431512
4	1	Rotation gear	38-6-4x80	431513
-		Rotation gear, cpl.w. crane support (4, 6)		430801
5	1	Lift cylinder	115/100x50-415-647	431514
-	1	Repair kit, Lift cylinder		431515
6	1	Crane support	-	431516
7	1	Jib cylinder	100/90x40-488-715	431517
-	1	Repair kit, Jib cylinder		431518
8	1	Central link	NB46693	431519
9	1	Side link (flat bushings)	NB46696	431520
10	1	Side link (milled bushings)	NB46685	431521
11	1	Telescop. cylinder	60/50x30	431522
-		Repair kit, telescope cyl.		431523
12	1	Pin	Ø40, L=186	431524
13	1	Pin	Ø40, L=238.5	431525
14	1	Pin	Ø40h9, L=173	431526
15	1	Pin	Ø40, L=288.5	431527
16	1	Pin	Ø40h9, L=129	431528
17	1	Pin	Ø40h9, L=163	431529
18	1	Pin	Ø40, L=249.5	431530
19	1	Pin	Ø40h9, L=188	431531
20	2	Slide block (outside)	91x45x60	431420
21	2	Slide block (inside)	88x50x37	431421
22	4	Hydraulic tube	-	431532
23	3	Washer	Ø26/72x5	431533
24	1	Pin	Ø25 h9, L=86	431534
25	2	Flange		431535
26	1	Fixation pin	Ø20 h11; L=120	431536
27	2	Plate	-	431537
28	3	Plate	-	431538
29	1	Plate	-	431539
30	1	Distancer bush.	Ø43.8/40.5; L=49;	431422
31	1	Distancer bush.	Ø43.8/40.5; L=104;	431423
32	1	Distancer bushing	Ø43.8/40.5; L=38;	431424
33	1	Pin	Ø25; L=140;	431540
34	2	Screw	M6S M8x50	012767
35	8	Washer	BRB 8,4x16	012194
36	4	Locking nut	M8 LK	012198
37	1	Self locking nut	M35x1.5	431541

38	4	Screw	M6S M6x50	012687
39	8	Locking nut	M6 LK	012118
40	4	Screw	M6S M8x30	012763
41	4	Grease nipple	M8	431542
42	6	Screw	MC6S 12x25 12.9	015907
43	6	Bushing	40/44x50	431428
44	2	Screw	M6S M8x40	012765
45	2	Hydraulic hose		431543
46	1	Hydraulic hose		431544
47	1	Hydraulic hose		431545
48	3	Locking nut	M24 LK	012510
49	1	Locking nut	M20 LK	431546
50	1	Washer	Ø21	012434
51	2	Bushing	40/44x25	430337
52	1	Bushing	40/44x60	430335
53	4	Screw	M6S M10x20	012800
54	4	Screw	M6S M6x35	012684
55	4	Washer	BRB 6,4x12	012114
56	4	Washer	Ø10	012235
57	2	Circlip SGA25	Ø25x1.2	026716
58	1	Grease nipple	M10	431547
59	4	Split pin	Ø5x50	021055
60	1	Spring pin	Ø5x20	431548
61	2	Hydraulic hose		431549
62	4	Adaptor		431550
63	2	Hydraulic hose		431551
64	4	Hydraulic hose		431552
65	4	Hydraulic hose		431553
66	2	Adaptor		431550
67	2	Tredo washer		431555
68	1	Winch block holder	□70x70	431556
69	1	Cover	-	431557
70	1	Flange	-	
71	1	Flange	-	
72	1	Bushing	-	
73	1	Screw	M8x40	
74	2	Screw	M8x20	

SLEW MOTOR 38-6-4x80

Spare part list for slew motor 38-6-4x80

Pos.	Qty.	Description	Mod. Dim.	Art. No.
1	1	Slew motor housing	38-6-4x80	431560
2	1	Bearing GE70ES	Ø105/70x50	431561
3	1	Shaft's lock cover	Ø80, t=15	431562
4	1	Housing cover	Ø156, L=27	431563
5	2	Half glide insert	Ø70/60x136	431564
6	2	Fix. screw	HEX19mm, L=23	431565
7	2	Rack bar 15-38xx	Ø60, L=554 (360°)	431566
8	4	Plunger	Ø80	431567
9	4	Plunger pin	-	431568
10	4	Cylinder	90x80-360Gr	431569
-	-	Repair kit for cyl		431570
11	1	Oil level check plug	G ³ / ₈ "	431571
12	2	WSTI plug	G ³ / ₈ "	431572
13	2	Grease nipple	M8 rak	431542
14	1	Bushing	150/155x50	431573
15	1	Lock ring	Ø155.5x2.5	431574
16	1	O-Ring seal	Ø109.5x3.0	431575
17	8	Screw	MC6S 10 X 25 12.9 FZB	015887
18	6	Screw	MC6S 8 X 35 12.9	015869
19	4	Plunger seal	Ø80/60x22	431576
20	2	Hydraulic tube	Ø12x1.5	431577
21	1	Hydraulic tube	Ø12x1.5	431578
22	1	Hydraulic tube	Ø12x1.5	431579
23	2	T-adaptor	-	431580
24	4	Adaptor	³ / ₈ "UR- Ø12-90°	431581
25	4	Nut	M90x2	431582

VALVE, 2 Lever control panel

POS.	Art.Nr	Qty	Beskrivelse	Description
-	430641	1	Betjeningssentral, komplett, 2 spaks, for 36-63S	Control valve, complete, 36-63S
-	430645	1	Pakningsett for sentral	Seals-kit
-	430646	-	Plugg, lukket senter, serienippel	Adaptor for "closed center"
1	430647	2	Hovedspak, komplett med ledd	Lever
3	430649	2	Gummimansjett	Protection below
4	430650	2	Spakfeste med lav spak, kpl	Lever
5	430651	4	Gummimansjett	Protection below
6	430652	1	Hovedtrykkventil, komplett	Valve section
7	430653	7	Sjokkventil, komplett *	Valve section *
8	430654	6	Lokk	Cover
9	430655	2	Fjærkopp	Spool lock, cpl.
10	047143	18	Skive	Seal
11	048014	1	Ansats	Adaptor
12	048010	16	Overgang	Adaptor
13	090062	1	Tilbakeslagsventil	Check valve,
14	430656	1	Feste for spak/ledd, høyre	
15	430657	1	Feste for spak/ledd, venstre	

* = Riktig trykk må stilles inn ved montering

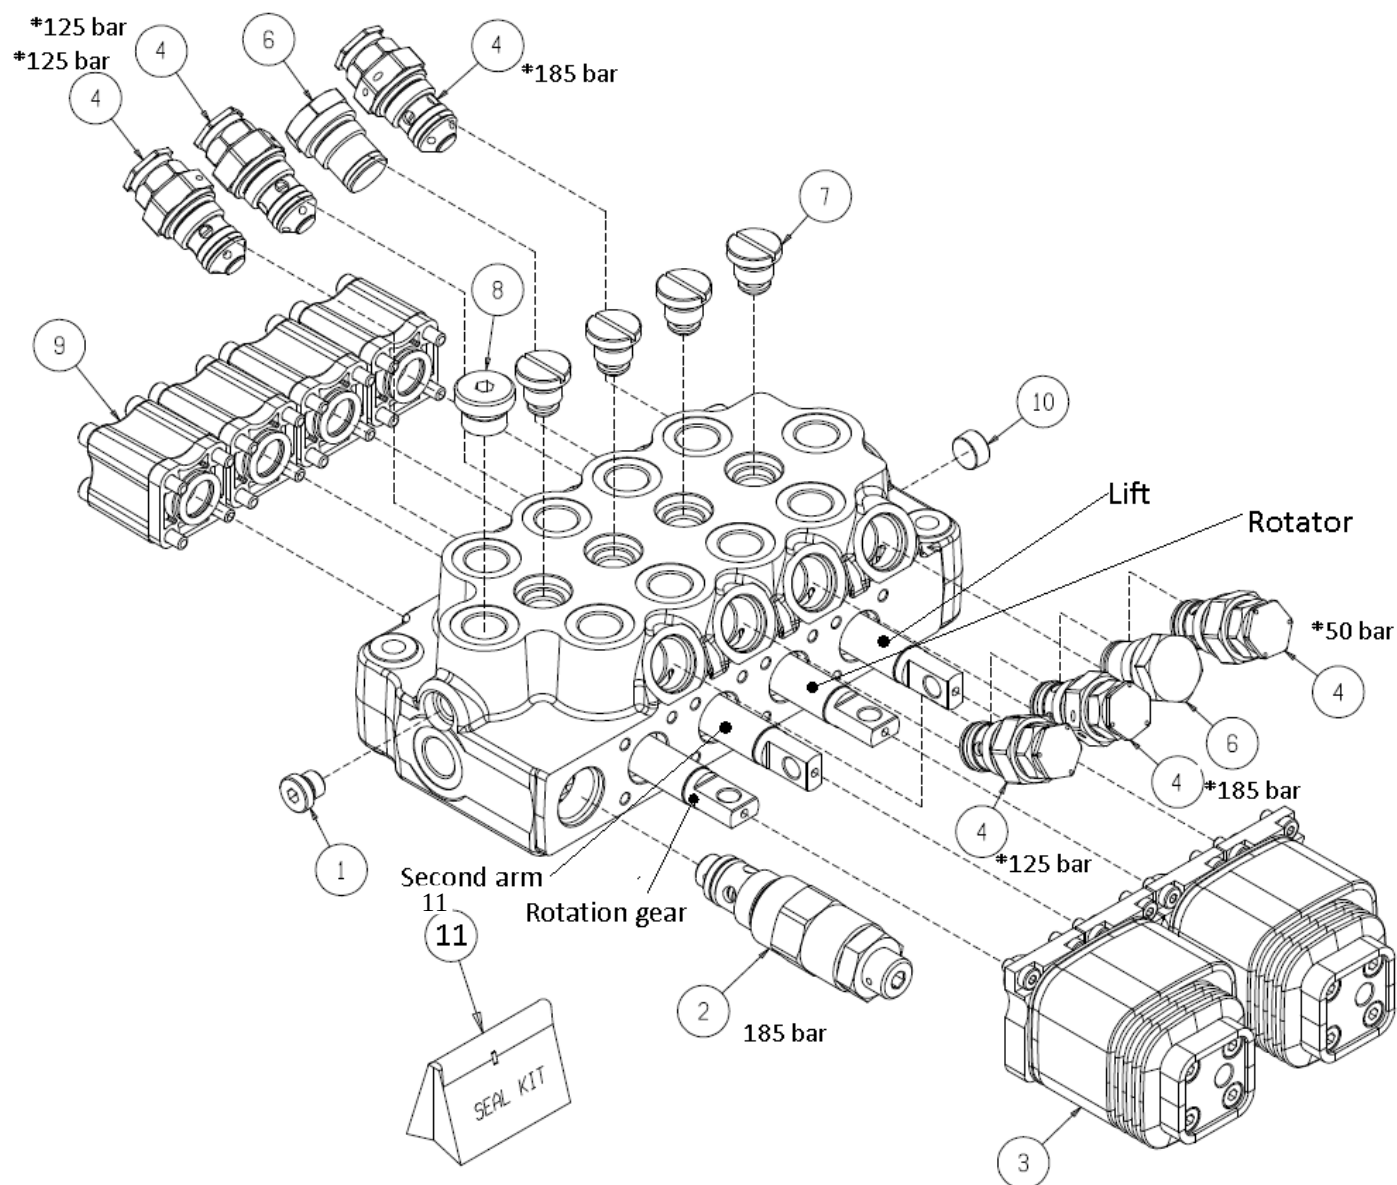
* = Adjust pressure

Ved lukket senter:

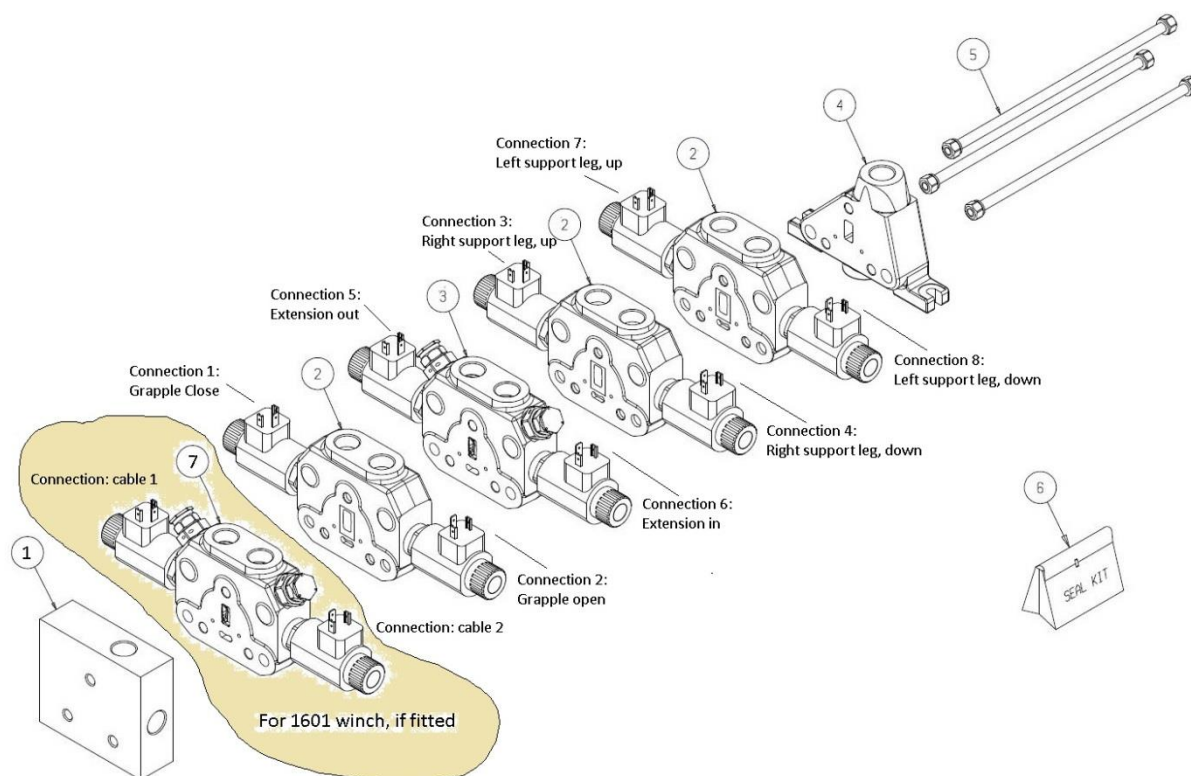
Ta ut blindplugg ved CC
Monter inn plugg for lukket senter, P/N 430646

Closed center:

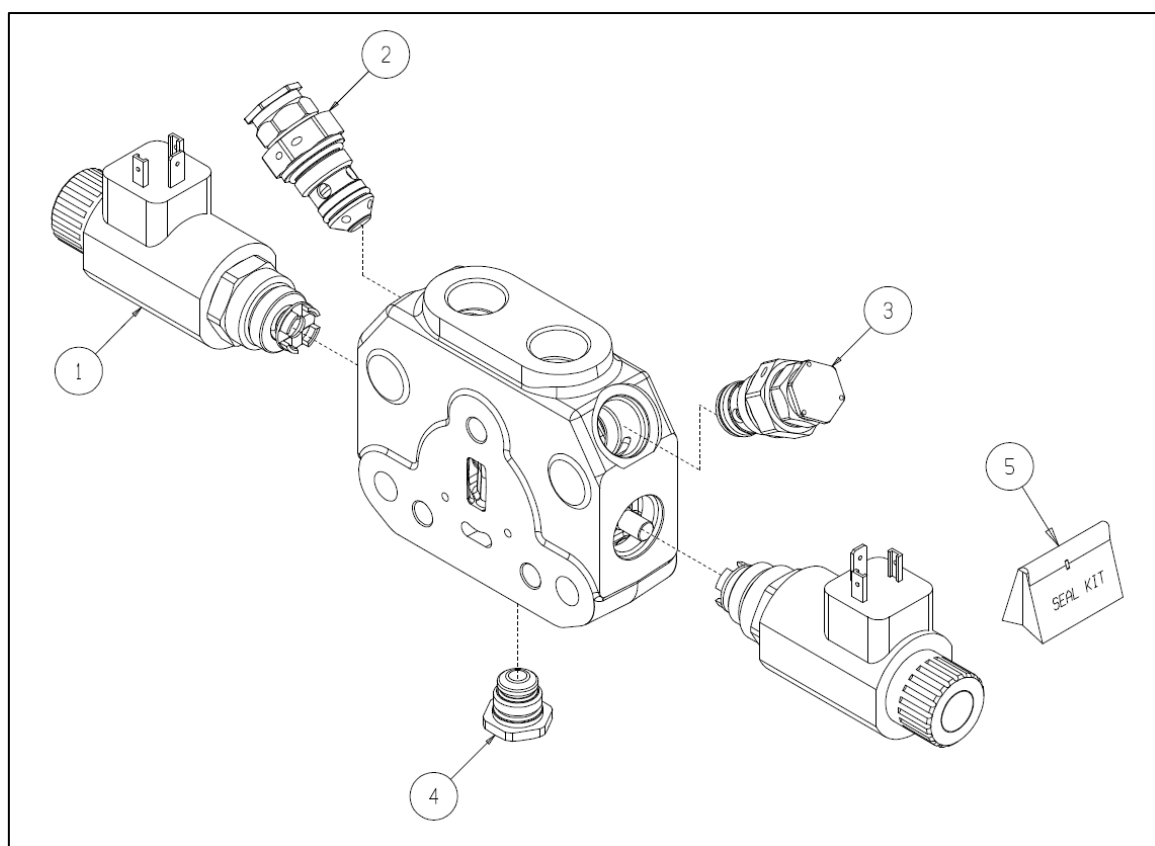
Remove plug CC
Install the closed center plug, P/N 430646

Light 2 lever control, el. on/off**Spare part list for valve HC-TR55/4 ON/OFF**

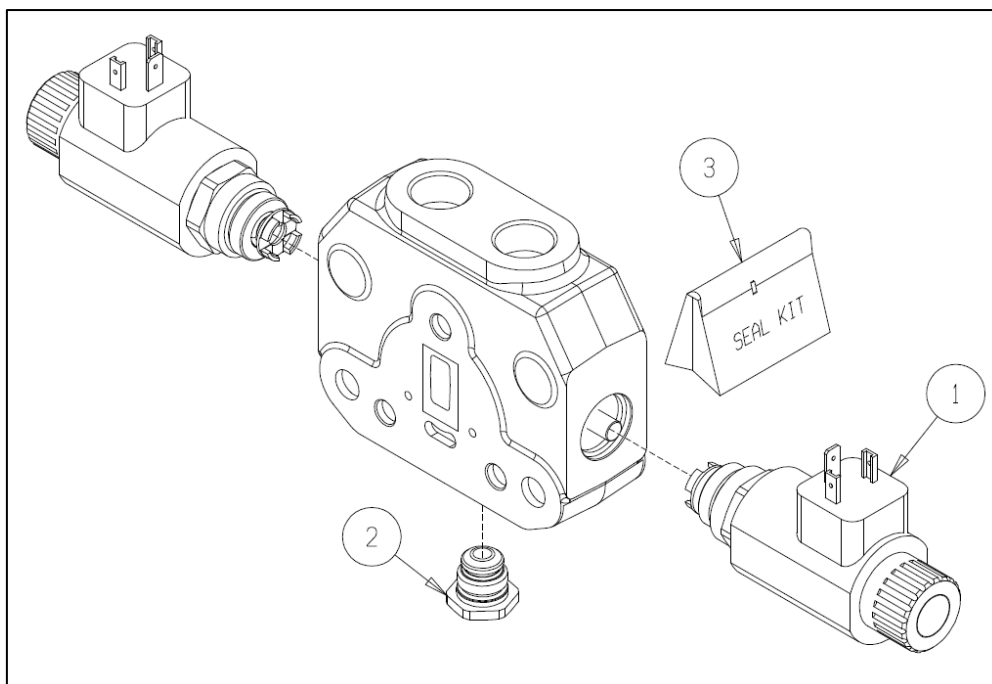
Pos.	Qty.	Description	Art. No.
1	1	Plug M10x1	431705
2	1	Shock valve 185 bar	431706
3	2	Top cover	431707
4	6	Shock valve * Adjust pressure when installing	431708
6	2	Plug	431710
7	4	Plug	431711
8	1	Plug 3/8"G DIN 3852	431712
9	4	Bottom cover	431713
10	1	Plug 1/4" G	431714
11	1	Seal kit	431715



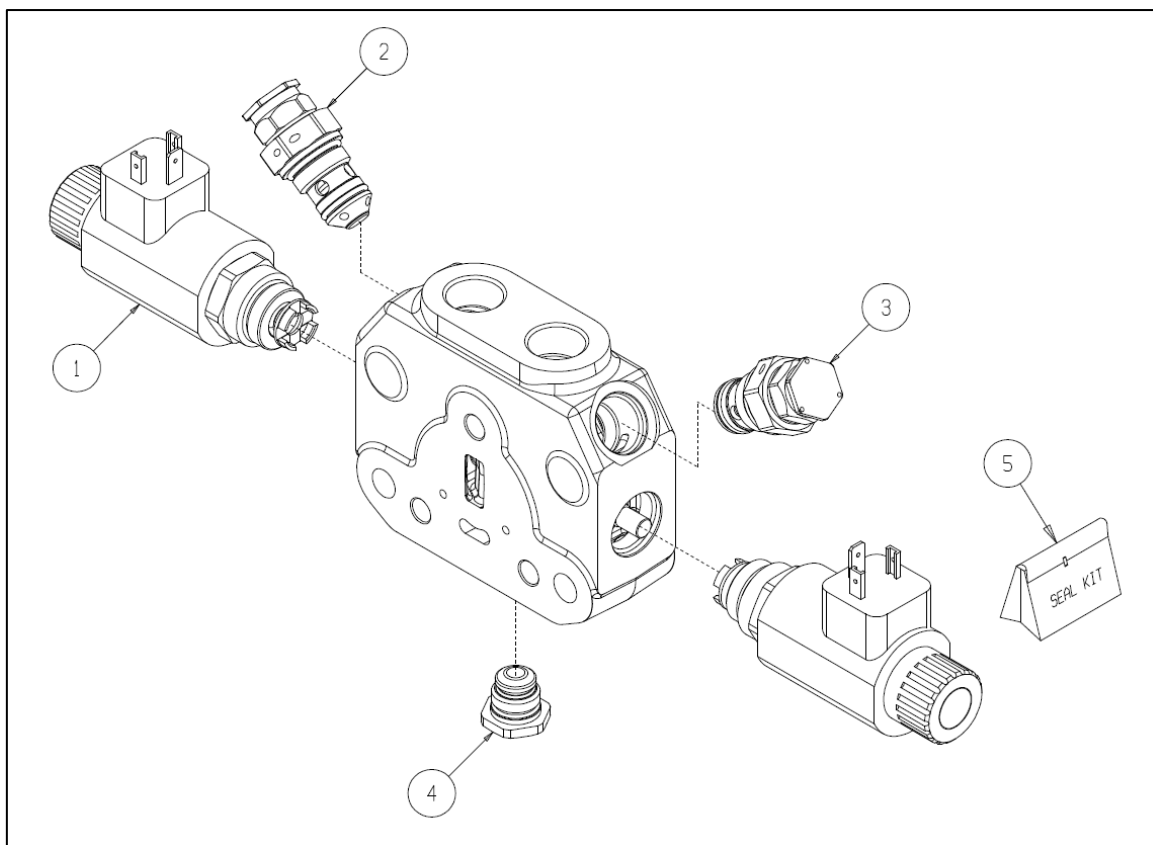
Pos.	Qty.	Description	Art. No.
1	1	End section	431716
2	3	Working section	431717
3	1	Working section	431718
4	1	End section	431719
5	3	Stud, lenght 247 mm, for 4 working section	431720
-	3	Stud, lenght 284 mm, for 5 working section	431731
6	1	Seal kit	431721
7	1	Working section. For 1601 winch, (if fitted)	430730

Working section with shock valve**Spare part list for section with shock valve**

Pos.	Qty.	Description	Art. No.
1	2	Solenoid 12v	431724
2	1	Shock valve 100 bar	431725
3	1	Shock valve 190 bar	431726
4	1	Plug	431727
5	1	Seal kit	431728

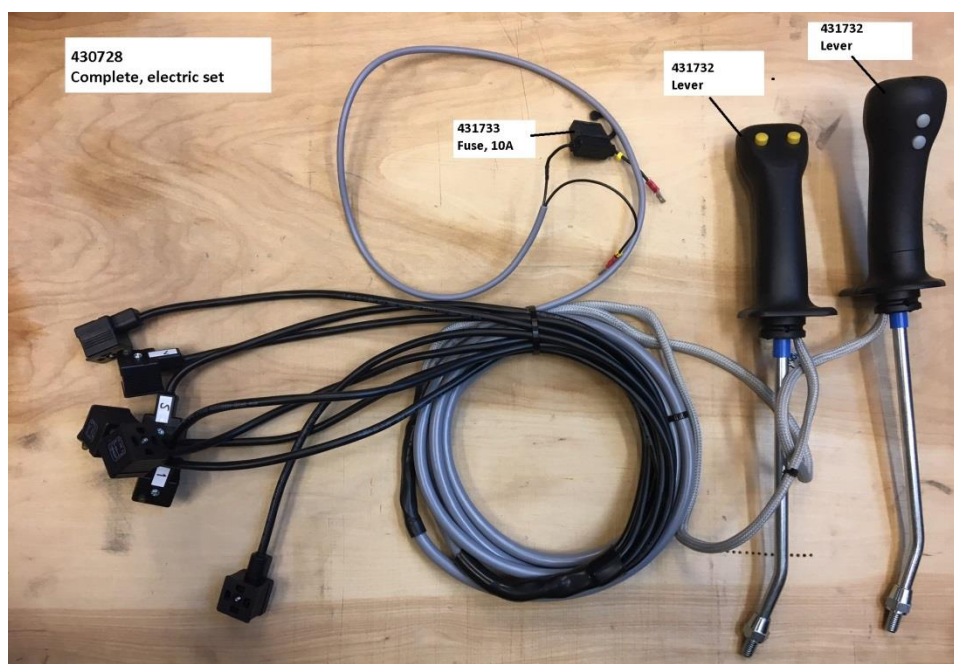
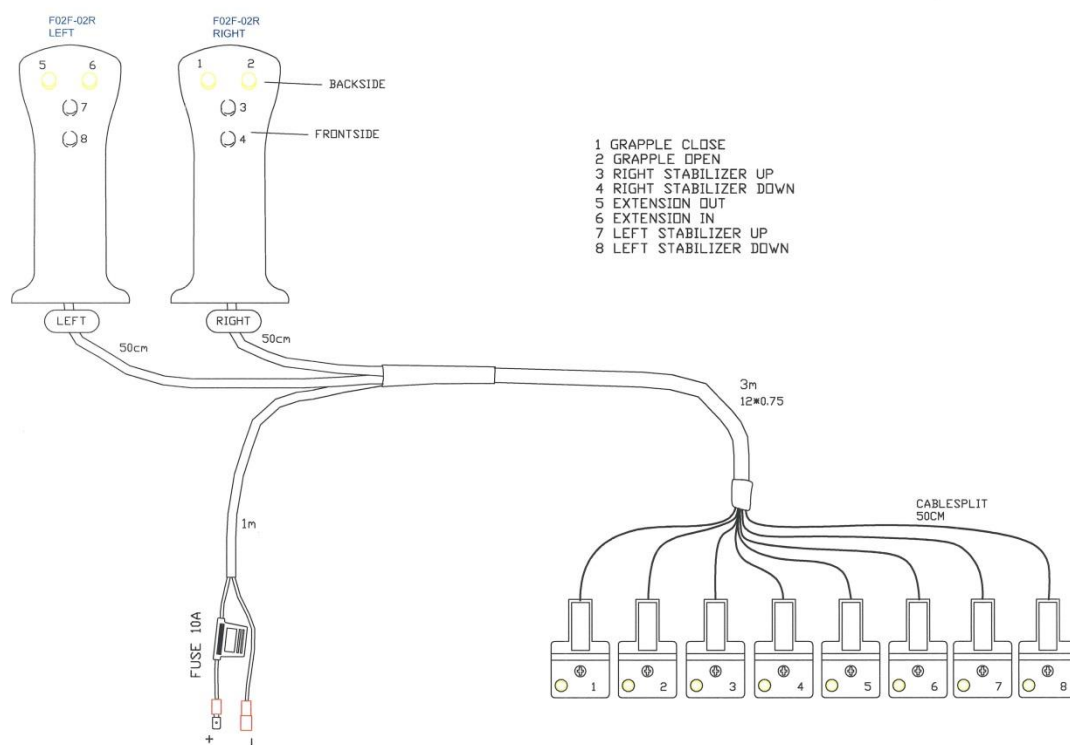
Working section without shock valve**Spare part list for section without shock valve**

Pos.	Qty.	Description	Art. No.
1	2	Solenoid 12v	431724
2	1	Plug	431727
3	1	Seal kit	431729

Working section with shock valve for 1601 winch, if fitted**Spare part list for section with shock valve, for 1601 winch, if fitted**

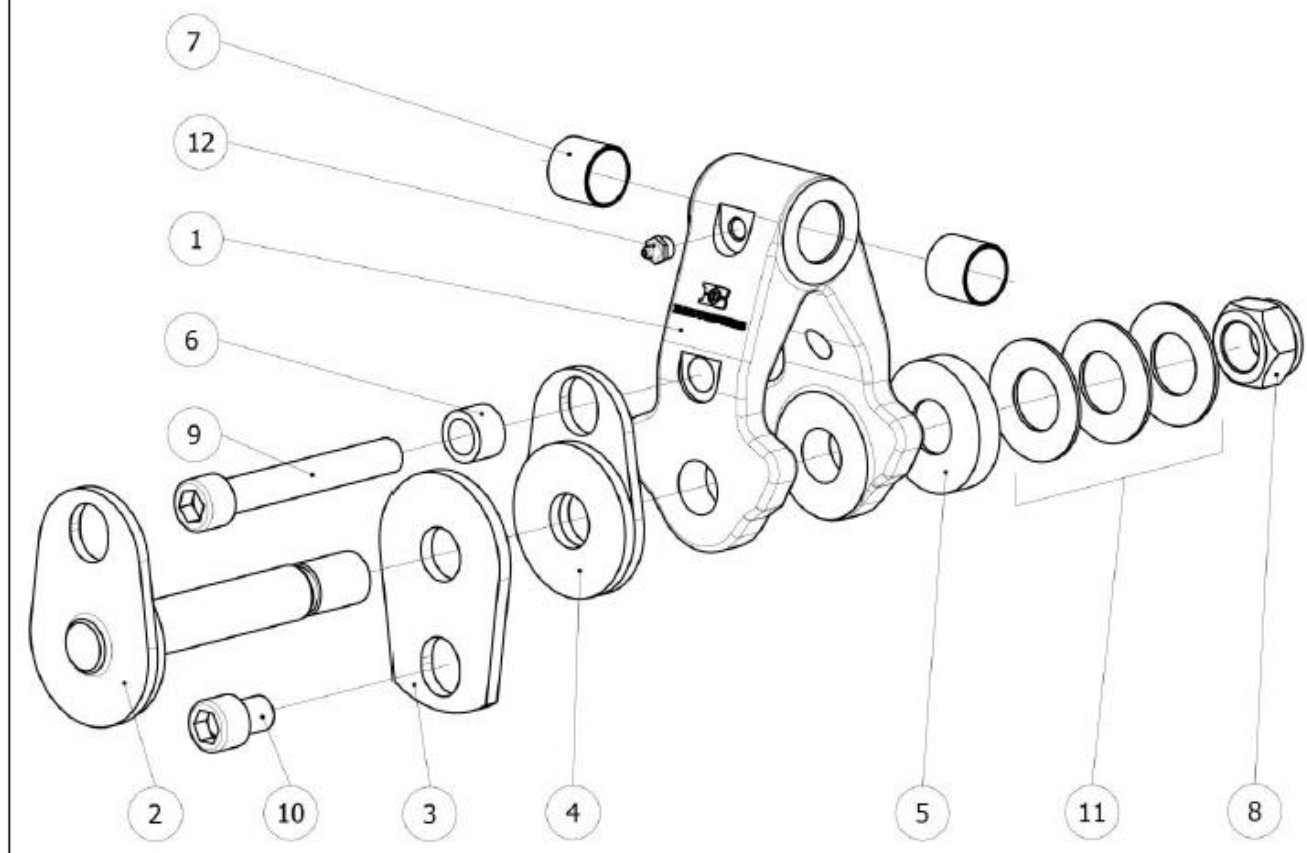
Pos.	Qty.	Description	Art. No.
1	2	Solenoid 12v	431724
2	1	Shock valve 160 bar	431730
3	1	Shock valve 160 bar	431730
4	1	Plug	431727
5	1	Seal kit	431728

Light 2 lever control, el. on/off, electrical parts

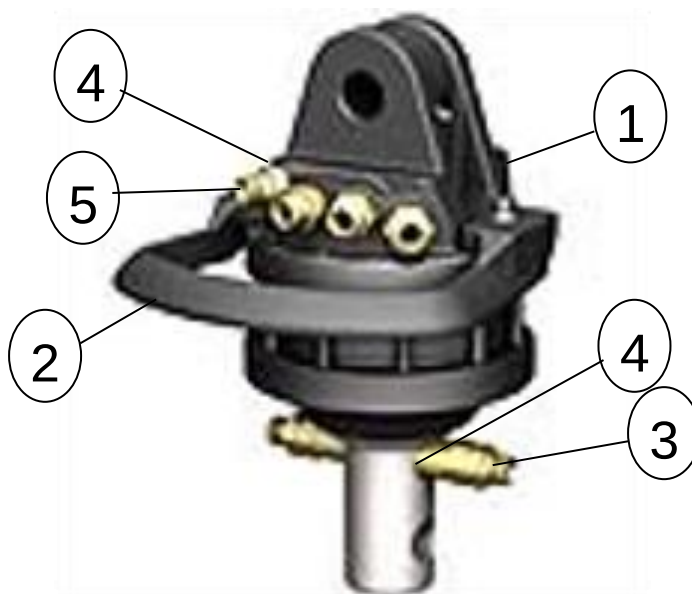


LINK BRM 10-60-01

List of parts

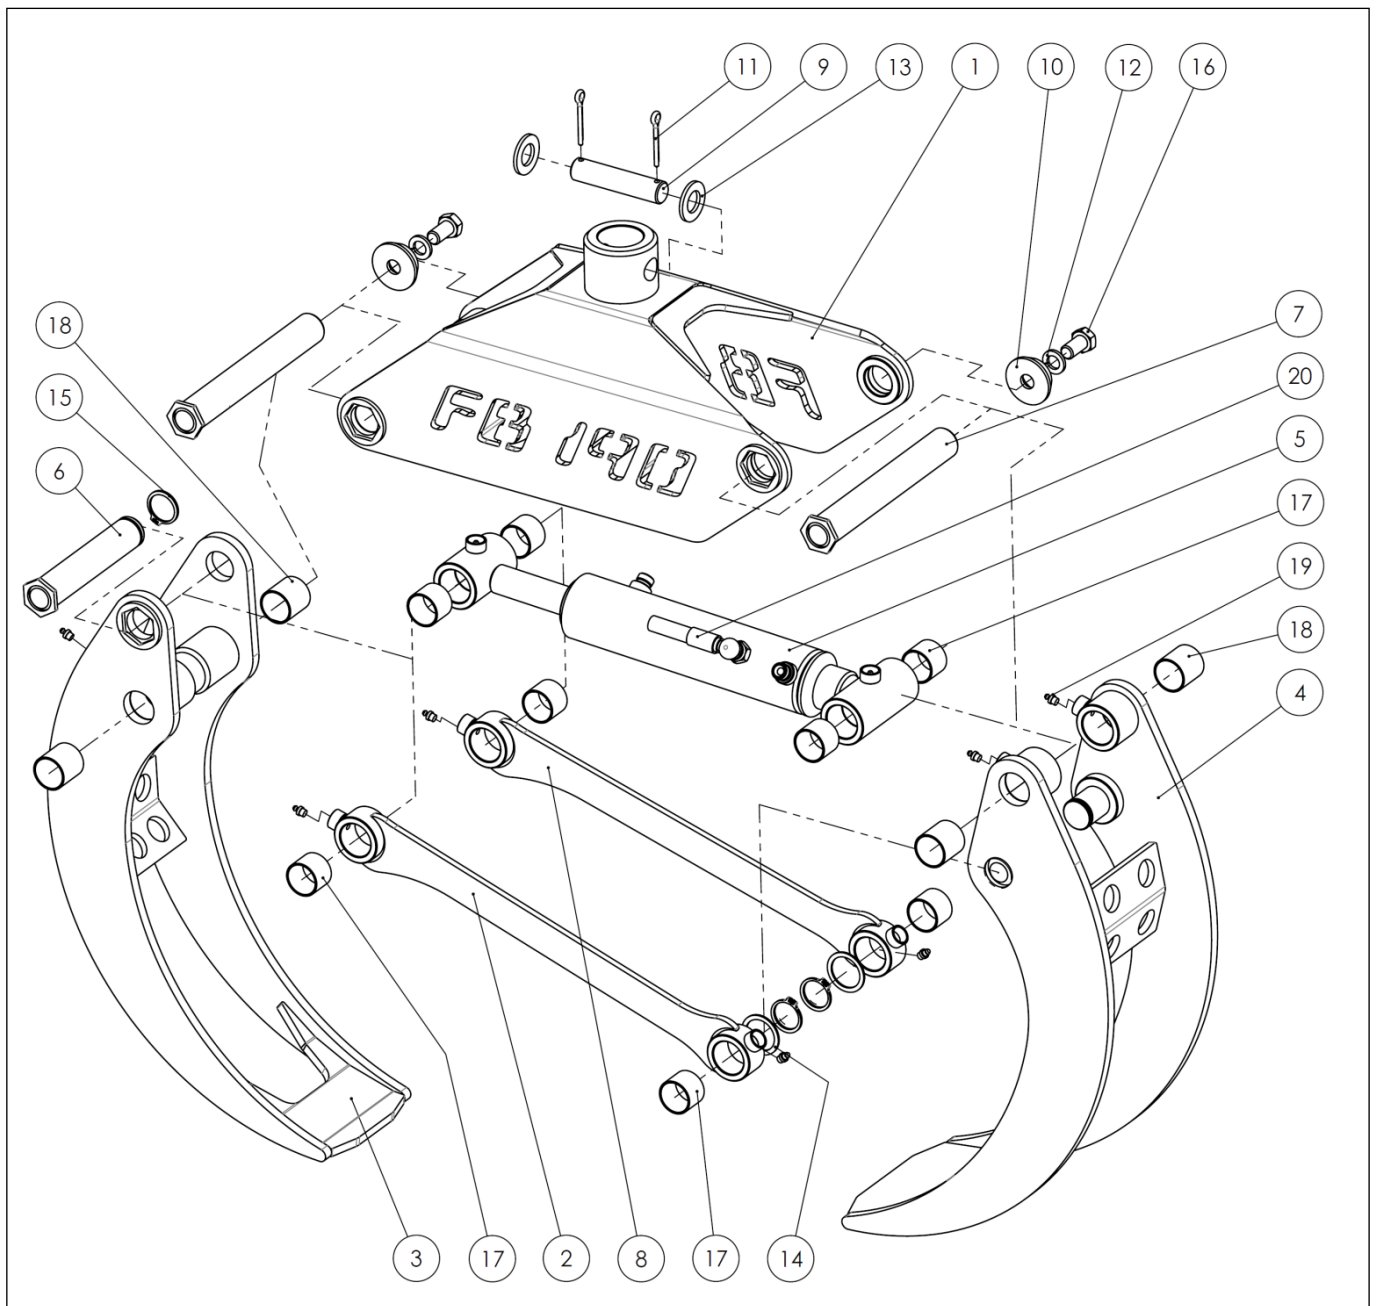
**Spare part list for LINK BRM 10-60-01**

Pos.	Qty.	Description	Art. No.
1	1	Link compl.	430480
2	1	Pin with brake	430481
3	1	Plate	430482
4	1	Plate with brake	430483
5	1	Washer	430484
6	1	Washer	430485
7	2	Bronze bushing	430486
8	1	Nut	430487
9	1	Screw	430488
10	1	Screw	430489
11	3	Disc spring	430490
12	1	Grease nipple	430491

ROTATOR GR30**Spare part list for rotator GR30**

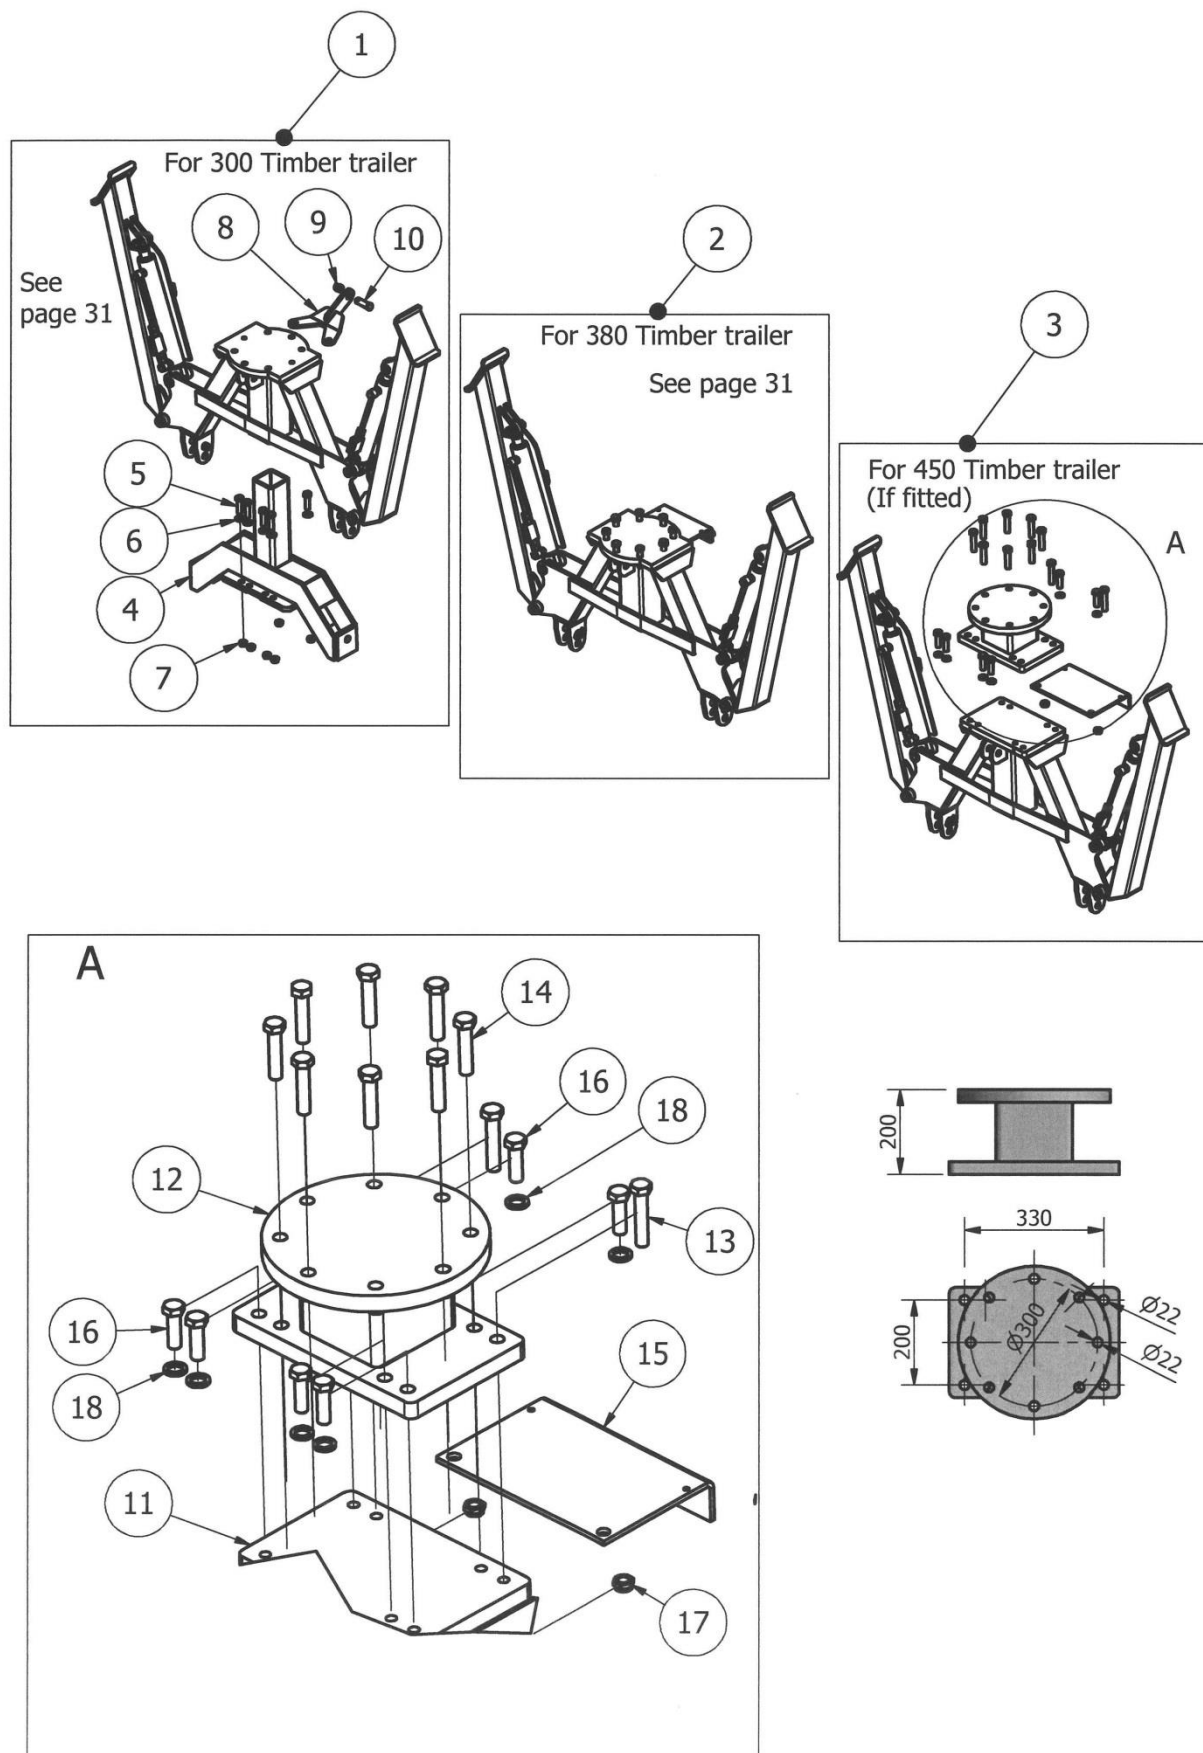
Pos.	Qty.	Description	Art. No.
1	1	Rotator GR 30, complete	430700
-	1	Repair kit	430705
2	1	Hose guard	430706
3	2	Nipple	430707
4	6	Bonded seal	047142
5	4	Nipple	048009

GRAPPLE FB 190

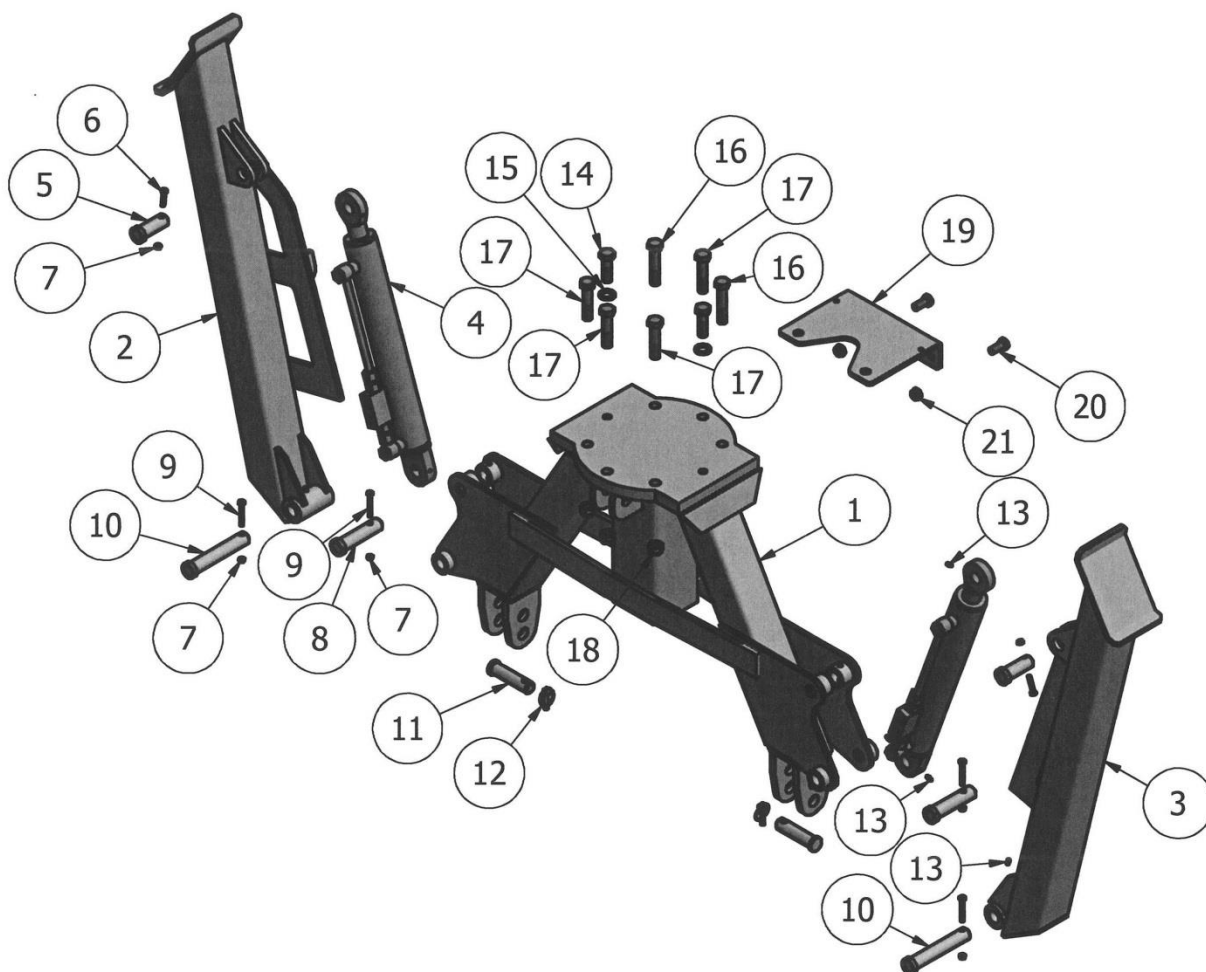


Spare part list for grapple FB190

Pos.	Qty.	Description	Mod. Dim.	Art. No.
		Grapple, complete		432210
1	1	Frame	-	430421
2	1	Link "A"	-	430422
3	1	Tong (inner)	-	430423
4	1	Tong (outer)	-	430425
5	1	Cylinder	73/63x32-188-422	430426
-	1	Repair kit, for cyl.		025062
6	1	Axle	-	430428
7	2	Axle	-	430429
8	1	Link "B"	-	430430
9	1	Axle	D=25	430431
10	2	Ring	Ø55/17, t=17	430432
11	2	Split pin	Ø5X50	021055
12	2	Spring washer	M16	012355
13	2	Washer BRB	BRB 25x45	430434
14	2	Washer	47/37x2	430435
15	3	Fixation ring	34 x 2.5	430436
16	2	Screw	M6S M16x30 10.9	430437
17	8	Bushing	35/39x30	430438
18	4	Bushing	35/39x40	430439
19	7	Grease nipple	M8x1.25	431542
20	2	Hydraulic hose		430441



RESERVEDELSLISTE - SPARE PARTS LIST - ERSATZTEILLISTE					
Pos	Art.No.	No	Beskrivelse	Description	Bezeichnung
1	431001	1	3-pkt. ramme med hydr.lavett støttebein, for 300 henger	3-point frame, complete, for 300 timber trailer	
2	431010	1	3-pkt. ramme med hydr.lavett støttebein, for 380 henger	3-point frame, complete, for 380 timber trailer	
3	431002	1	3-pkt. ramme med hydr.lavett støttebein, for 450 henger	3-point frame, complete, for 450 timber trailer	
4	420053	1	Feste for kranfot, 300 henger	Frame	
5	012411	6	Skrue	Bolt	
6	012434	6	Skive	Washer	
7	012430	6	Mutter	Nut	
8	420059	1	Støttebrakett	Adapter	
9	021004	1	Orepinne	Linch pin	
10	020185	1	Bolt	Bolt	
11	420055	1	3-pkt. ramme, for 450 henger,	3-point frame, for 450 timber trailer	
12	431011	1	Adapter for 450 henger	Hex-Head Bolt	
13	012415	2	Skrue	Hex-Head Bolt	
14	012414	8	Skrue	Hex-Head Bolt	
15	422350	1	Festeplate, for 450	422350	
16	012410	6	Skrue	Hex-Head Bolt	
17	012430	2	Mutter	Hex Nut	
18	012435	6	Skive	Spring Washer	



RESERVEDELSLISTE - SPARE PARTS LIST - ERSATZTEILLISTE

Pos	Art.No.	No	Beskrivelse	Description	Bezeichnung
1	431010	1	3-pkt. ramme	3-point frame	
2	420056	1	Lavettbein, høyre	Stabilizer leg, right	
3	420057	1	Lavettbein, venstre	Stabilizer leg, left	
4	420211	2	Sylinder, komplett	Cylinder	
-	025083	2	Pakningssett for sylinder 420211	Seals kit, for cylinder	
5	021403	2	Bolt	Bolt	
6	012165	2	Skrue	Hex-Head Bolt	
7	012190	6	Mutter	Hex Nut	
8	021402	2	Bolt	Bolt	
9	012169	4	Skrue	Hex-Head Bolt	
10	021401	2	Bolt	Bolt	
11	020580	2	Bolt	Bolt	
12	021004	2	Orepinne	Linch pin	
13	017403	8	Smørenippel	Lubricating Nipple	
14	012410	2	Skrue	Hex-Head Bolt	
15	012435	2	Skive	Spring Washer	
16	012415	2	Skrue	Hex-Head Bolt	
17	012414	4	Skrue	Hex-Head Bolt	
18	012430	6	Mutter	Hex Nut	
19	431012	1	Festeplate, for 380 henger	431012	
20	012924	2	Skrue	Hex-Head Bolt	
21	012350	2	Mutter	Hex Nut	