


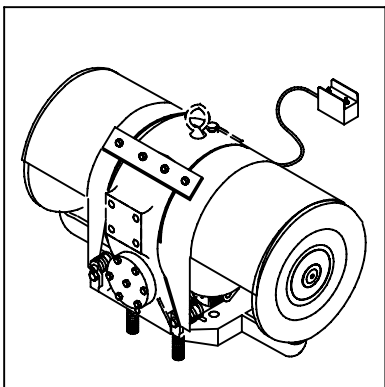

IGLAND Compact 6000/2LH

Serial No.: 0001 →

Parts Catalogue

Does NOT cover Special 6000/2H



IGLAND

GENERAL INFO


This Parts Catalogue consists of 16 numbered pages.

This Catalogue: P/N 390491


N/A: Not available

© IGLAND AS

- Gjengivelse av tekst og tegninger uten tillatelse forbudt.
- Reproduction of text or illustrations without permission is prohibited.
- Eine Wiedergabe von Texten und Zeichnungen ohne unsere Genehmigung ist nicht gestattet.
- Interdiction de toute reproduction de textes ou d'illustrations sans autorisation préalable.

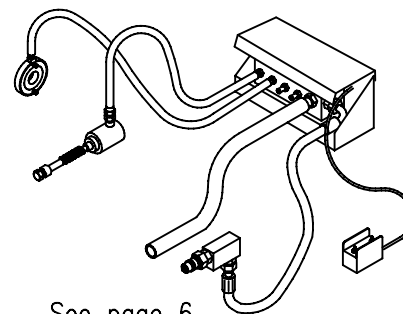


See page 6

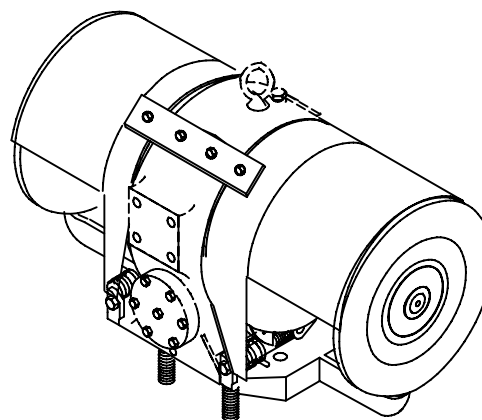

See page 2

Approved:	Revised: T.K. 13.03.02
	Issued: AIS/ØI 31.08.95

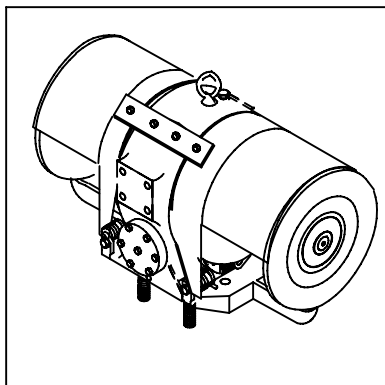

IGLAND Compact 6000/2LH


"HEAD"

012245 } For chain
012245 } wheel
017148 } P/N 070335


For chain
wheel
P/N 070325 and
070327

012840
012840
017079
017079


012245
012270
161032 N/A

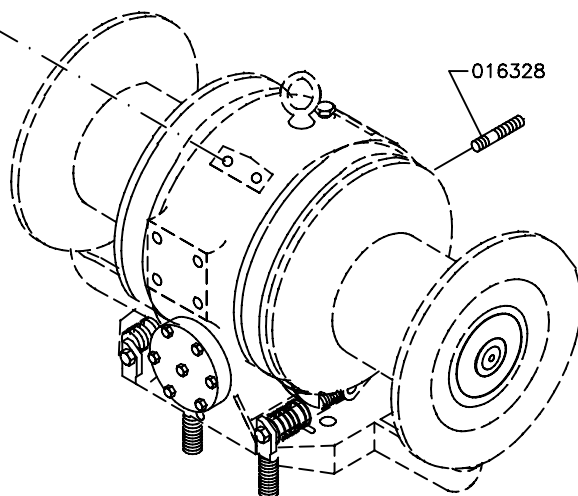

See page 3

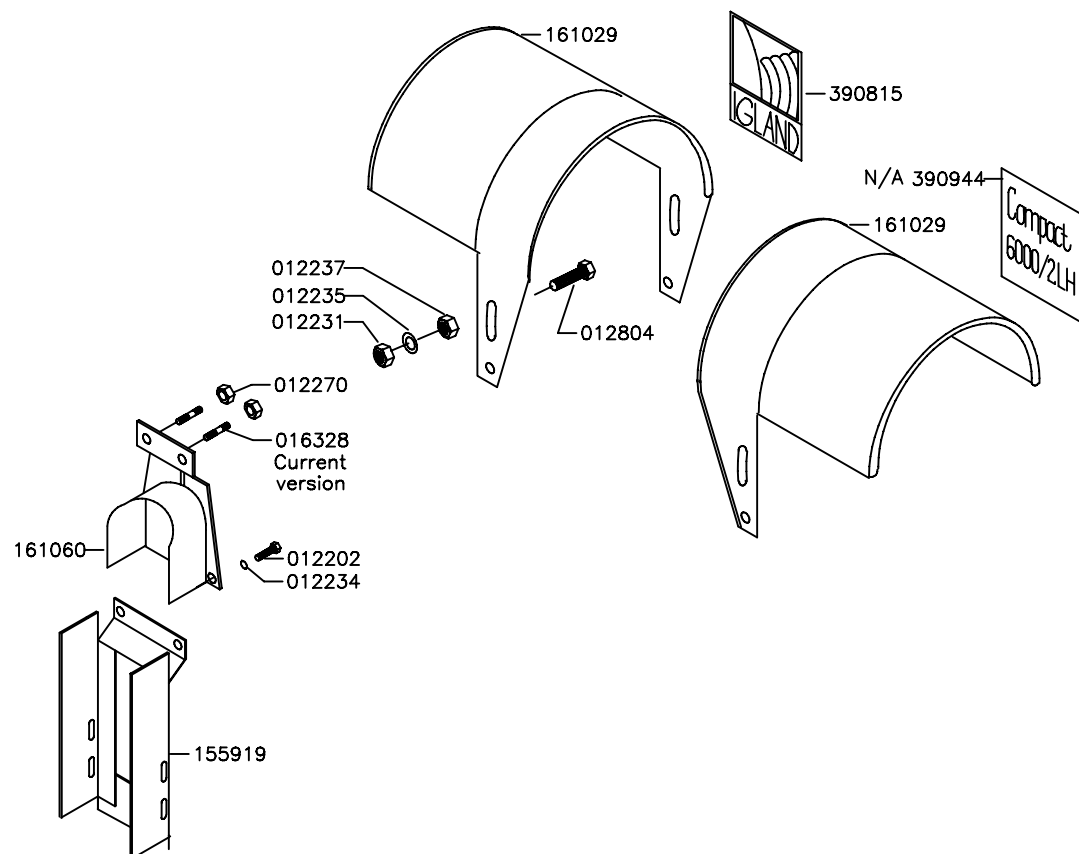

IGLAND Compact 6000/2LH

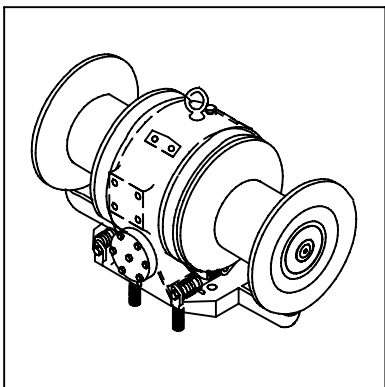

"HEAD"

157890
If exhausted, use
P/N 161034

N/A 181029
If exhausted, use
P/N 181052

181049
Not available.
If exhausted, use
P/N 181045

See page 9

026350

161034
Current version

181052
Current version

031854

141144

155628

141144

181045
Current version

031854

161041

161047

012231

012805

015566

161044

027210

017051

012270

015580
For 161026 only

026010

155512
Welded version
Not available.
If exhausted, use
P/N 161026

026010

161059 N/A
If fitted

030739

012355

012326

N/A 161035

See page 9

161026
Cast version
Current version



026010

026445
026446


026411

IGLAND Compact 6000/2LH


"HEAD"

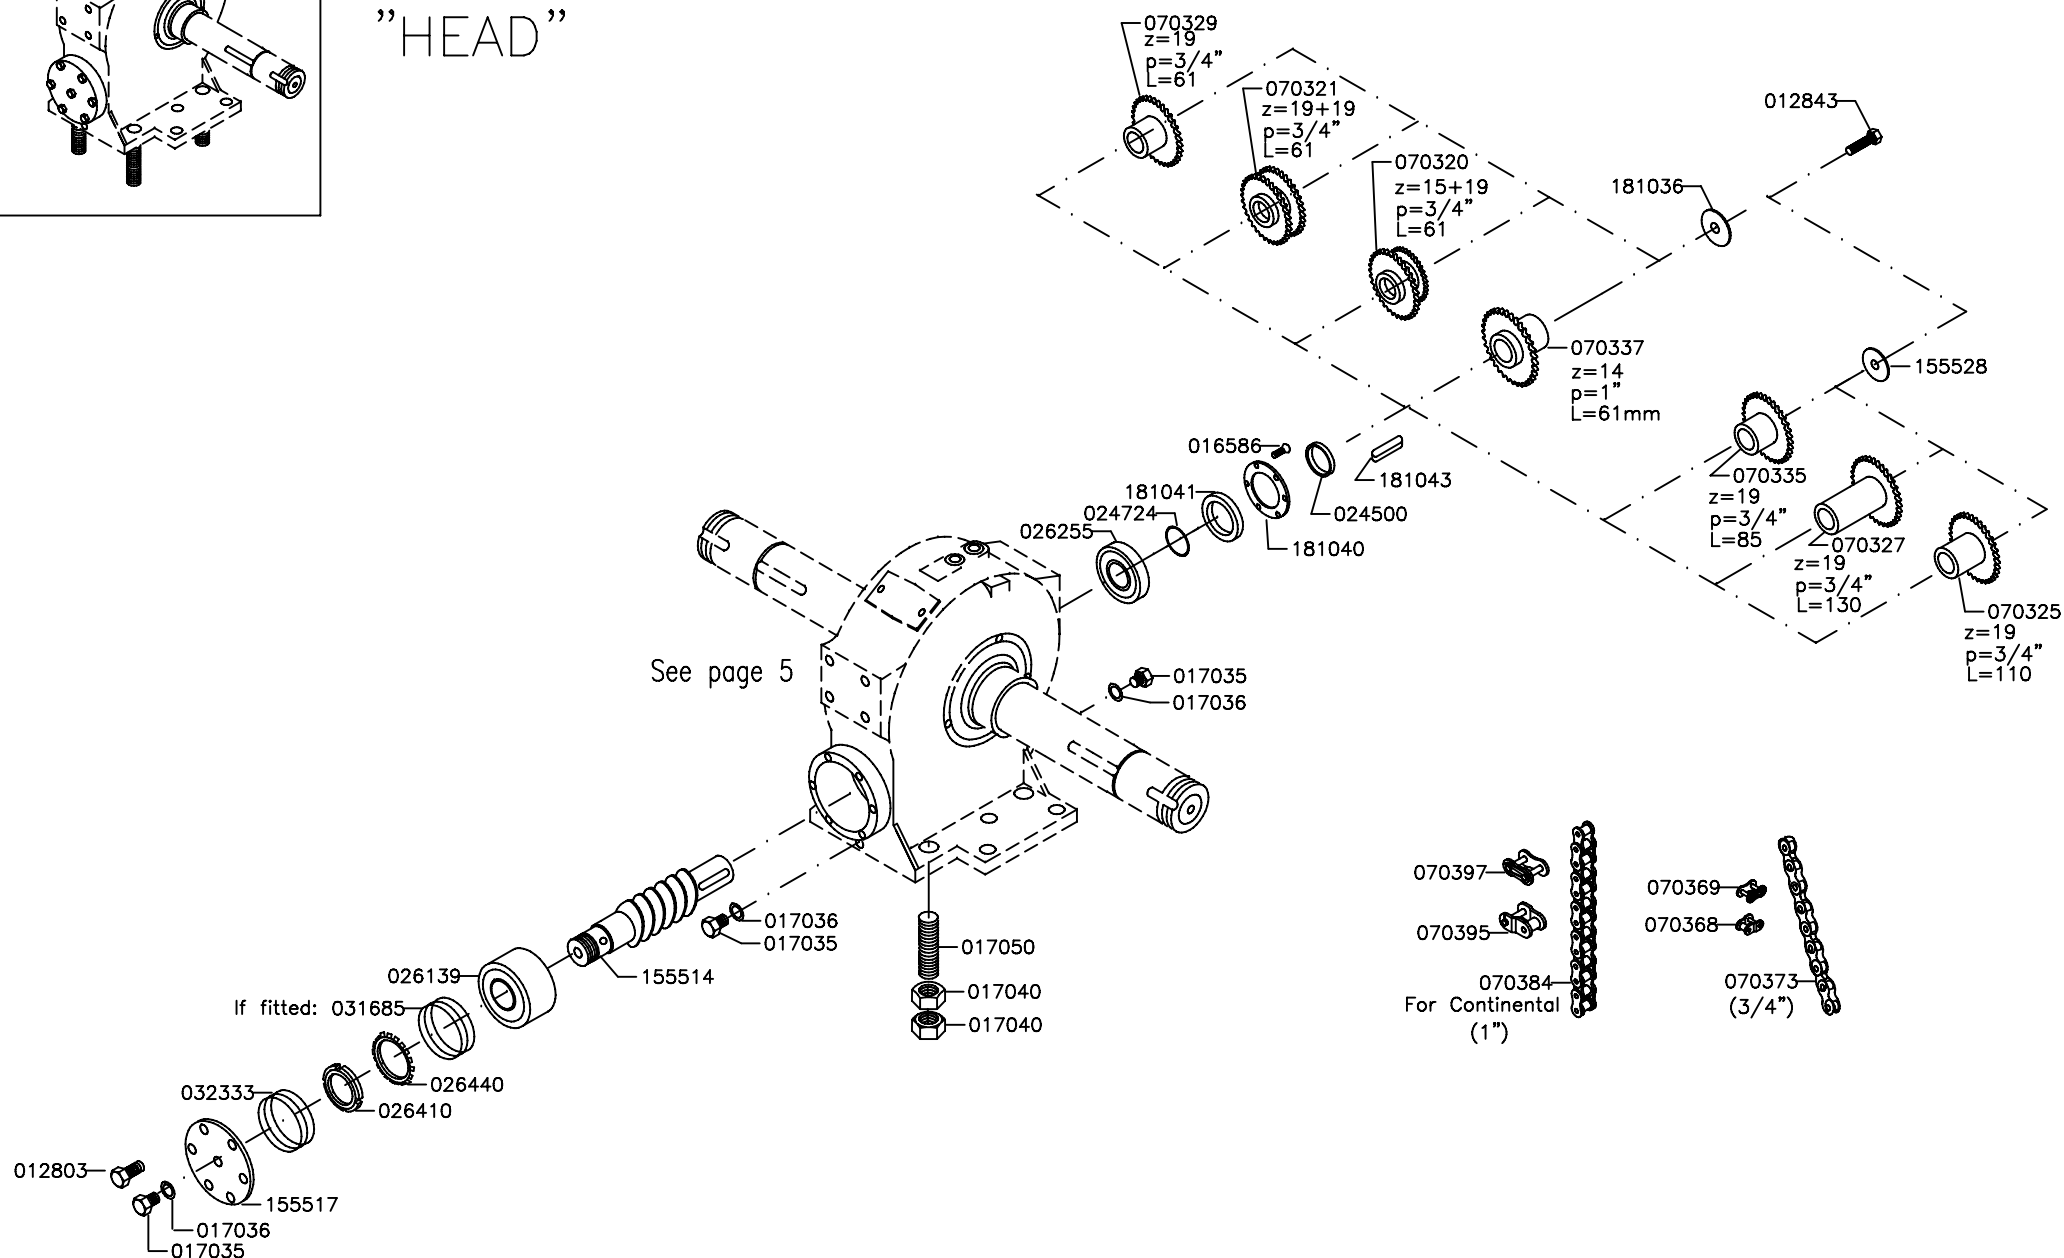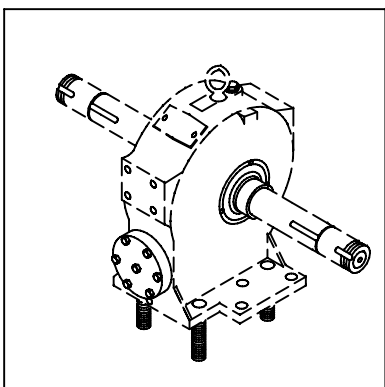


IGLAND Compact 6000/2LH

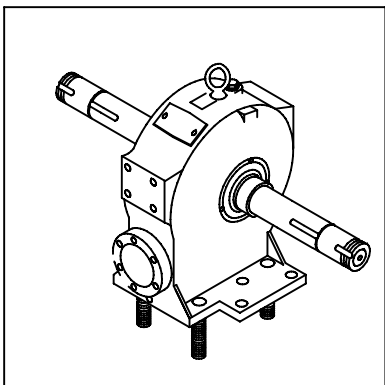

"HEAD"

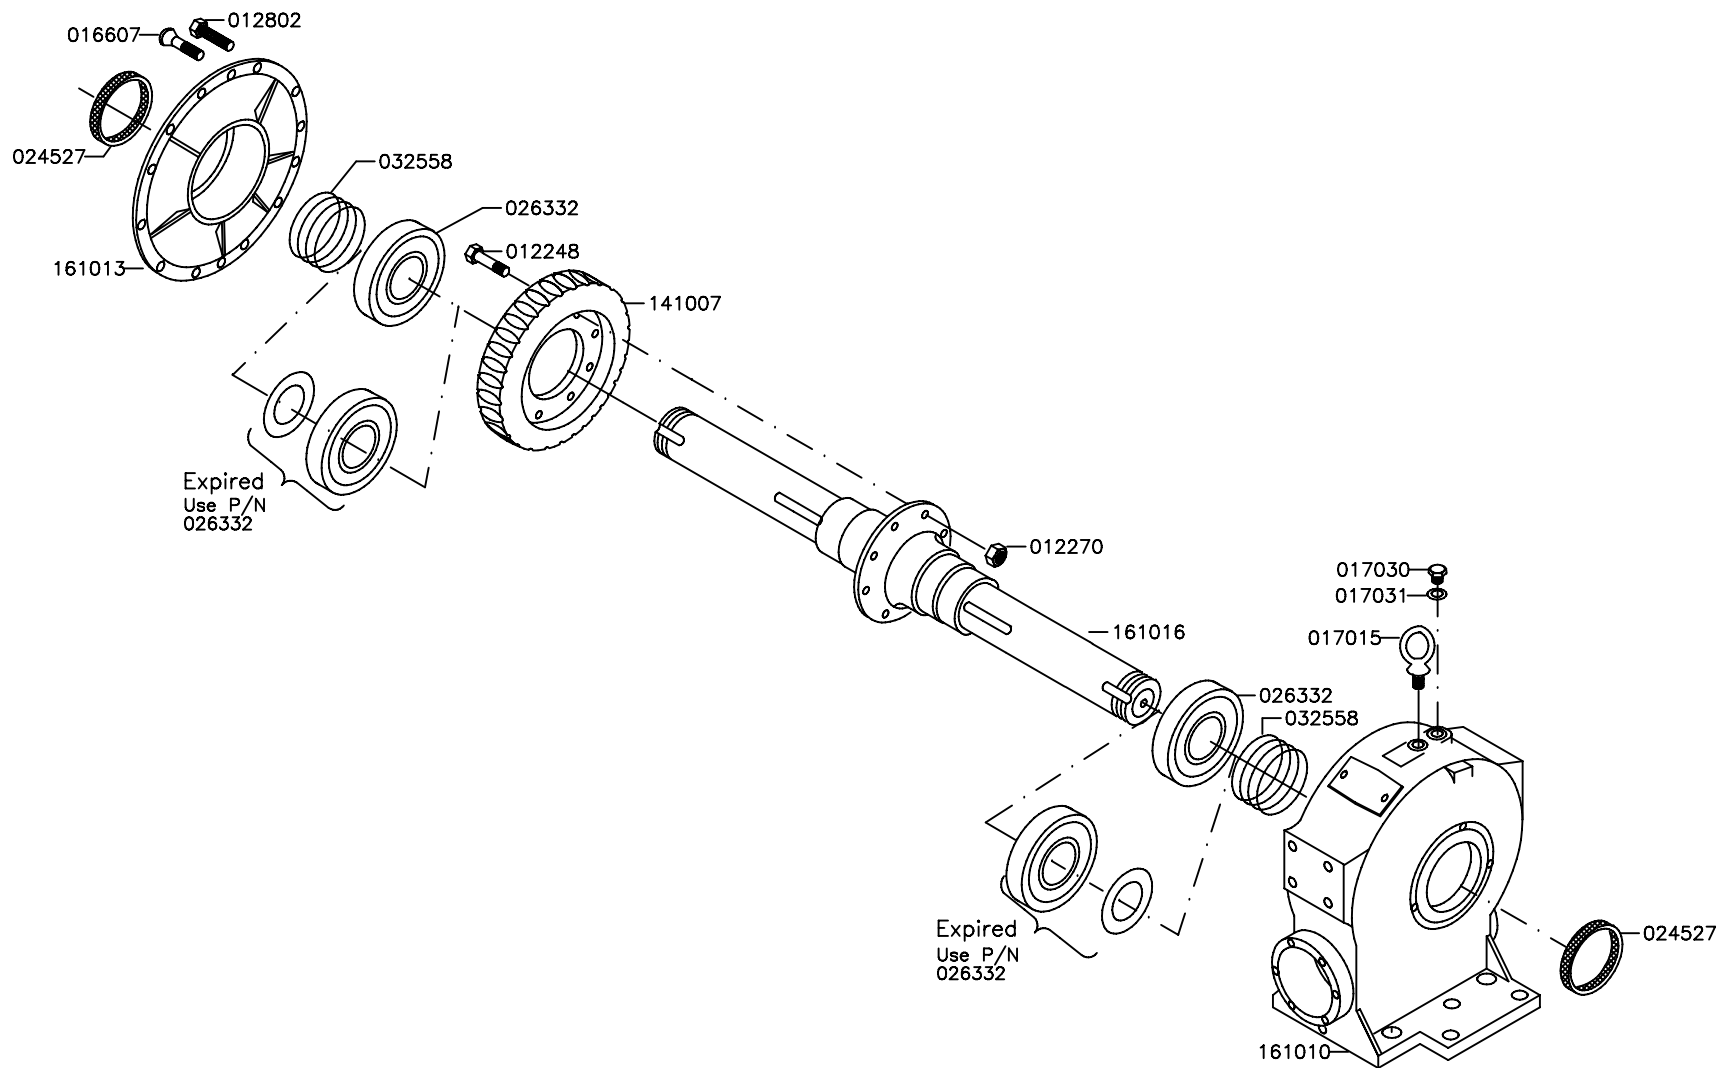


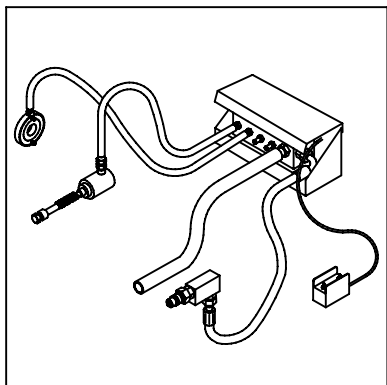


IGLAND Compact 6000/2LH

ELECTROHYDRAULIC
LOW PRESSURE CONTROL
"LH"

Current version

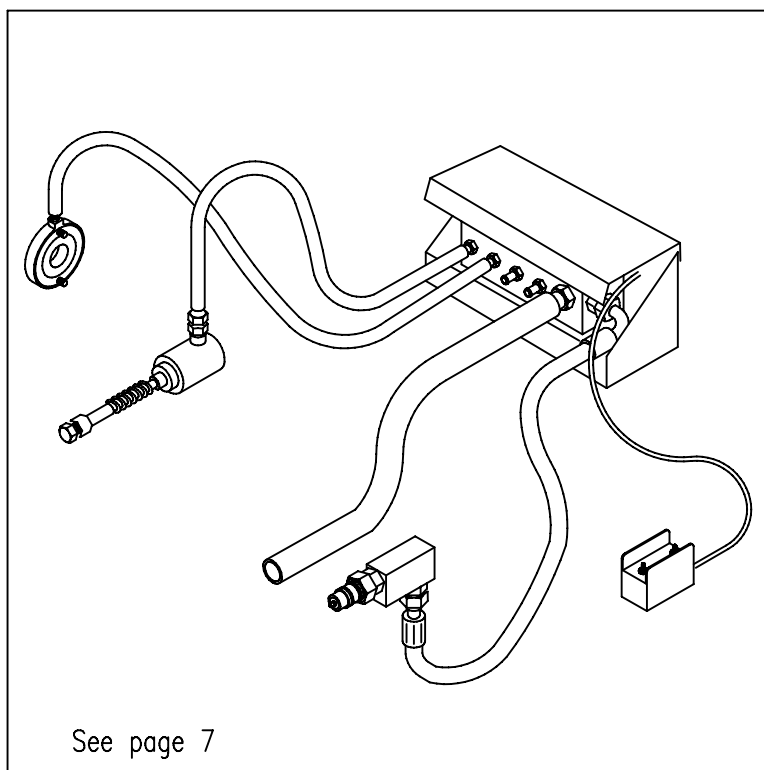


Early version, for John Deere only.

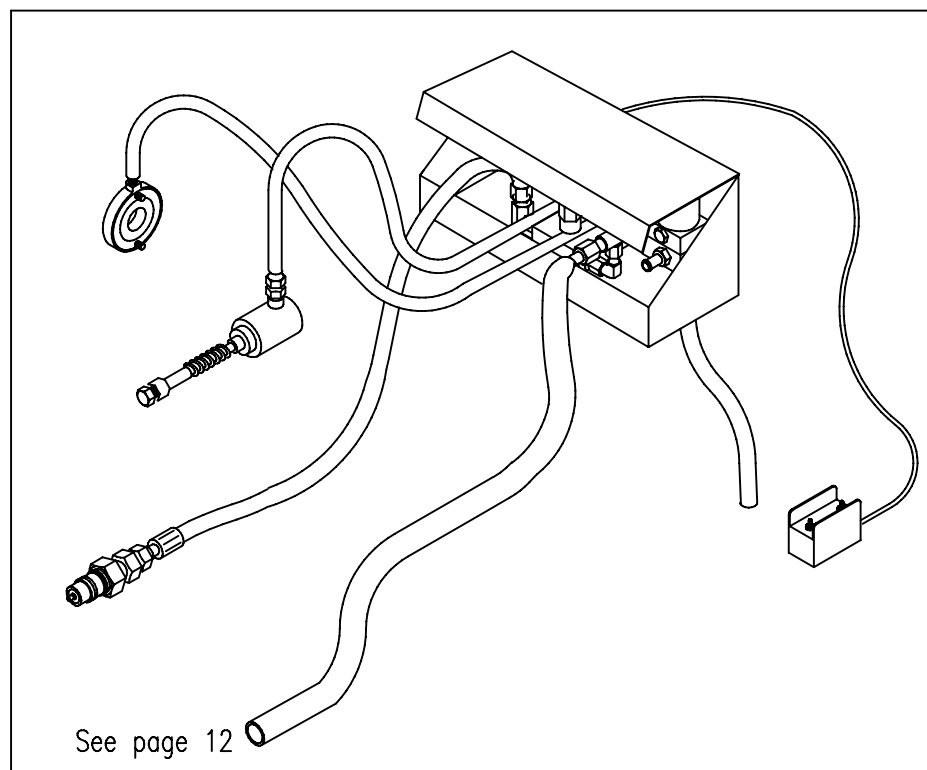


Should be used by LH winches.


TRACTOR TYPE	P/N:	DIMENSION:
BELARUS	049421	1 1/4" R
CASE 585-885 XL, 495-995 XLT, 3200, 4200	049445	1 1/4" BSP
DEUTZ	049423	M26 x 1,5
FENDT 308	049422	M18 x 1,5
FIAT 60-94, 65-94, 72-94, 82-94, 88-94, from -94	049444	M22 x 1,5
FIAT (not 90/90 or 100/90)	049426	M22 x 1,5
FIAT 90/90 and 100/90	049425	M30 x 1,5
FORD 4130, 4630, 5030, 5640, 6640, 7740	049434	3/4" R
FORD 6410 and 6610, From A -89 mod.	049434	3/4" R
FORD -10 SERIE	049400	Eksp. 34 mm
INTERNATIONAL TYPE 1	049428	1 5/16" UNF
INTERNATIONAL TYPE 2	049429	1" UNF
INTERNATIONAL TYPE 3	049430	3/4" UNF
JOHN DEERE -40 serie	049438	1" - 1 1/5 NPT
JOHN DEERE -50 serie	049439	3/4" - 14 NPT
JOHN DEERE -3000 serie	049446	M24 x 1,5
JOHN DEERE -6000 serie	049440	M22 x 1,5
KUBOTA 345 L	049411	3/8" R
KOBOTA M7950 DT	049415	1" R
MB TRAC	049419	M30 x 1,5
MASSEY FERGUSON 250-265	049441	1 1/16" JIC
MASSEY FERGUSON 600 series, from -84	049441	1 1/16" JIC
MASSEY FERGUSON 300 series, from -87	049442	7/8" JIC
MASSEY FERGUSON 3000 series, from -87	049443	1 1/16" JIC
VALMET 6100, 6300, 6400, 6600 MEZZO	049435	M30 x 2
VALMET 355, 455, 555, 465, 565, 665	049427	7/8" JIC
VALMET 305 - 405	049420	M30 x 2
VALMET 505 - 805	049412	
VALMET, Early model	049404	29 - 31 mm
ZETOR CRYSTAL 8145 - 4145	049433	M30 x 1,5
ZETOR 6520/40, 7520/40, 8520/40, 9520/40	049437	M48 x 1,5
ZETOR (all other models)	049414	
Universal type for oil supply	049404	29 - 31 mm
Universal type for oil supply	049400	34 - 36 mm
Universal type for oil supply	049405	37 - 39 mm
Universal type for oil supply	049402	49 - 51 mm

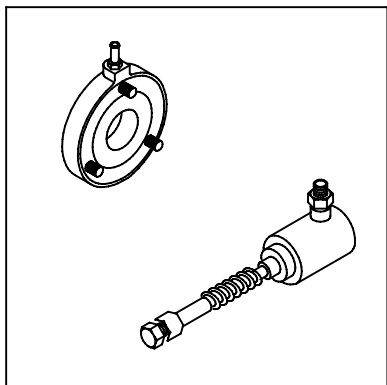

IGLAND Compact 6000/2LH


ELECTROHYDRAULIC
LOW PRESSURE CONTROL
"LH"

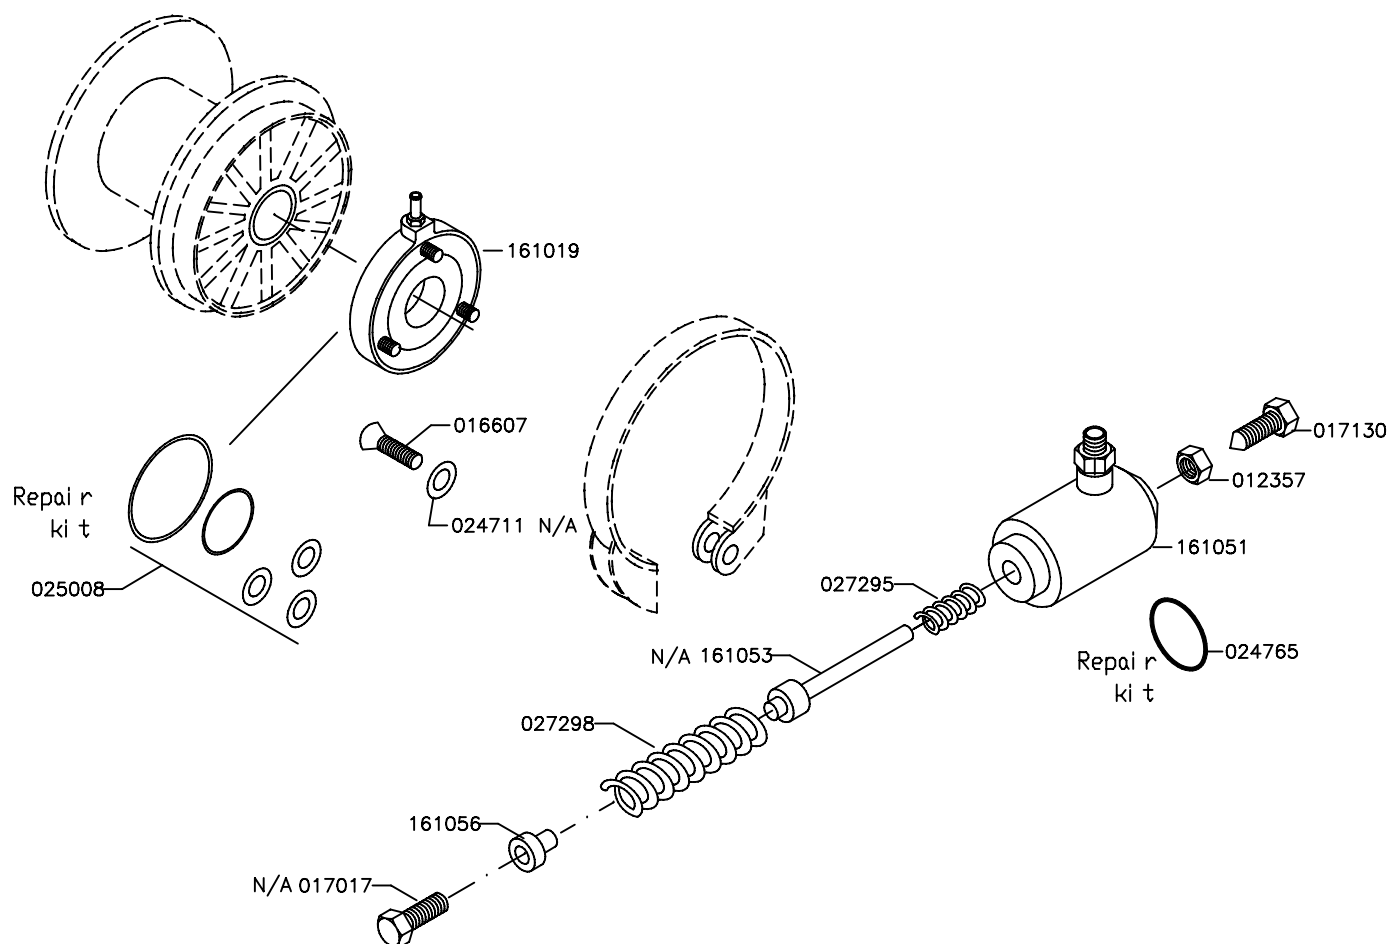

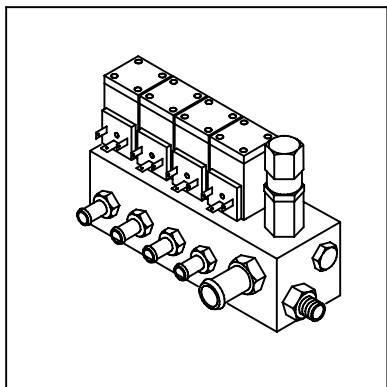

IGLAND Compact 6000/2LH



ELECTROHYDRAULIC LOW PRESSURE CONTROL "LH"

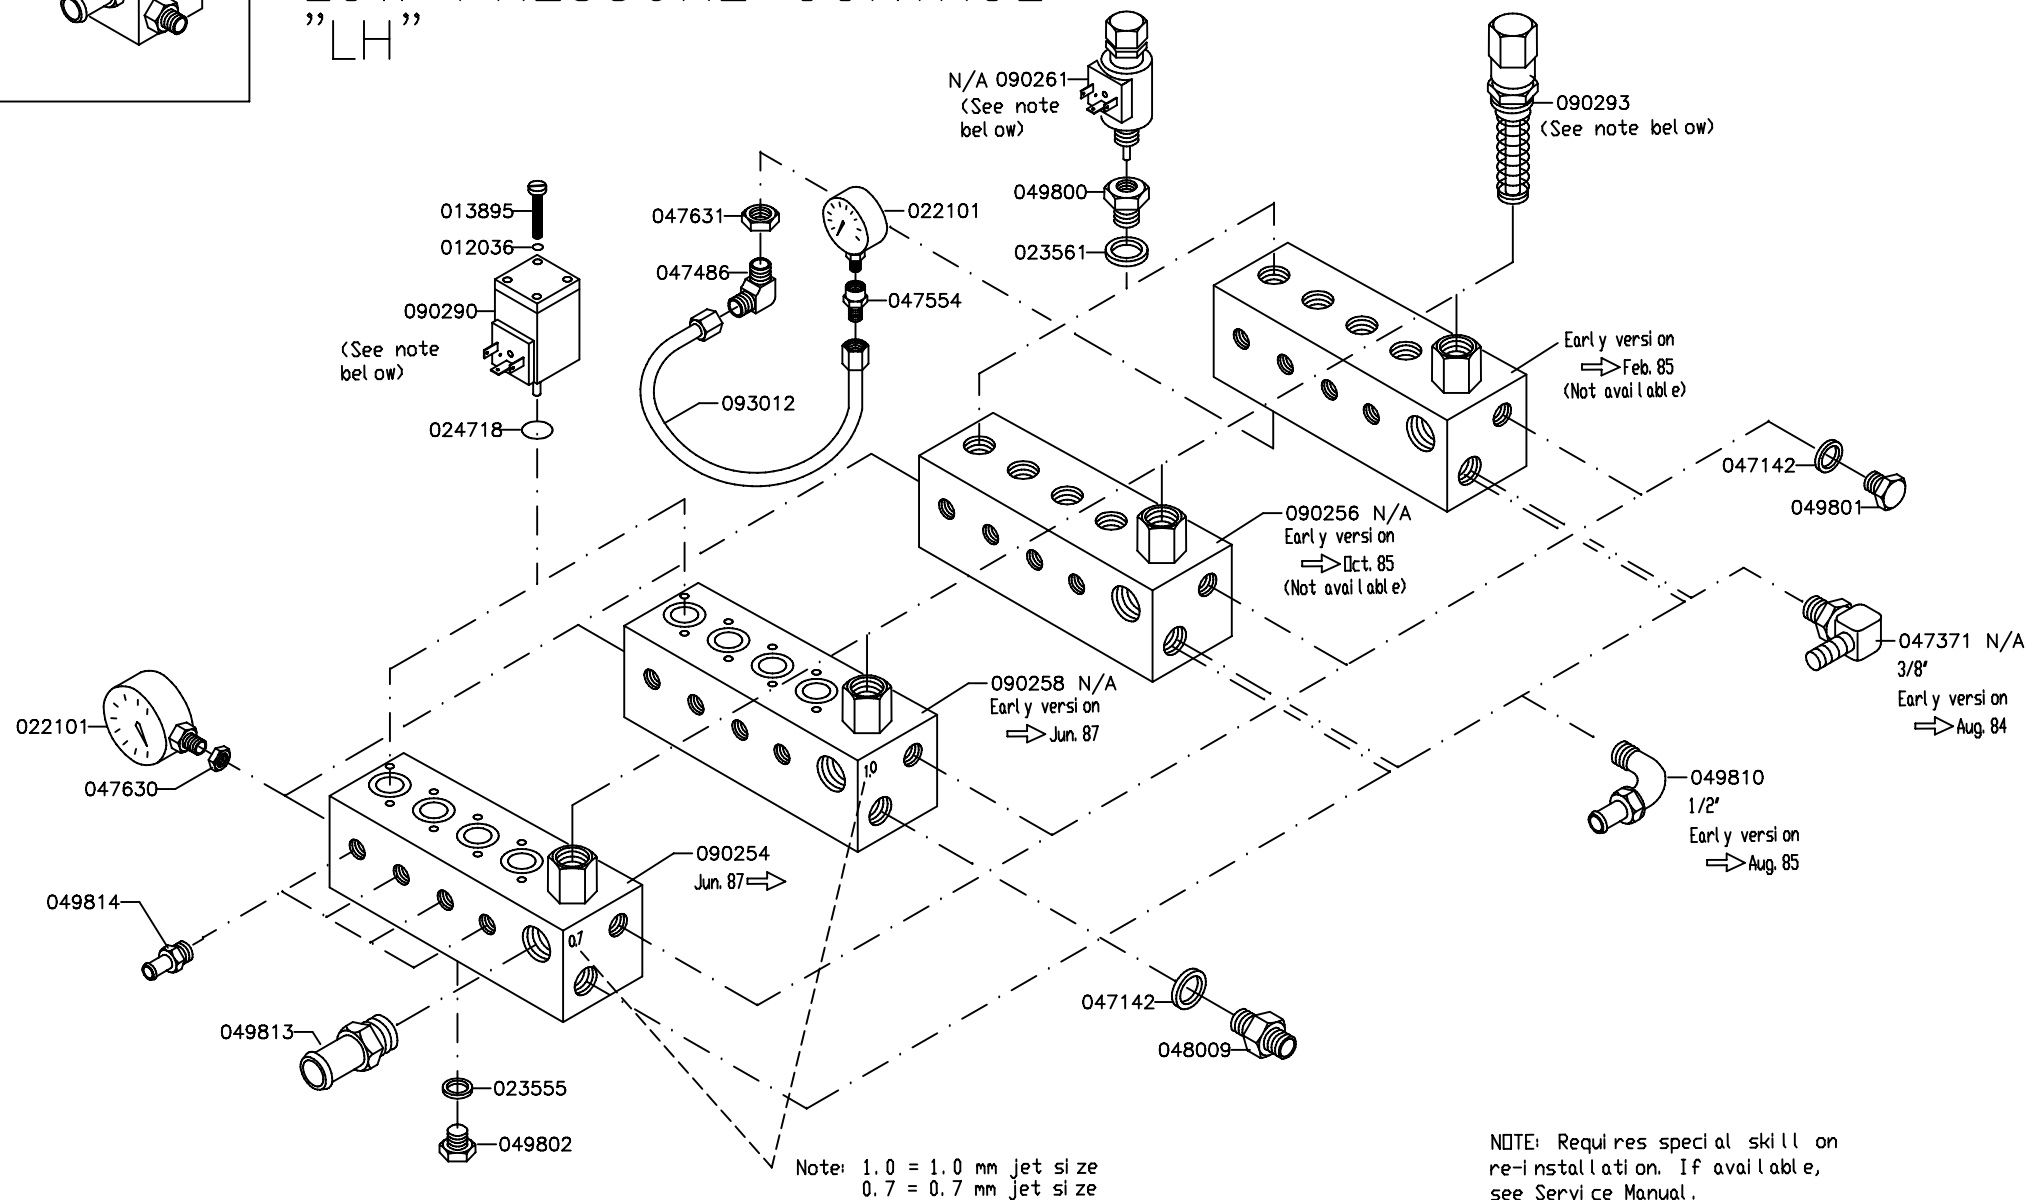


NOTE: Requires special skill on re-installation. If available, see Service Manual.

IGLAND Compact 6000/2LH

ELECTROHYDRAULIC LOW PRESSURE CONTROL "LH"

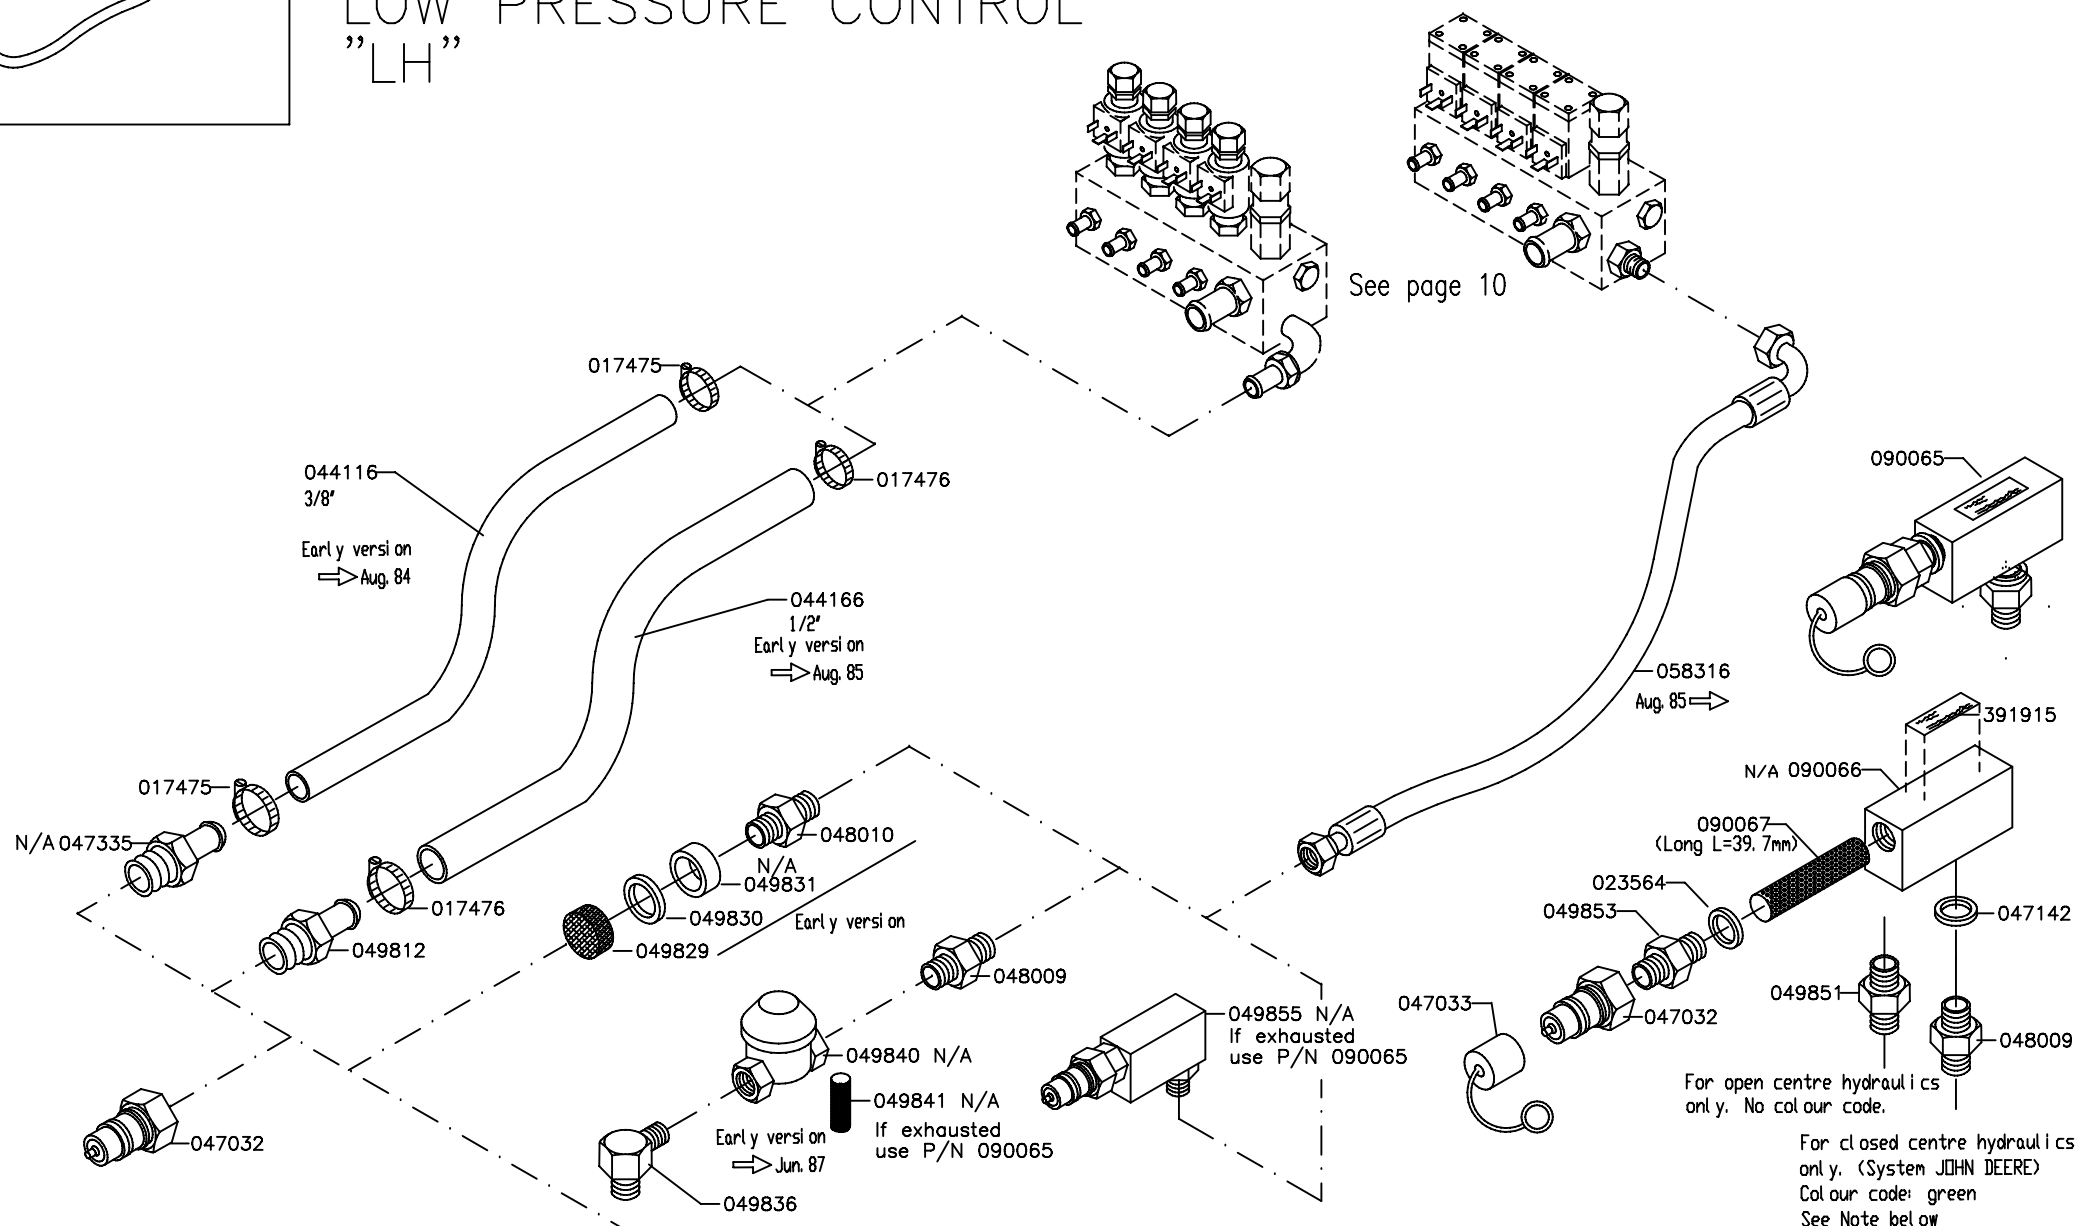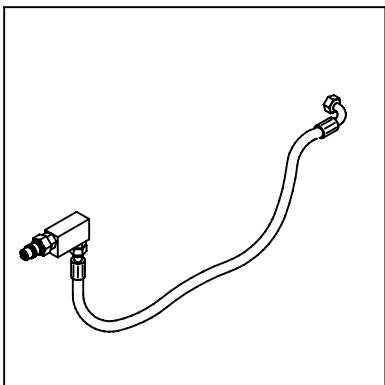


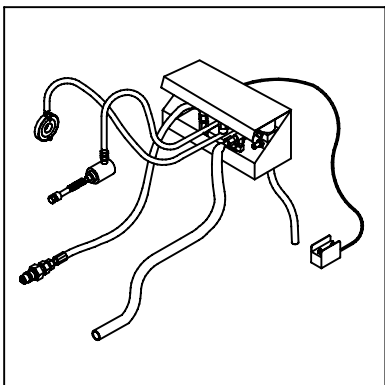



IGLAND Compact 6000/2LH

ELECTROHYDRAULIC LOW PRESSURE CONTROL "LH"

For "closed centre, early version"
⇒ Jun.87

See page 13

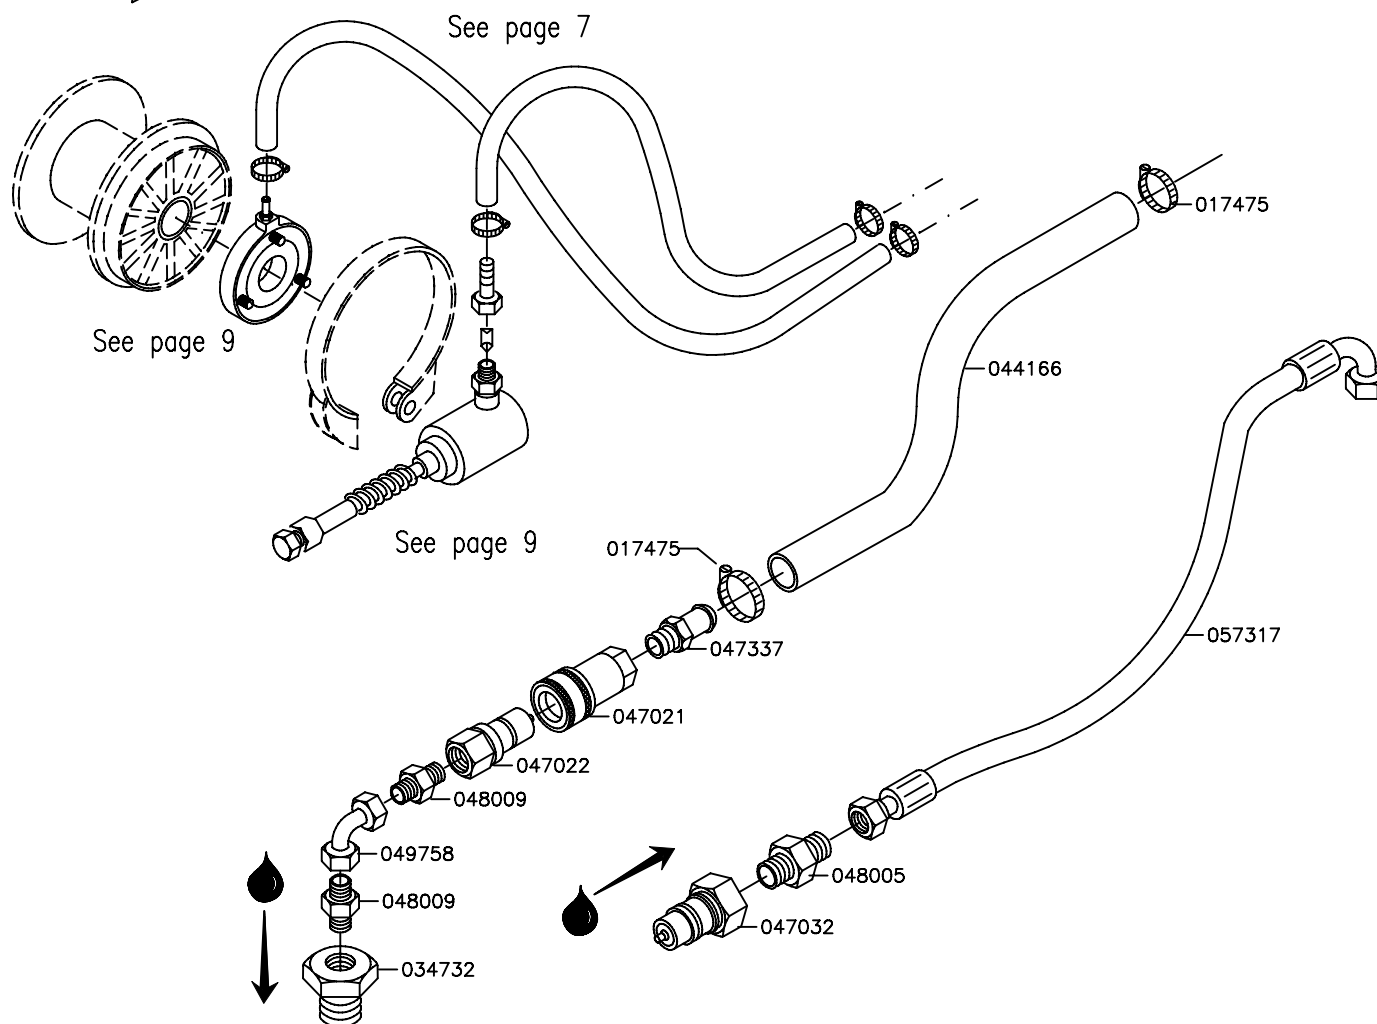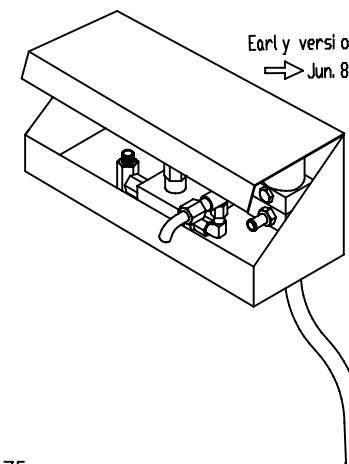


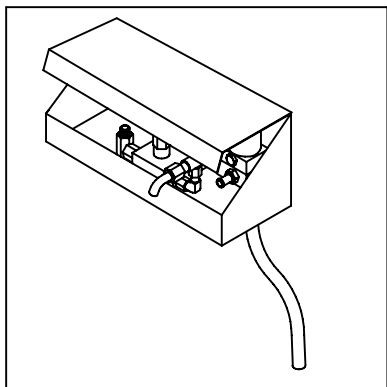


IGLAND Compact 6000/2LH

ELECTROHYDRAULIC LOW PRESSURE CONTROL "LH"

For "closed centre, early version
Jun.85 → Jun.87


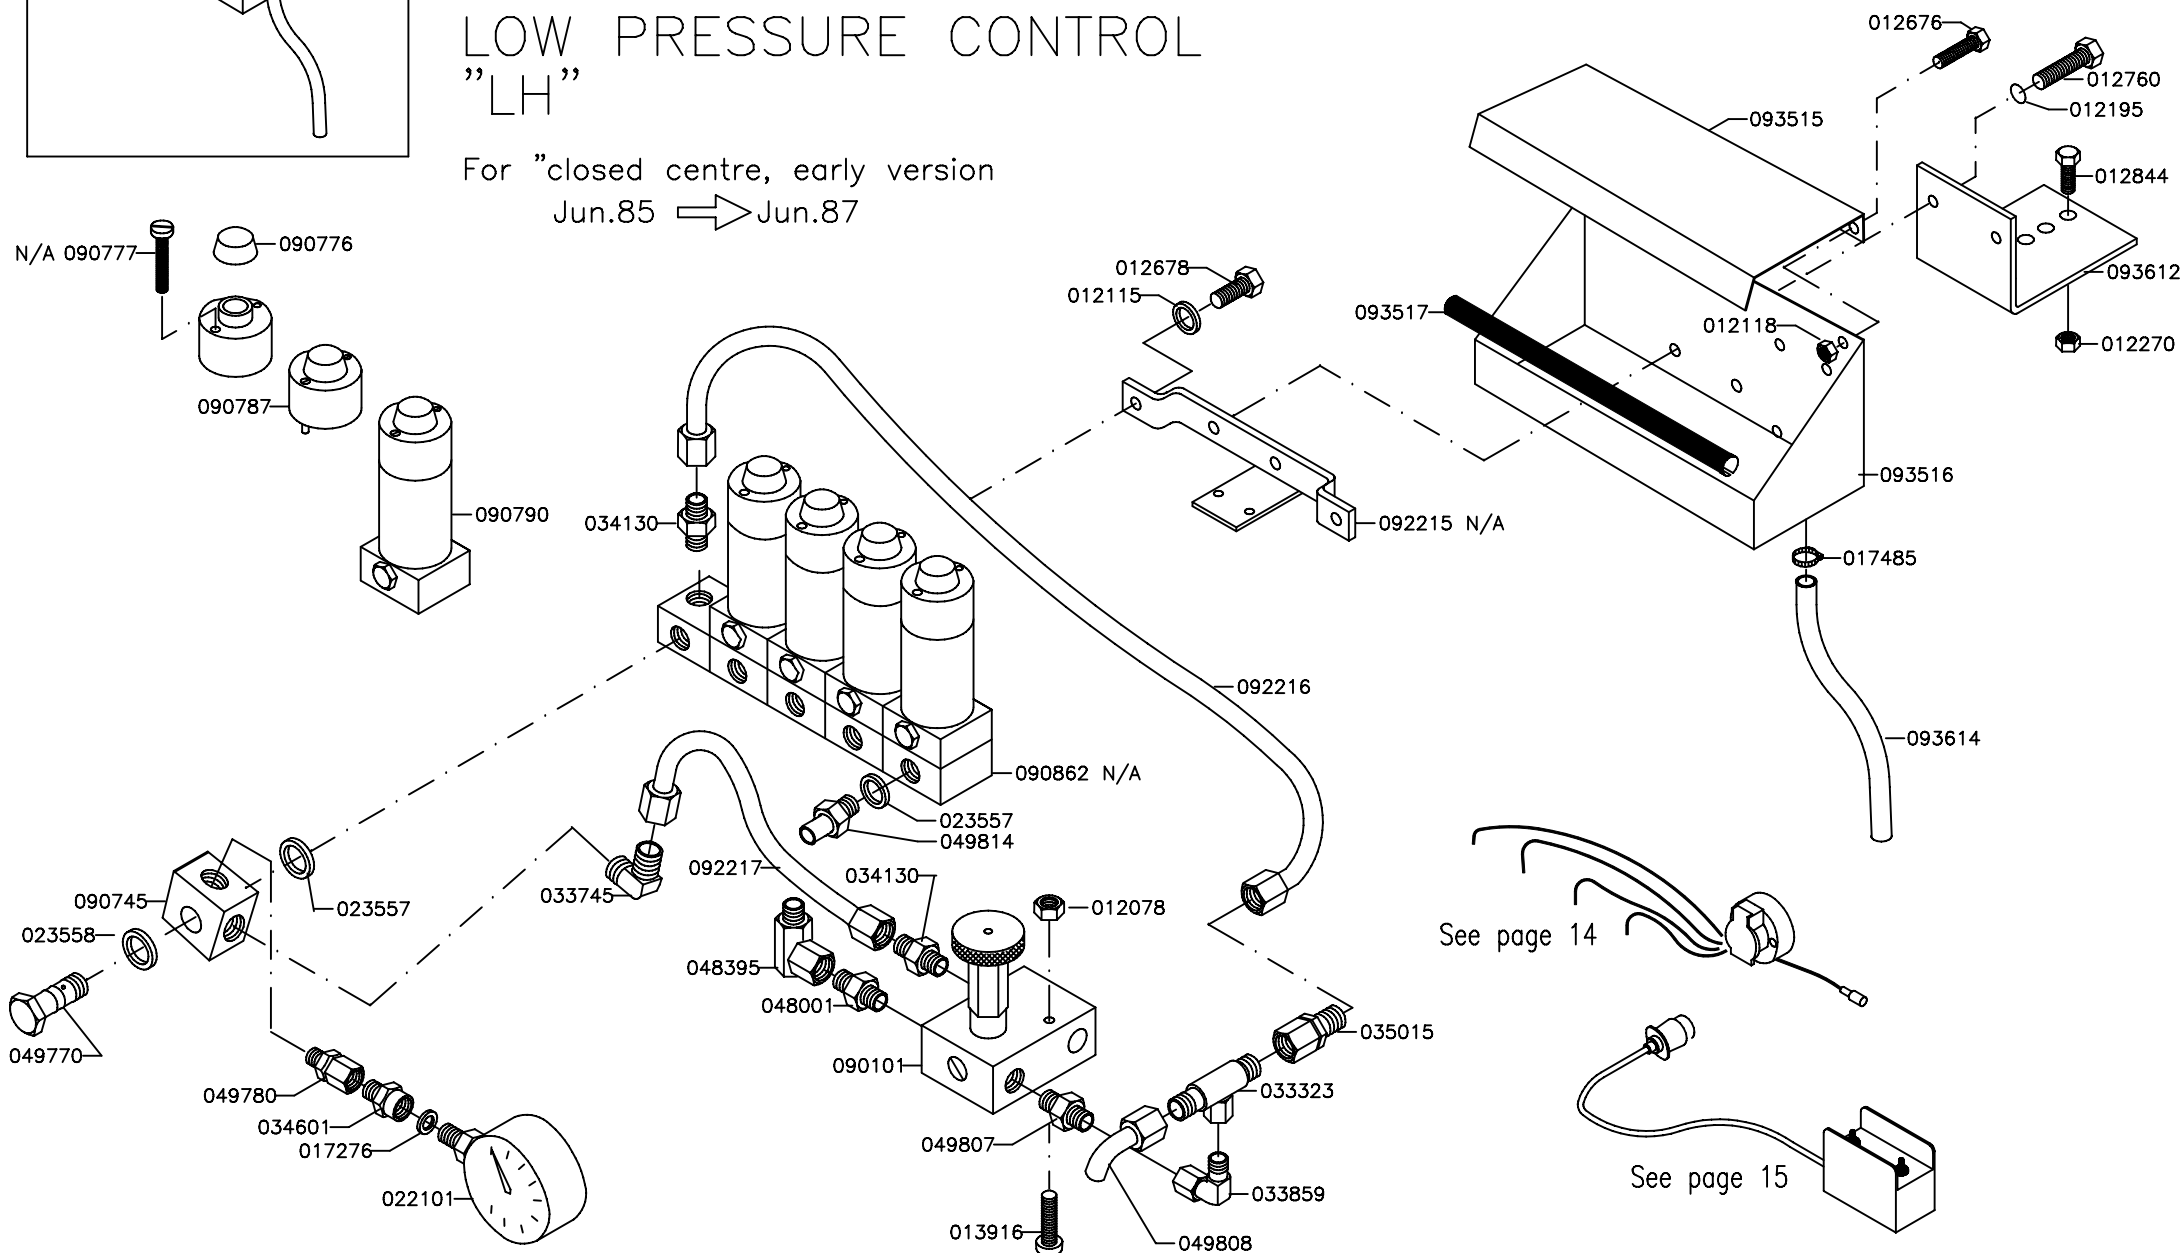


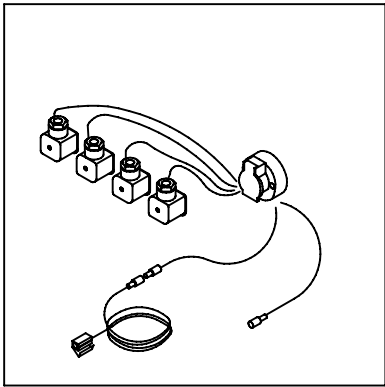

IGLAND Compact 6000/2LH


ELECTROHYDRAULIC CONTROL

Electrical components

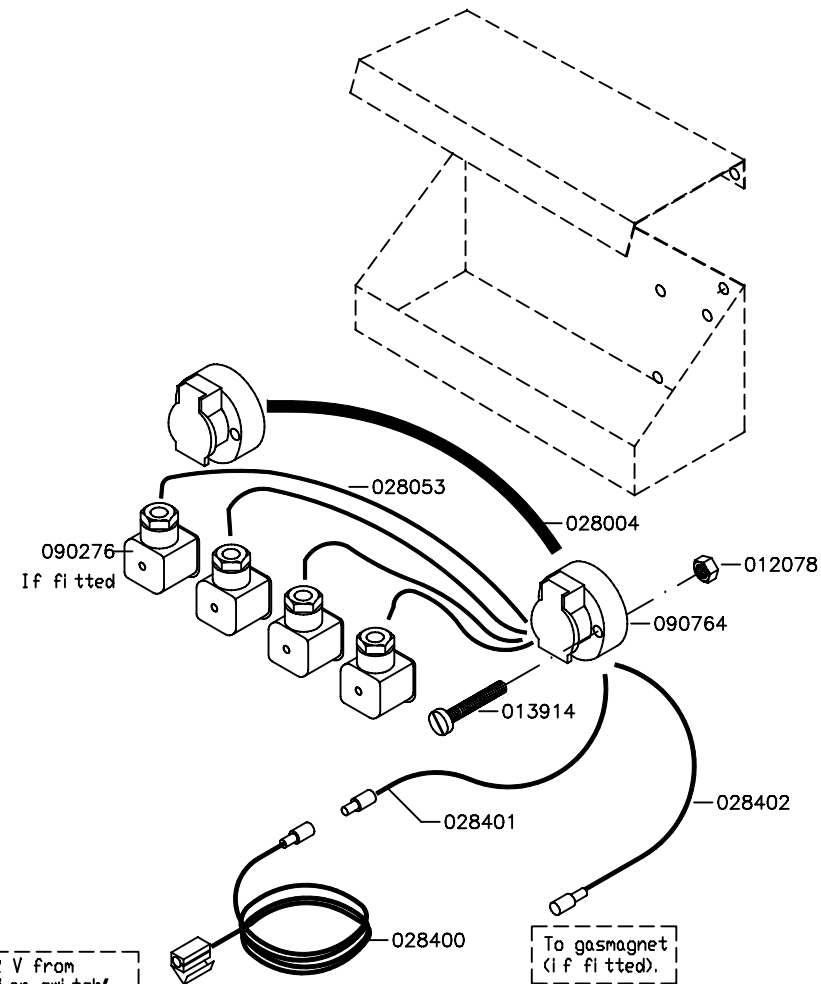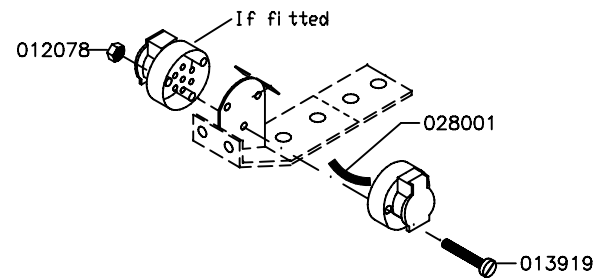

+12 V from
"ignition switch"
(Use a 8A fuse)
See service manual.



To gasmagnet
(if fitted).

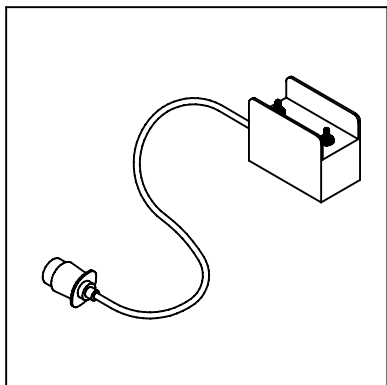


IGLAND Compact 6000/2LH

ELECTROHYDRAULIC CONTROL

Electrical components

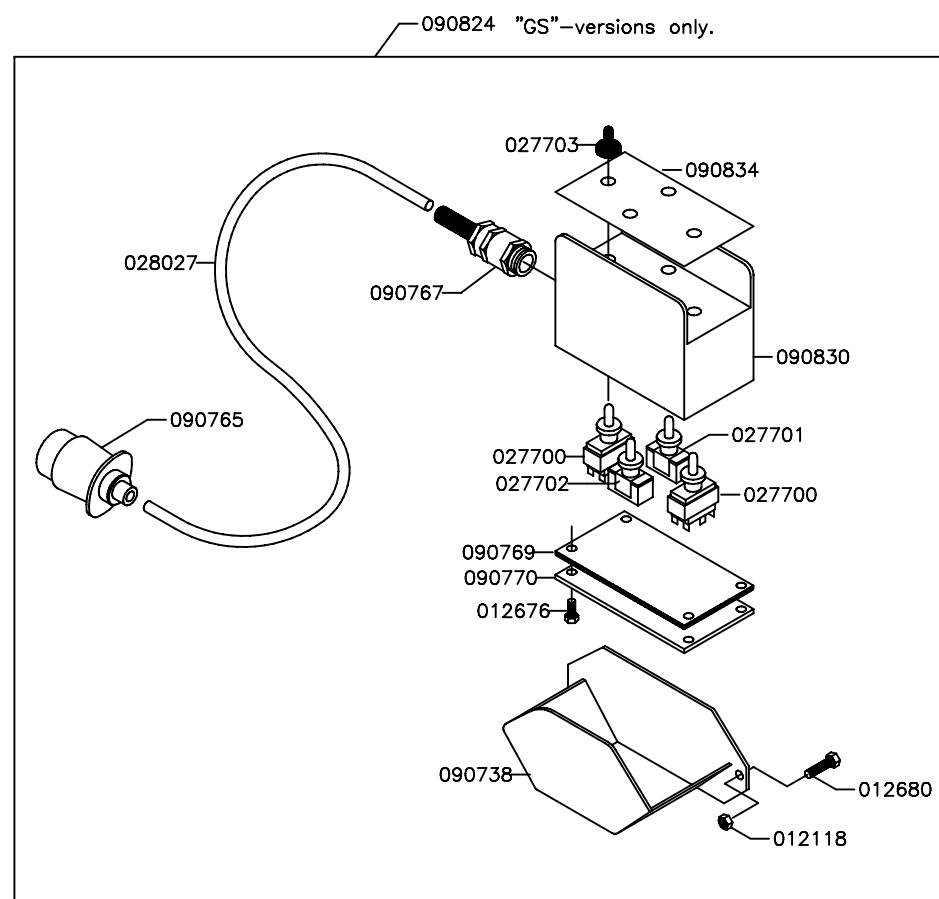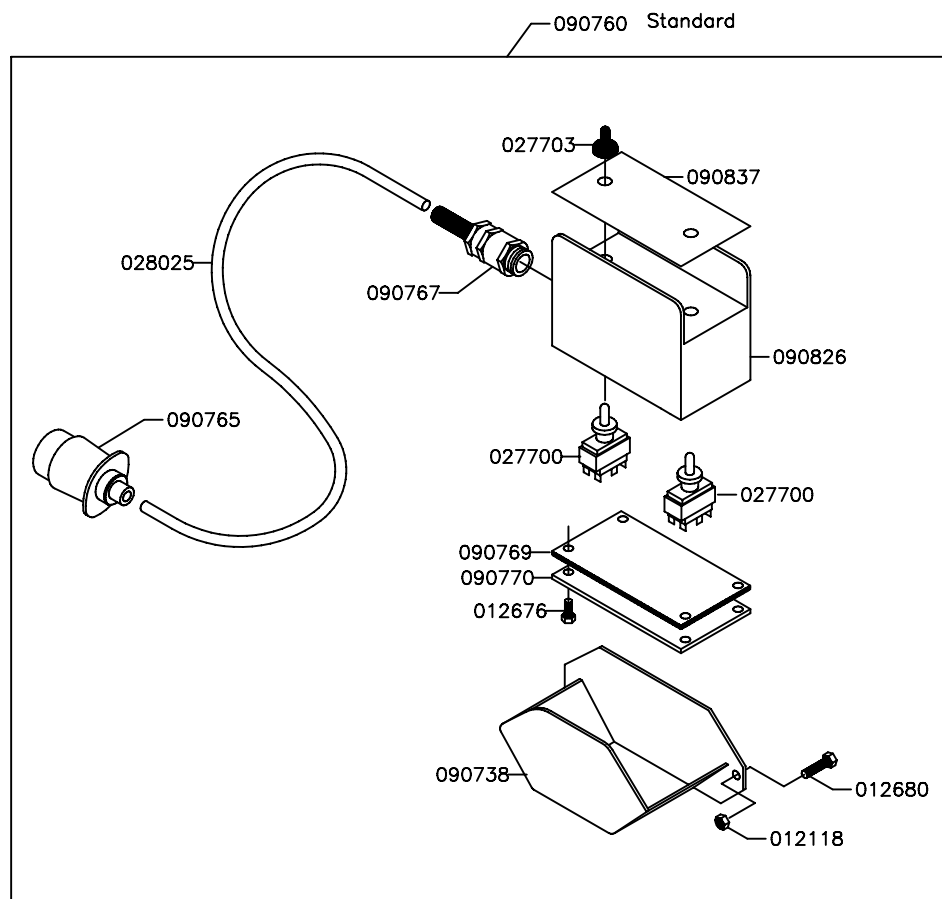


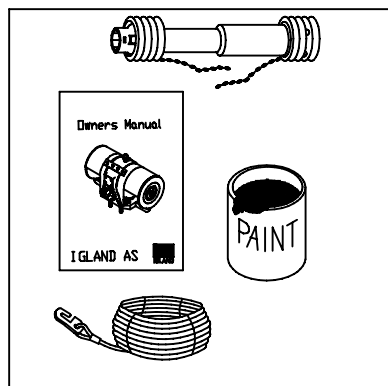

IGLAND Compact 6000/2 LH

Miscellaneous


WIRE ROPE, 6x26WS+IWRC 180 kp, 12 mm

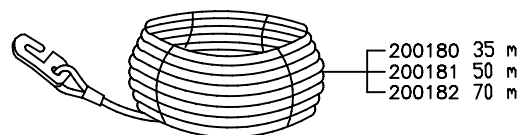

WIRE ROPE, according to ISO 4254-4




—023001 Red 1 l
—023011 Black 1 l

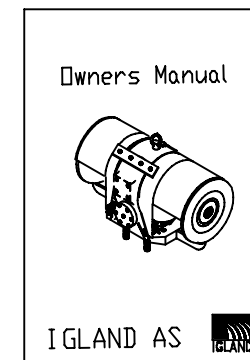


Owners Manual
—390492
Norwegian/German/English

Parts Catalogue
Accessories for Skidding Winches

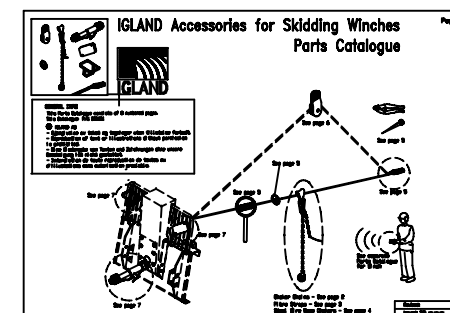

—390601

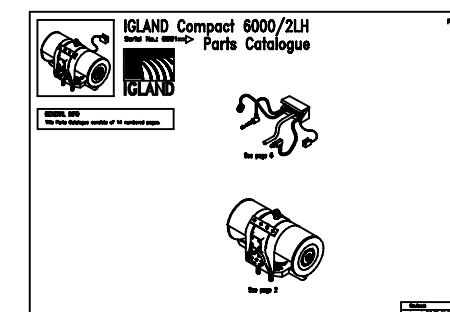

Parts List
390491