



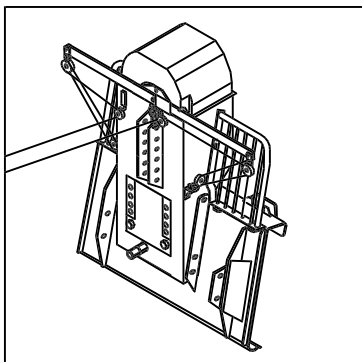

IGLAND 5601, Parts Catalogue

Serial No.: 0001 →

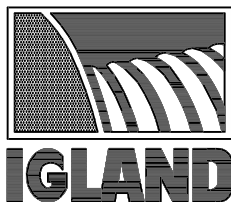

GENERAL INFO

This Parts Catalogue supersedes Parts List Nos.:
1590-0, 1593-0, 1595-0, 914-0

This Parts Catalogue consists of 22 numbered pages.


This Catalogue: P/N 390092

N/A: Not Available



© IGLAND AS

- Gjengivelse av tekst og tegninger uten tillatelse forbudt.
- Reproduction of text or illustrations without permission is prohibited.
- Eine Wiedergabe von Texten und Zeichnungen ohne unsere Genehmigung ist nicht gestattet.
- Interdiction de toute reproduction de textes ou d'illustrations sans autorisation préalable.

See page 6

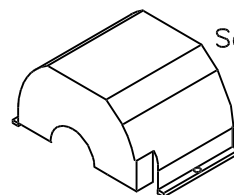


See page 2
If fitted

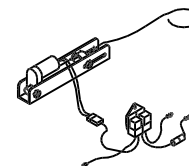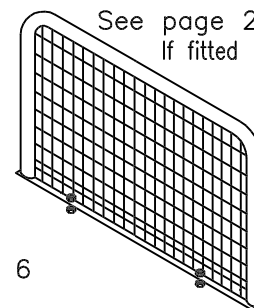

See page 8
If fitted


See page 2

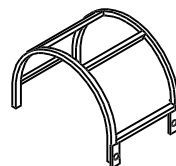


See page 6



See page 3

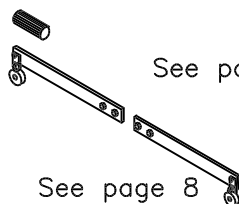

See page 8

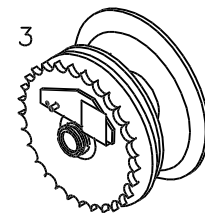




See page 9




See page 7




See page 2

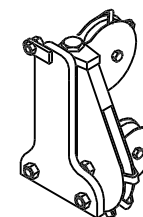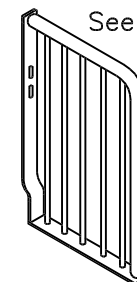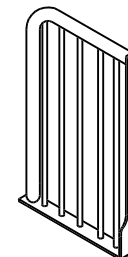


See page 5
If fitted




See page 8
If fitted

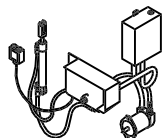


See page 8
If fitted

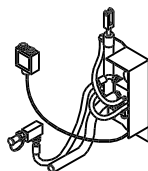


See page 8
If fitted

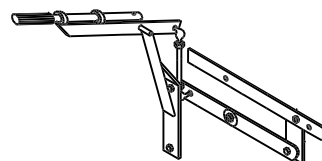

See page 8
If fitted

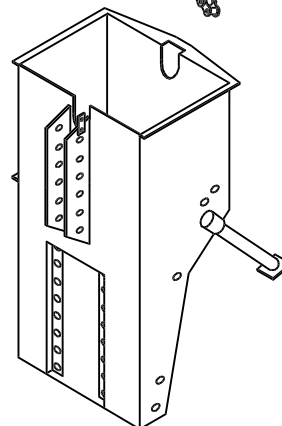

See page 2

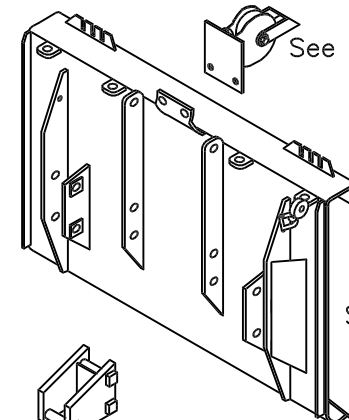

See page 2





See page 20
If fitted

Approved:


Revised: T.K. 30.10.01

Issued: AIS/øi 03.11.93


See page 20
If fitted

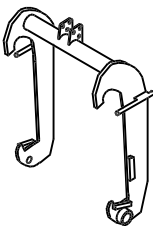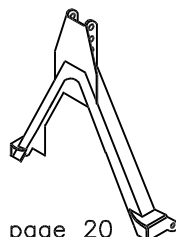

See page 20
If fitted

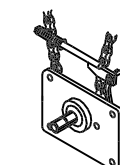



See page 7

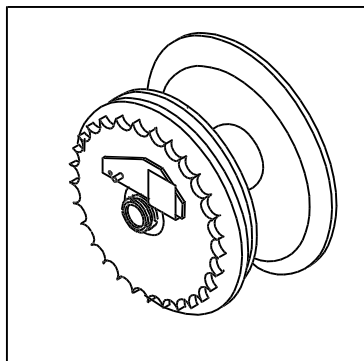

IGLAND 5601

DRUM

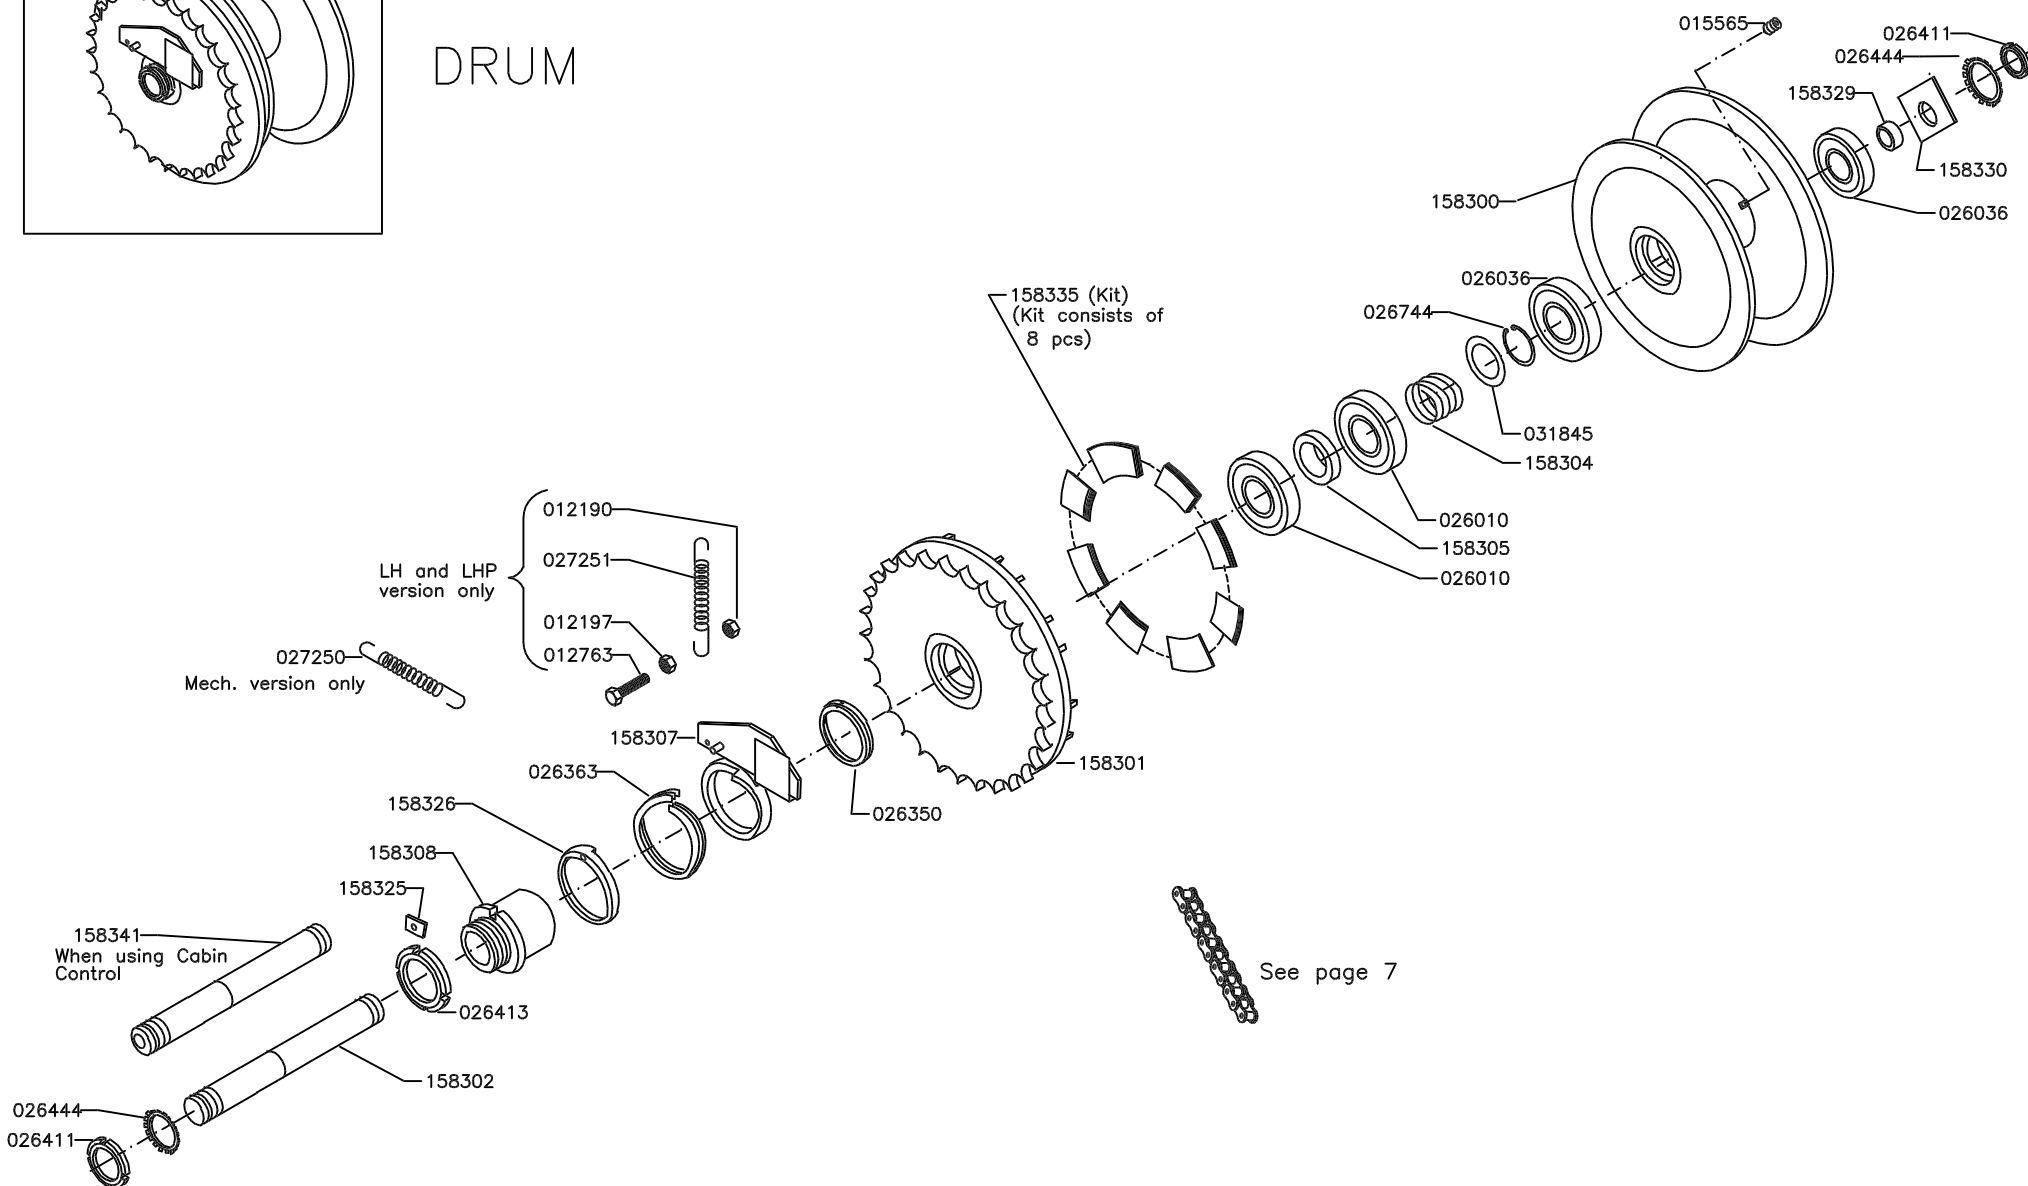

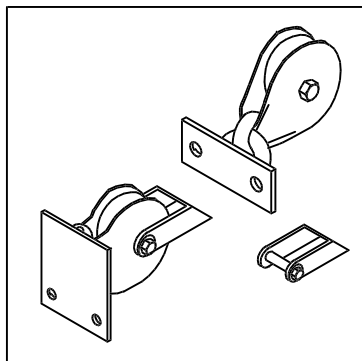


IGLAND 5601

STANDARD BLOCK: 158360


STANDARD BLOCK Current version


Serial No.:
375 ⇒

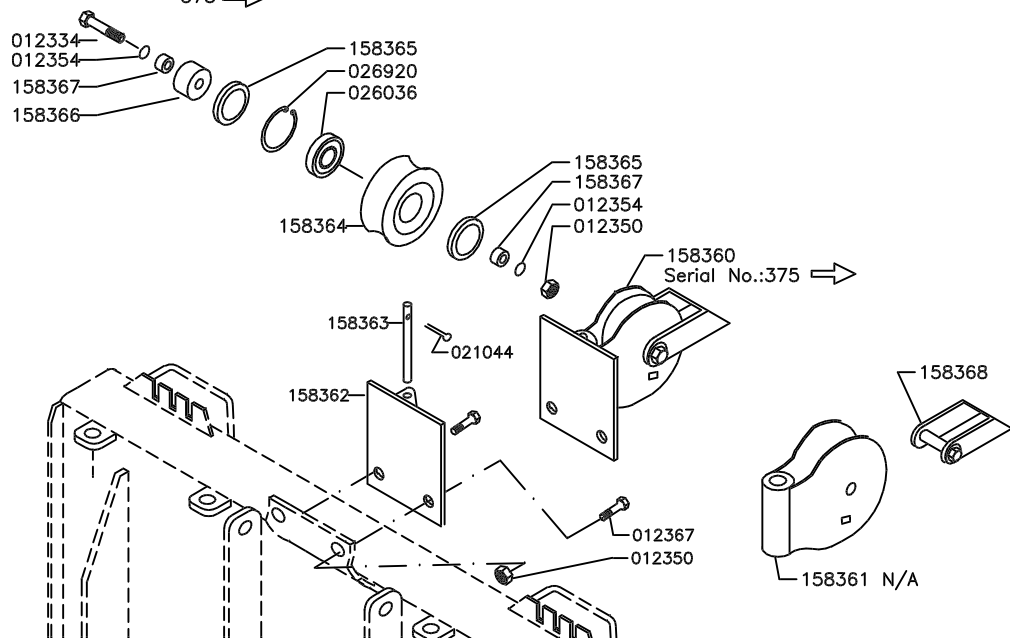

EARLY VERSION

Serial No.:
⇒ 374

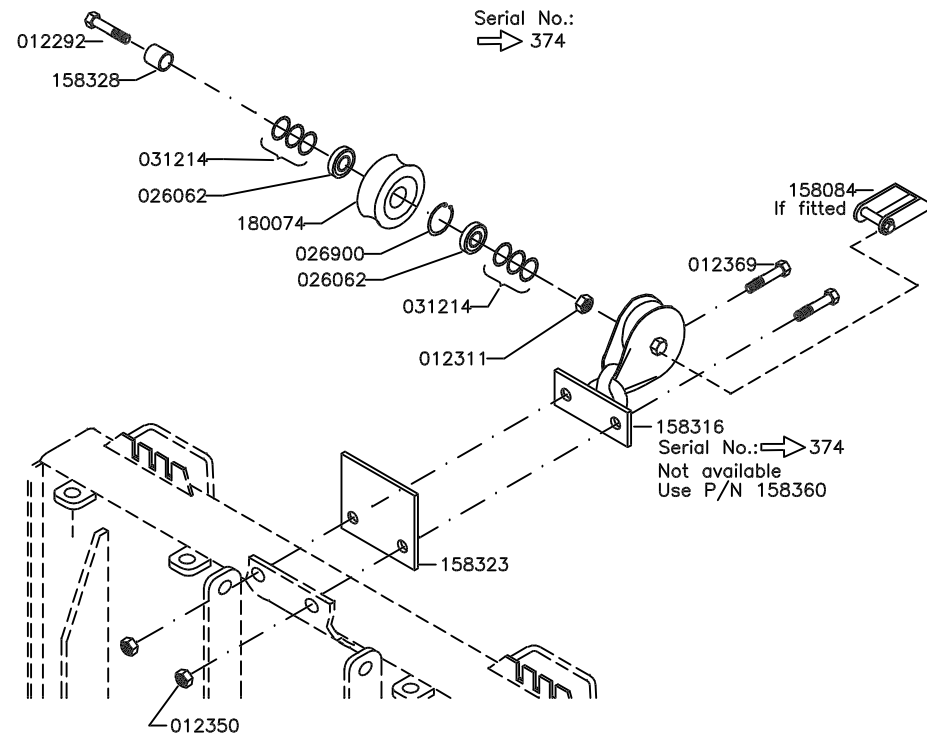


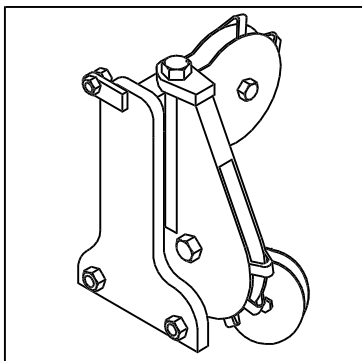


IG LAND 5601

SPOOLMATIC: 158509 N/A If fitted



Reinforced version, from oct. 94.

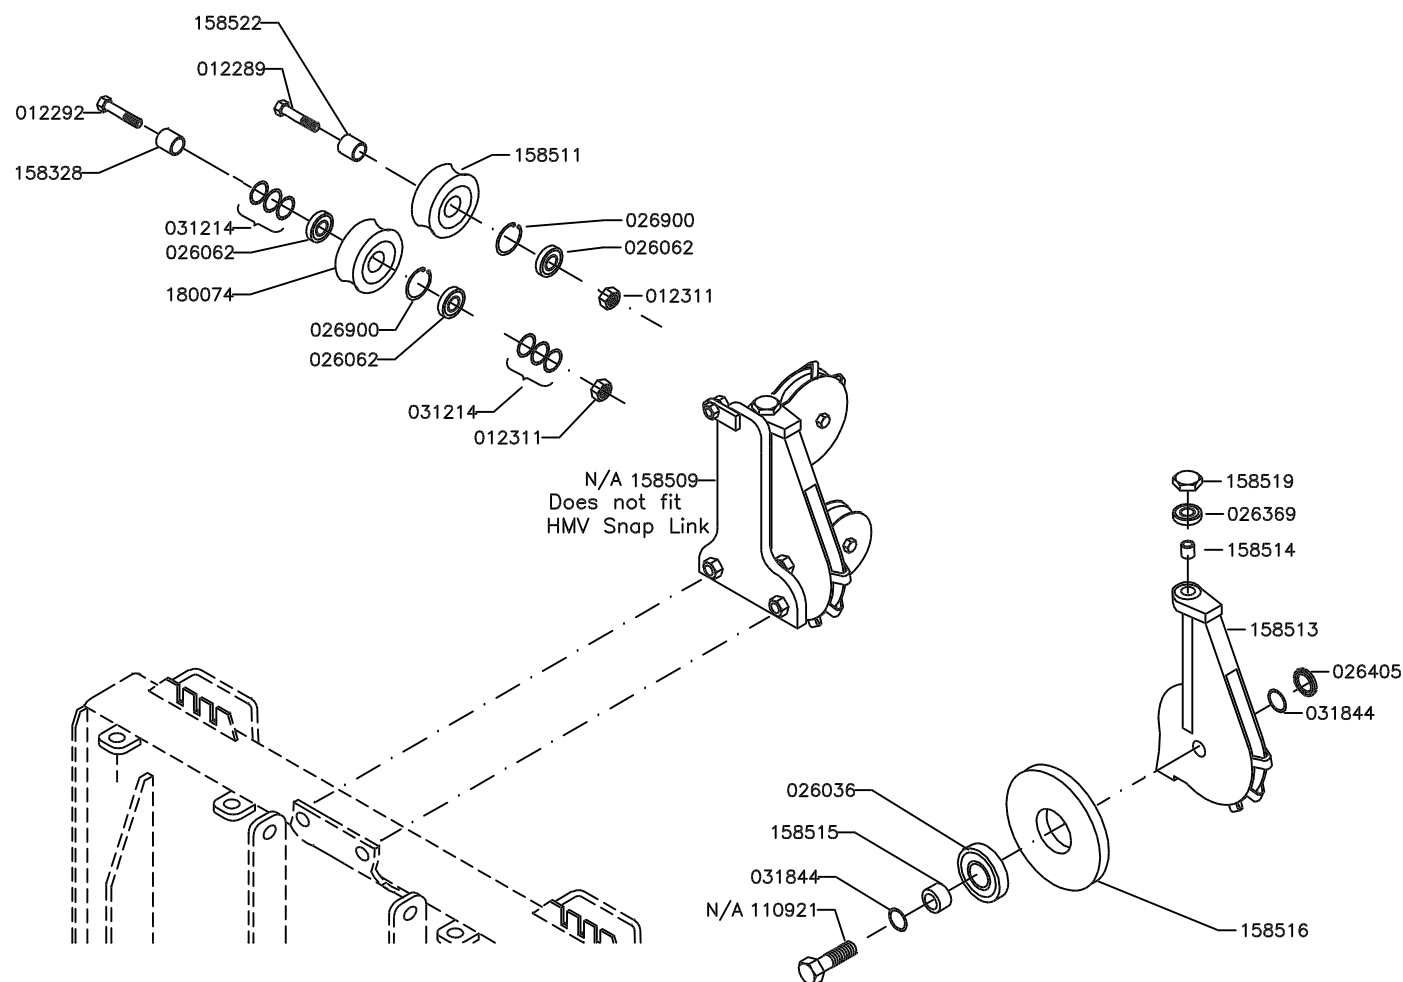


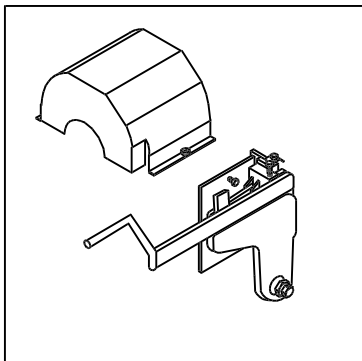

IGLAND 5601



BRAKE AND
TOP COVER: 158340

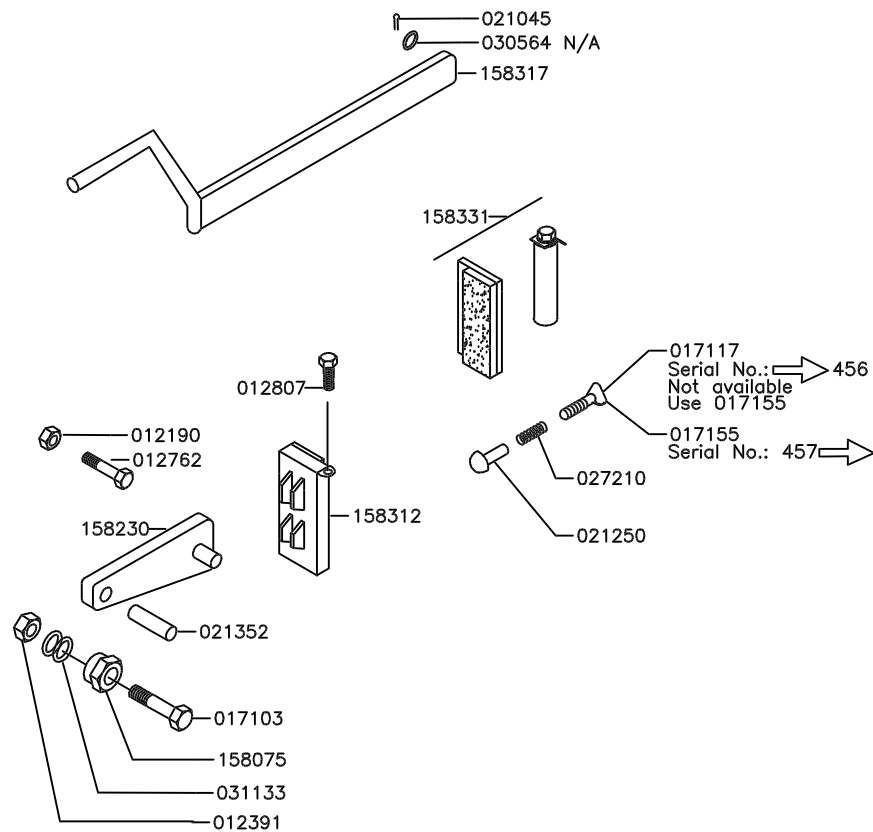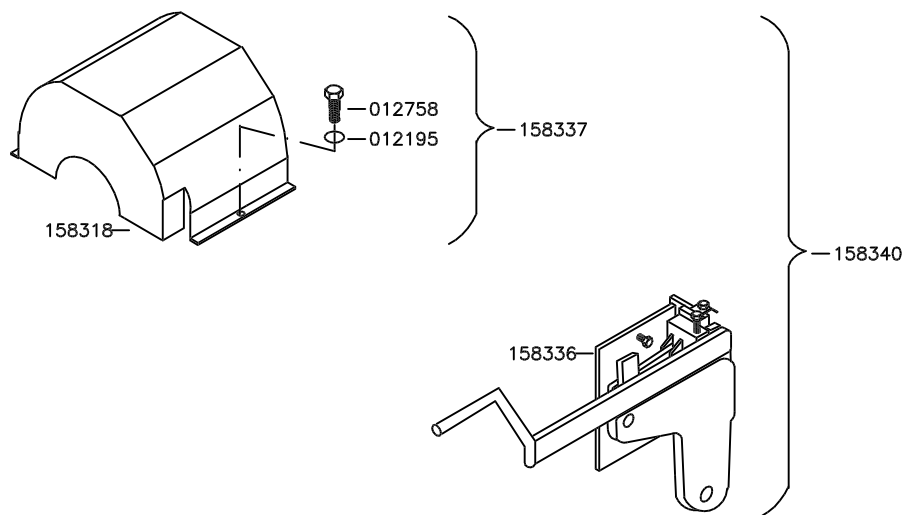

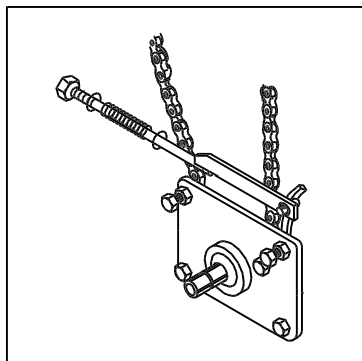

IGLAND 5601


Chain and Sprockets

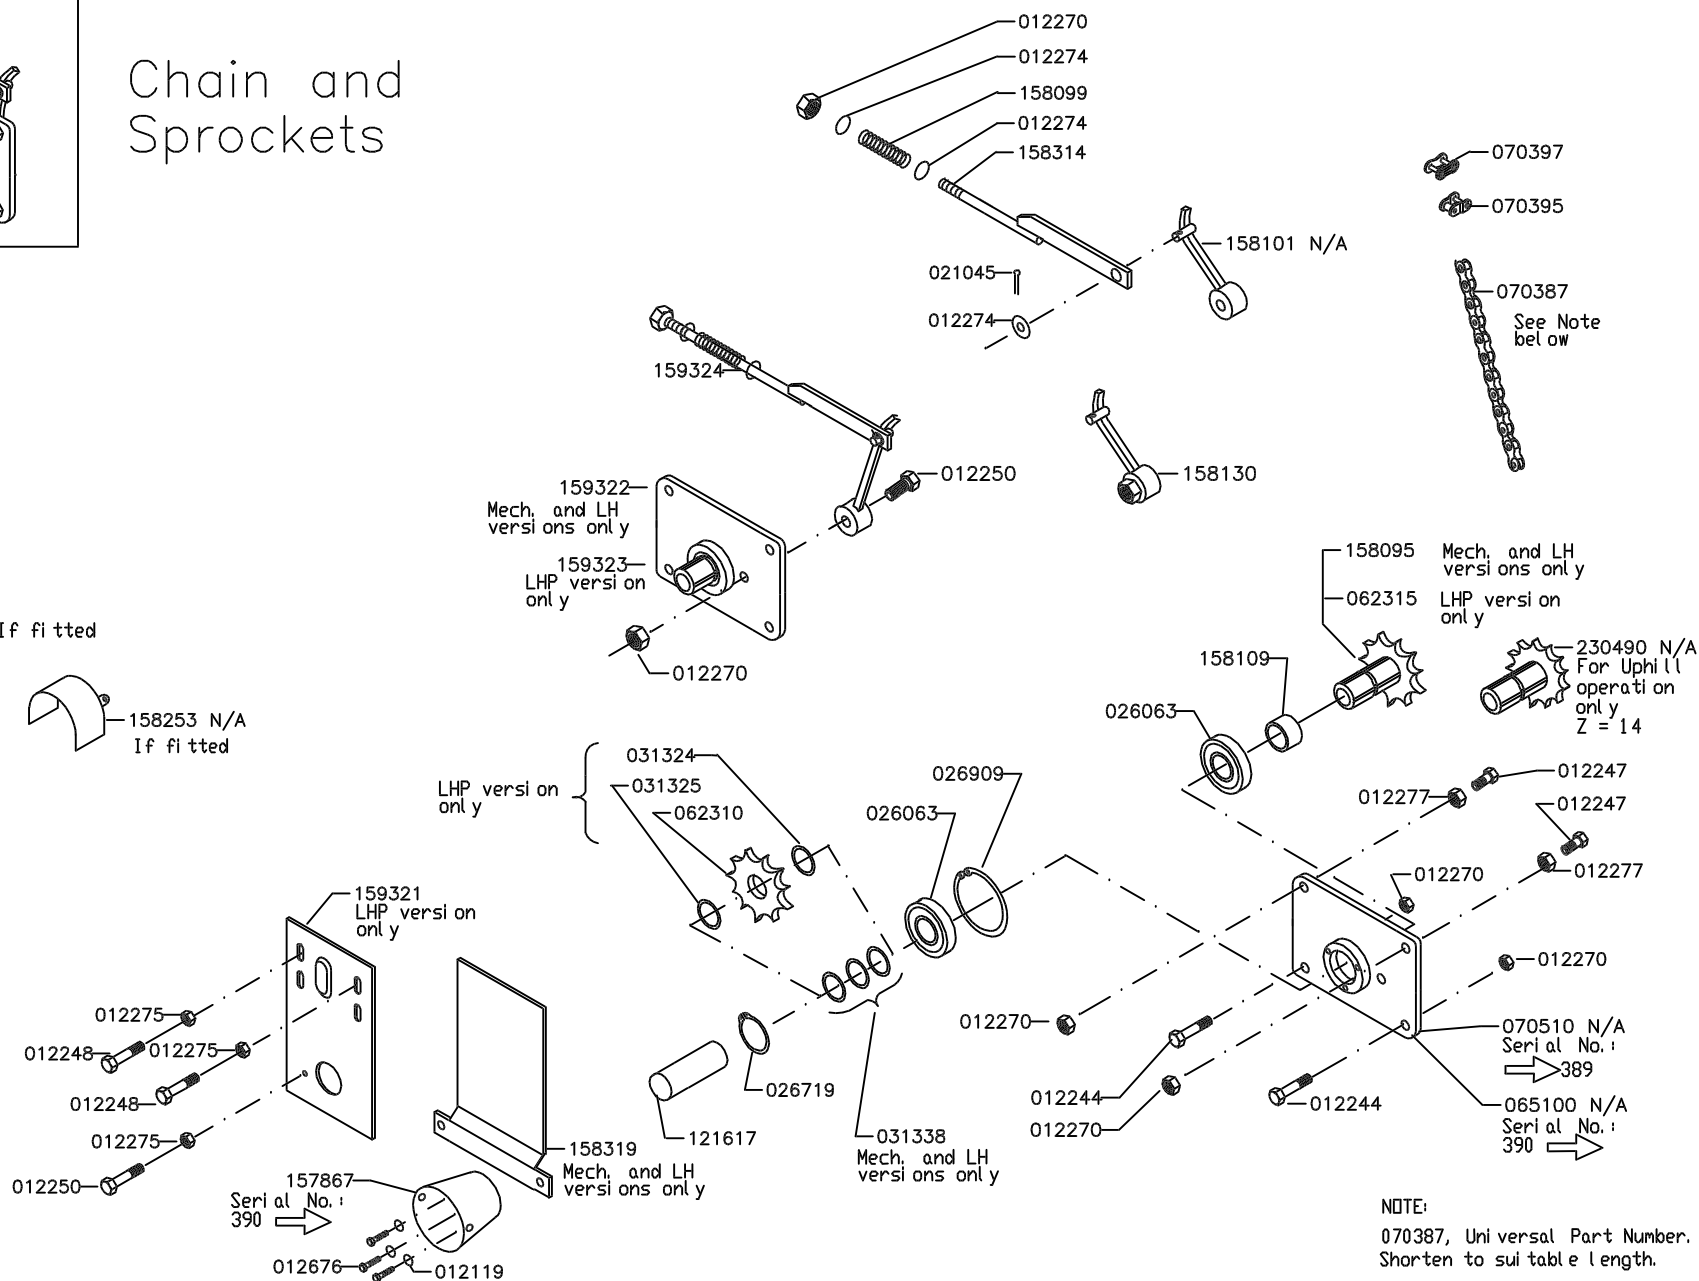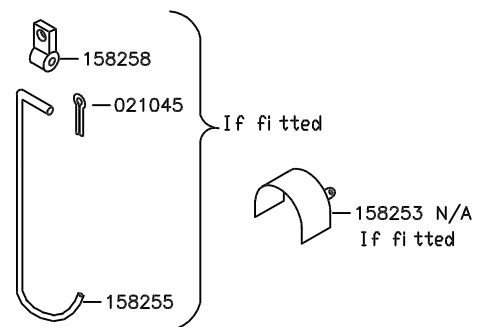

NOTE:
070387, Universal Part Number.
Shorten to suitable length.


IGLAND 5601

CONTROL

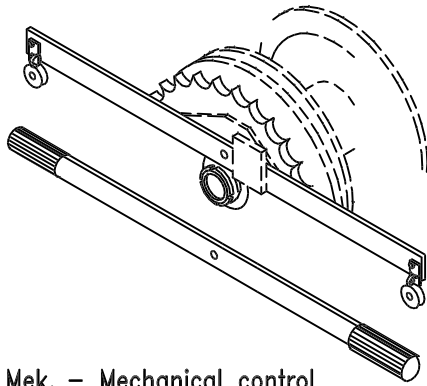


Mek. – Mechanical control

See page 9

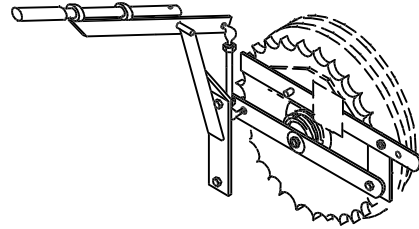


Cabin lever control

See page 9

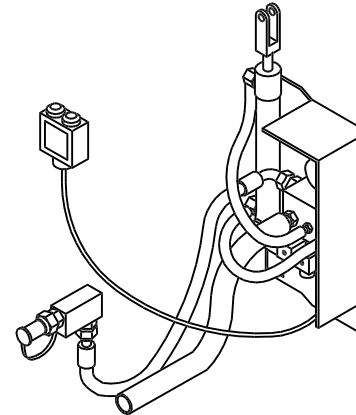

LH – Electrohydraulic low pressure control


See page 10

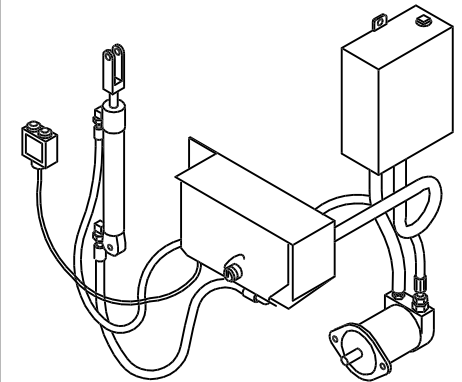

LHP – Electrohydraulic low pressure control with separate oil supply.


See page 13

Gasmagnet.
If fitted

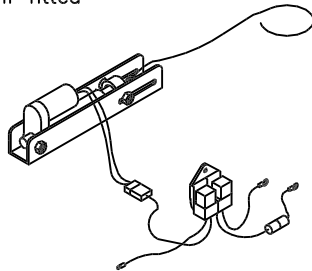


See page 19

Infrared remote control

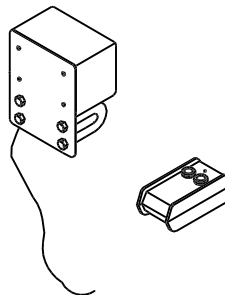


See page 16

Radio remote control

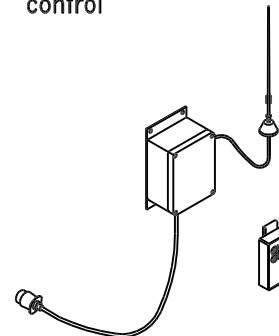

See page 17/18

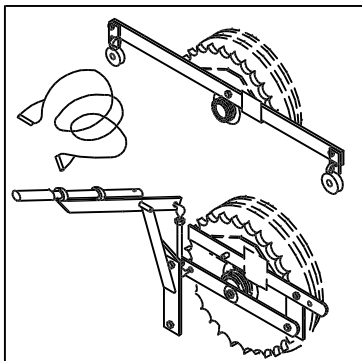


IGLAND 5601


MANUAL CONTROL:

Standard Lever Control
Cabin Lever Control

Standard Lever Control

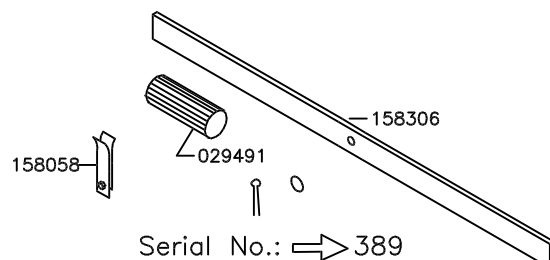


Serial No.: 390 →

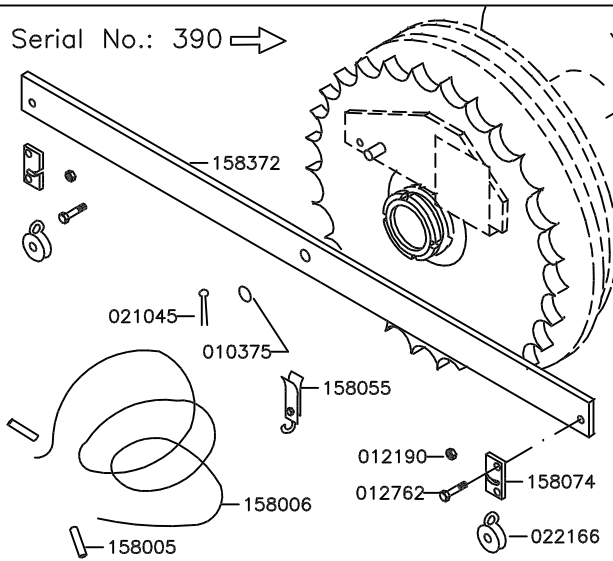



Cabin Lever Control

If fitted
(See Service Manual for Fitting Procedure)

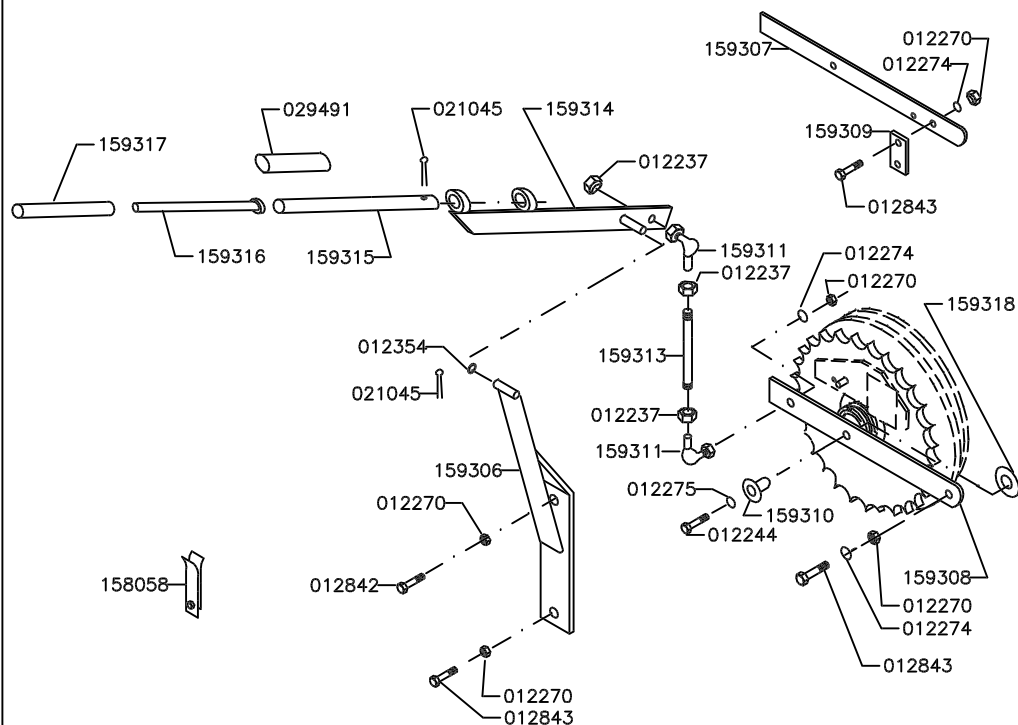


IGLAND 5601


ELECTROHYDRAULIC LOW PRESSURE CONTROL "LH"

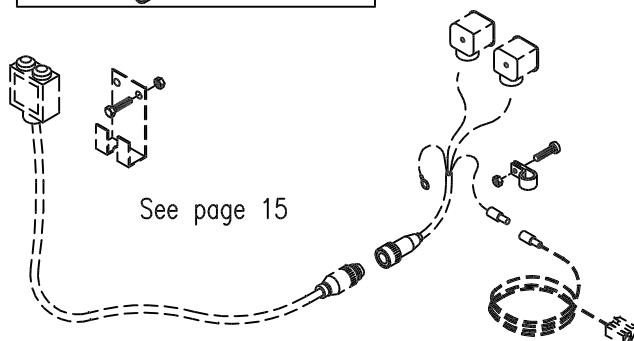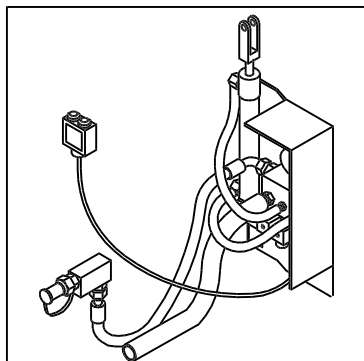

See page 15

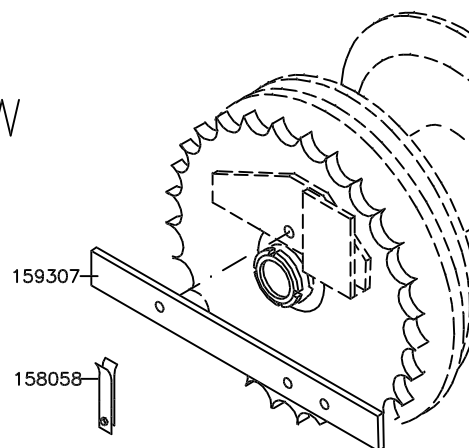

See page 12



158745
⇒ S/N 499
Not available,
use P/N 158747


158747
S/N 500 ⇒

Repair
kit.
— 025013
S/N 500 ⇒
For cyl. 158747



Repair
kit.
— 025004
⇒ S/N 499
For cyl. 158745

Fits both
O-ring and oil
seal versions.
Does not fit
aluminum
barrel type
cylinder.


See page 12

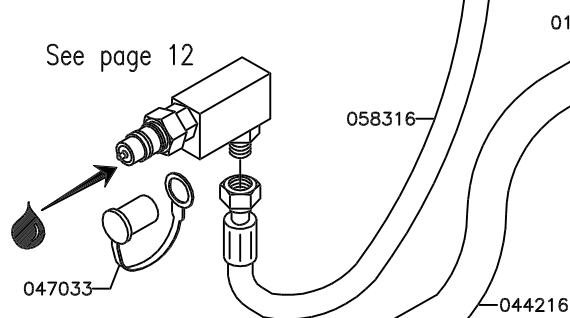

If fitted.
See page 11

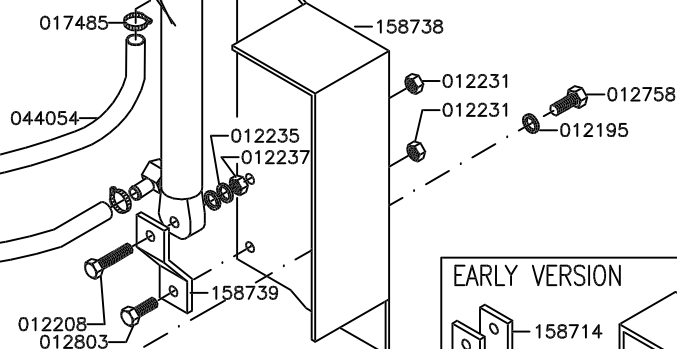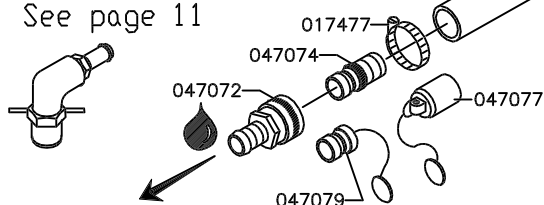


EARLY VERSION

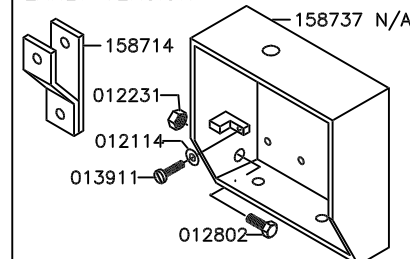

Should be used by LH winches.

TRACTOR TYPE	P/N:	DIMENSION:
BELARUS	049421	1 1/4" R
CASE 585-885 XL, 495-995 XLT, 3200, 4200	049445	1 1/4" BSP
DEUTZ	049423	M26 x 1,5
FENDT 308	049422	M18 x 1,5
FIAT 60-94, 65-94, 72-94, 82-94, 88-94, from -94	049444	M22 x 1,5
FIAT (not 90/90 or 100/90)	049426	M22 x 1,5
FIAT 90/90 and 100/90	049425	M30 x 1,5
FORD 4130, 4630, 5030, 5640, 6640, 7740	049434	3/4" R
FORD 6410 and 6610, From A -89 mod.	049434	3/4" R
FORD -10 SERIE	049400	Eksp. 34 mm
INTERNATIONAL TYPE 1	049428	1 5/16" UNF
INTERNATIONAL TYPE 2	049429	1" UNF
INTERNATIONAL TYPE 3	049430	3/4" UNF
JOHN DEERE -40 serie	049438	1" - 11,5 NPT
JOHN DEERE -50 serie	049439	3/4" - 14 NPT
JOHN DEERE -3000 serie	049446	M24 x 1,5
JOHN DEERE -6000 serie	049440	M22 x 1,5
KUBOTA 345 L	049411	3/8" R
KOBOTA M7950 DT	049415	1" R
MB TRAC	049419	M30 x 1,5
MASSEY FERGUSON 250-265	049441	1 1/16" JIC
MASSEY FERGUSON 600 series, from -84	049441	1 1/16" JIC
MASSEY FERGUSON 300 series, from -87	049442	7/8" JIC
MASSEY FERGUSON 3000 series, from -87	049443	1 1/16" JIC
VALMET 6100, 6300, 6400, 6600 MEZZO	049435	M30 x 2
VALMET 355, 455, 555, 465, 565, 665	049427	7/8" JIC
VALMET 305 - 405	049420	M30 x 2
VALMET 505 - 805	049412	
VALMET, Early model	049404	29 - 31 mm
ZETOR CRYSTAL 8145 - 4145	049433	M30 x 1,5
ZETOR 6520/40, 7520/40, 8520/40, 9520/40	049437	M48 x 1,5
ZETOR (all other models)	049414	
Universal type for oil supply	049404	29 - 31 mm
Universal type for oil supply	049400	34 - 36 mm
Universal type for oil supply	049405	37 - 39 mm
Universal type for oil supply	049402	49 - 51 mm



ELECTROHYDRAULIC
LOW PRESSURE CONTROL ("LH")
(Hydraulic components)

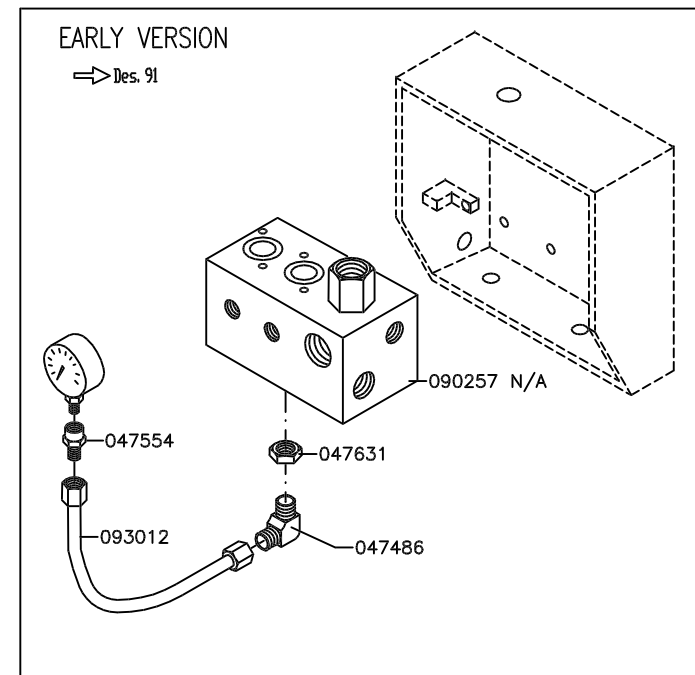


NOTE: Requires special skill on re-installation. If available, see Service Manual.

ELECTROHYDRAULIC
LOW PRESSURE
CONTROL "LHP". With separate oil supply.


See page 14

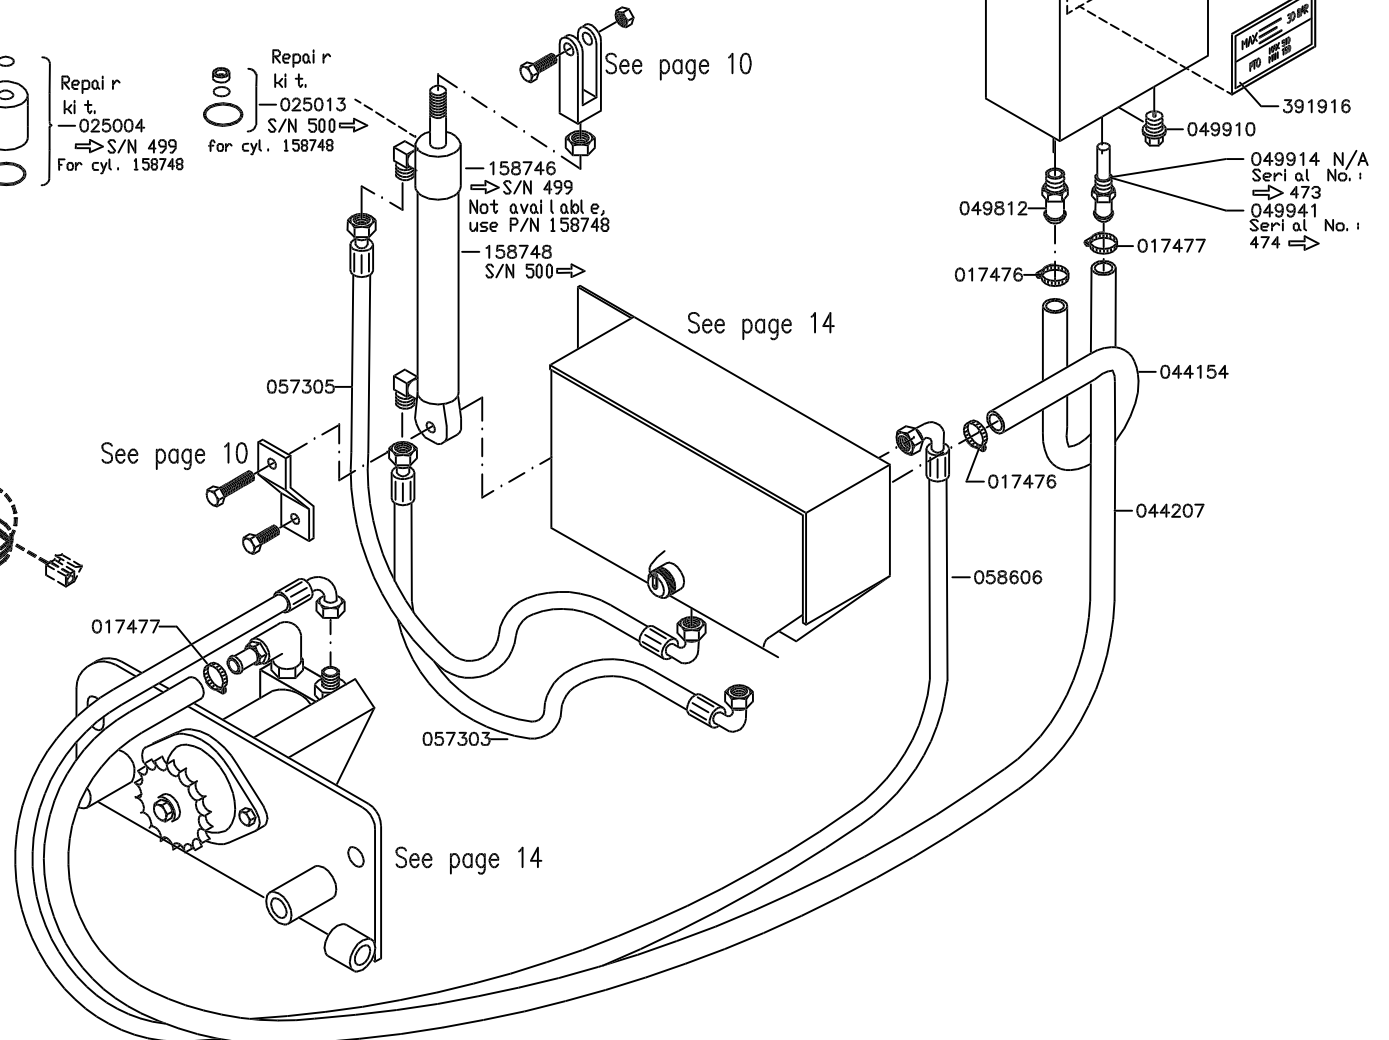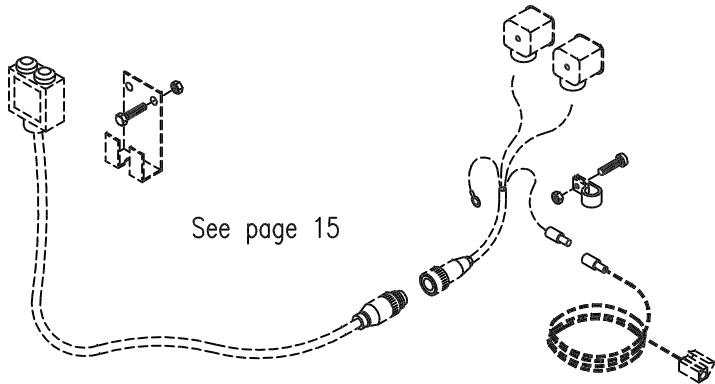


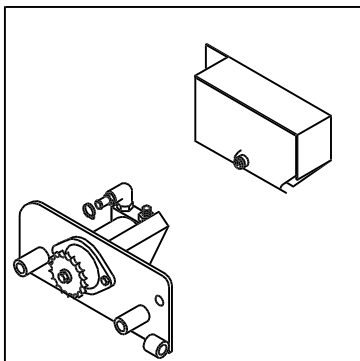

IGLAND 5601

ELECTROHYDRAULIC
LOW PRESSURE
CONTROL "LHP". With separate oil supply.

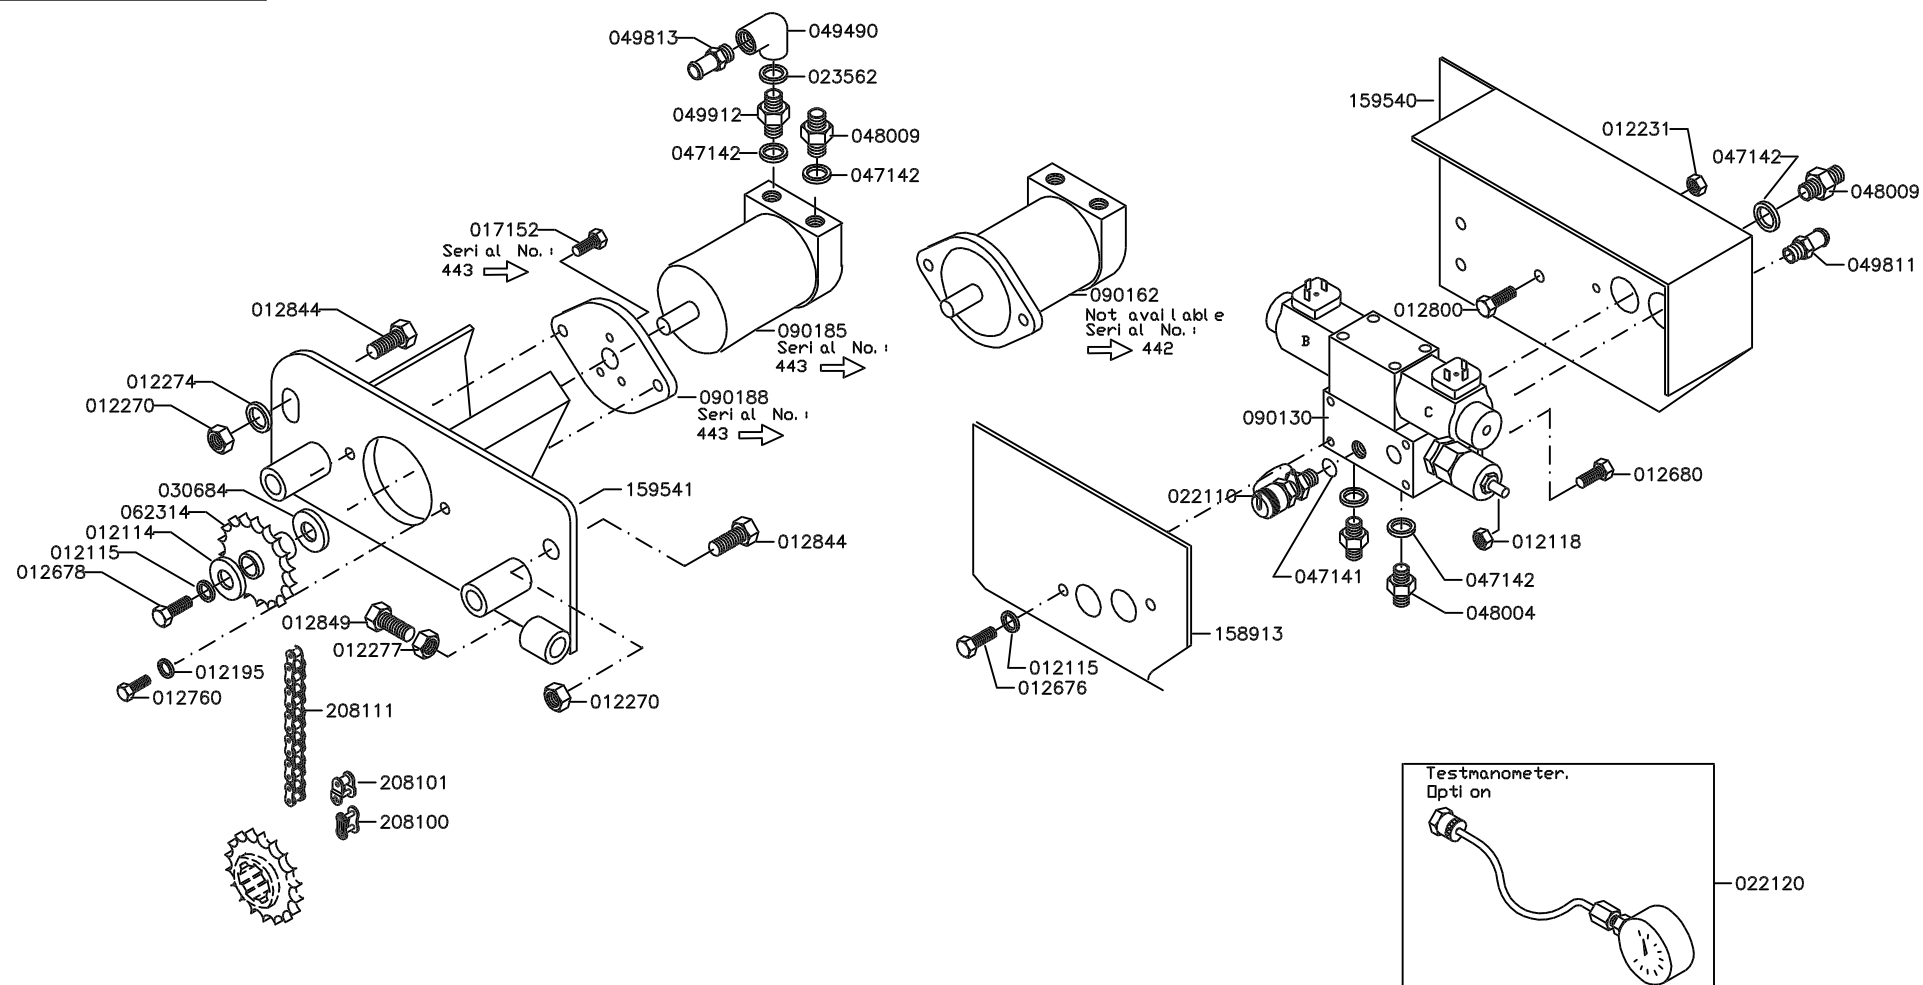

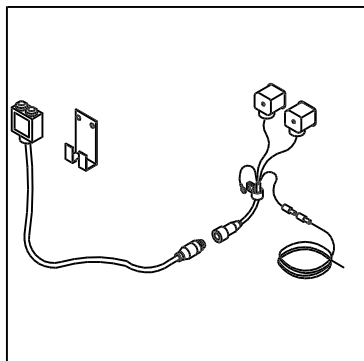


IGLAND 5601

ELECTROHYDRAULIC CONTROL

Electrical components


Current version

Serial No. : 390 ⇒

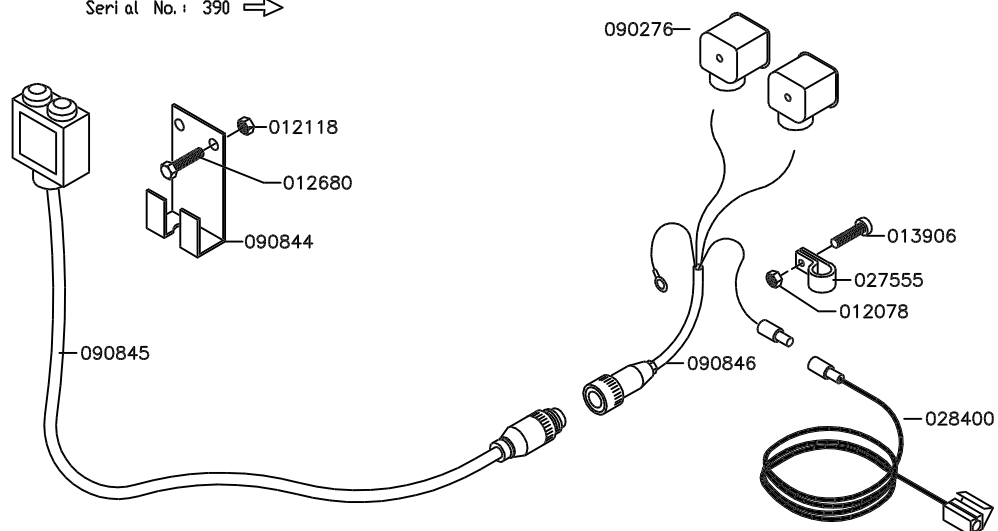


Early version

When exhausted, use
part no. 090843 + 090844

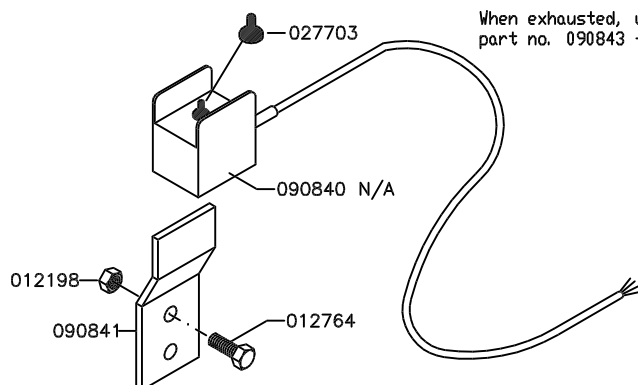

Early version

Serial No. : 389 ⇒

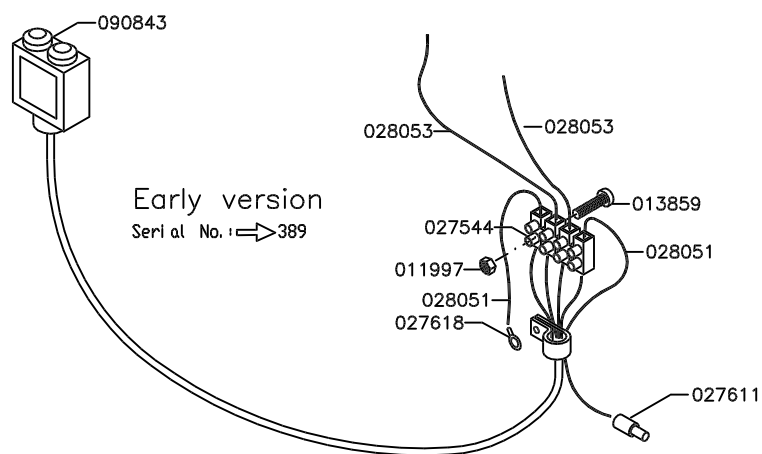

+12 V from
"ignition switch"
(Use a 8A fuse)
See service manual.







IGLAND 5601


INFRARED REMOTE CONTROL KIT: 091240

(Transmitter, Receiver and
Charger Unit)

If fitted.

Early version

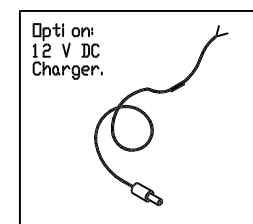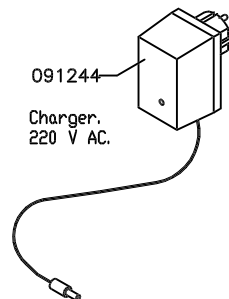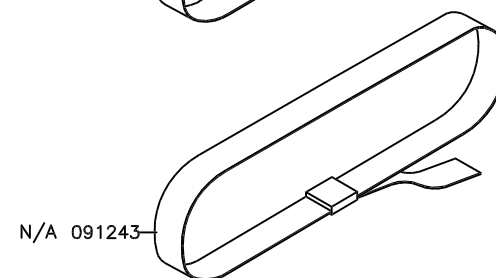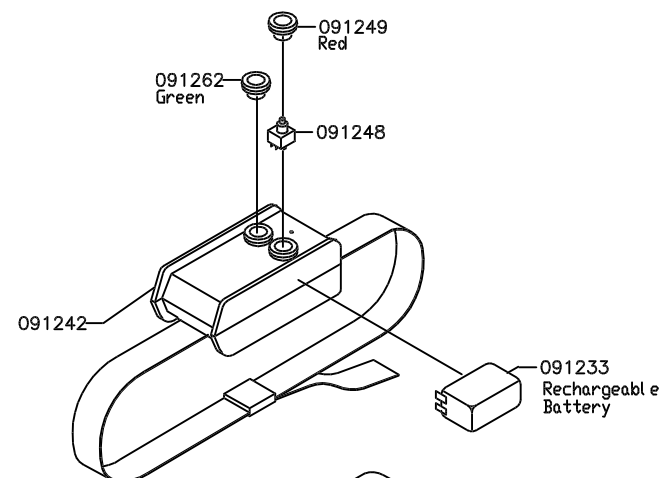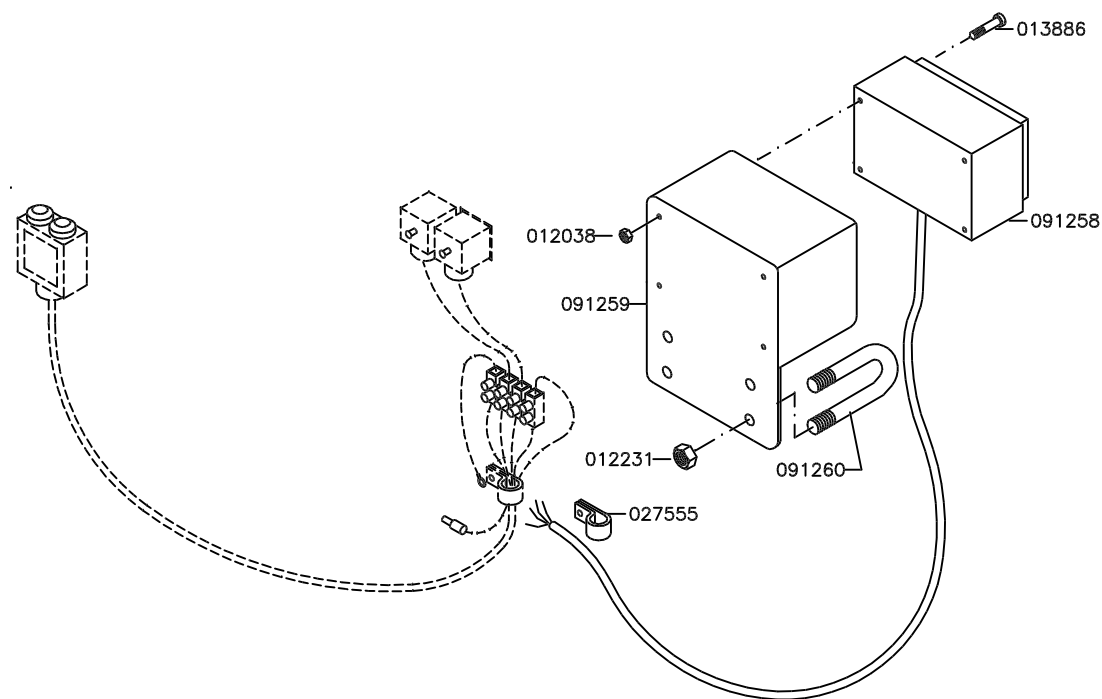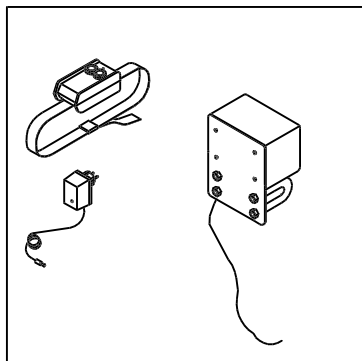

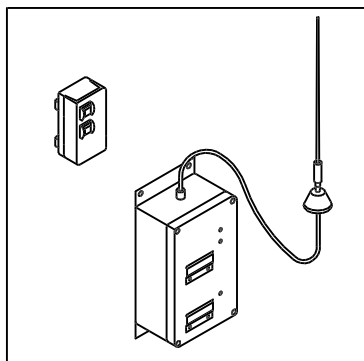


IGLAND 5601

RADIO REMOTE CONTROL KIT: 091140 N/A Early version

(Transmitter and Receiver)


Frequency: 40.685 MHz.


If fitted.

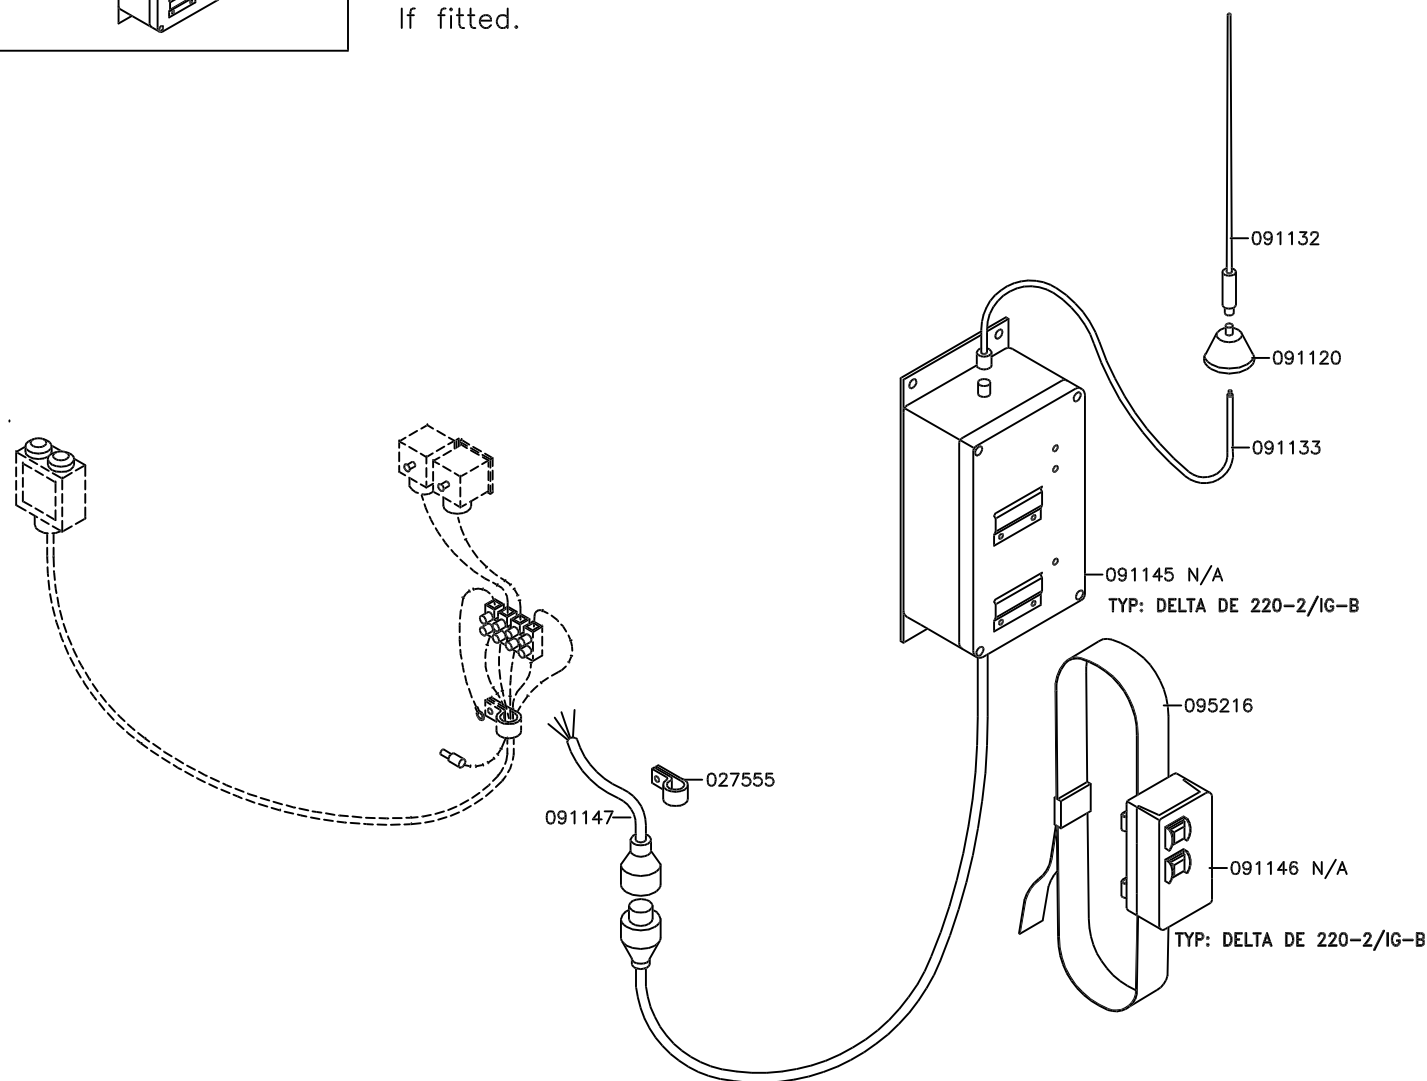

EARLY VERSION

TYP: DELTA DE 200-2

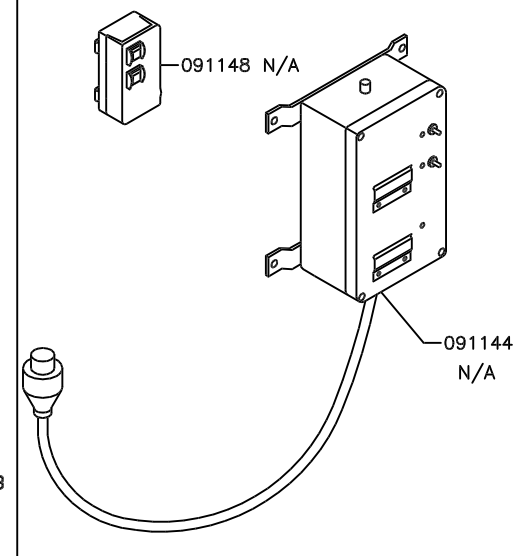

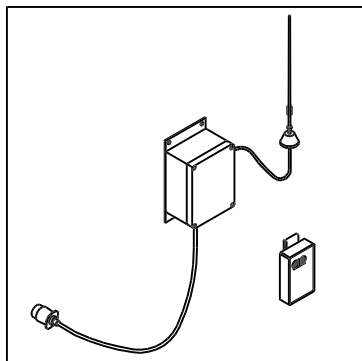

IG LAND 5601

RADIO REMOTE CONTROL KIT: 091170

(Transmitter and Receiver)
If fitted.

Add. price for extra 4 ch. transmitter/receiver

Add. price for frequency for Germany, Austria, Switzerland


Add. price for frequency for Great Britain

— 091171

— 091162 N/A

— 091163

See page 19

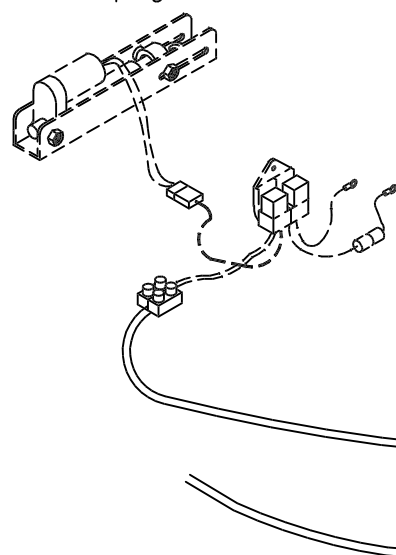

See page 15

Option:

4 ch. receiver

- 095259 (Std.)
- 095260 N/A (See note 1)
- 095261 (See note 2)

2 ch. receiver

- 095256 (Std.)
- 095257 N/A (See note 1)
- 095258 (See note 2)

095291

095290

095292

Option:

Add. transmitter for
4 ch. receiver

- 095253 (Std.)
- 095254 N/A (See note 1)
- 095255 (See note 2)

095250

(Std.)


095251 N/A (See note 1)

095252 (See note 2)

095293

091214

Note 1: Frequency for Germany, Austria, Switzerland
Note 2: Frequency for Great Britain

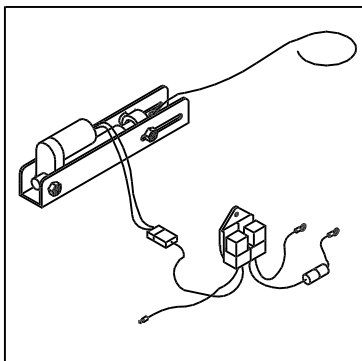

IGLAND 5601

RPM ACTUATOR, compl.: 091440


On/off function

RPM ACTUATOR, compl.: 091441


Stepless function.


If fitted.

Early version

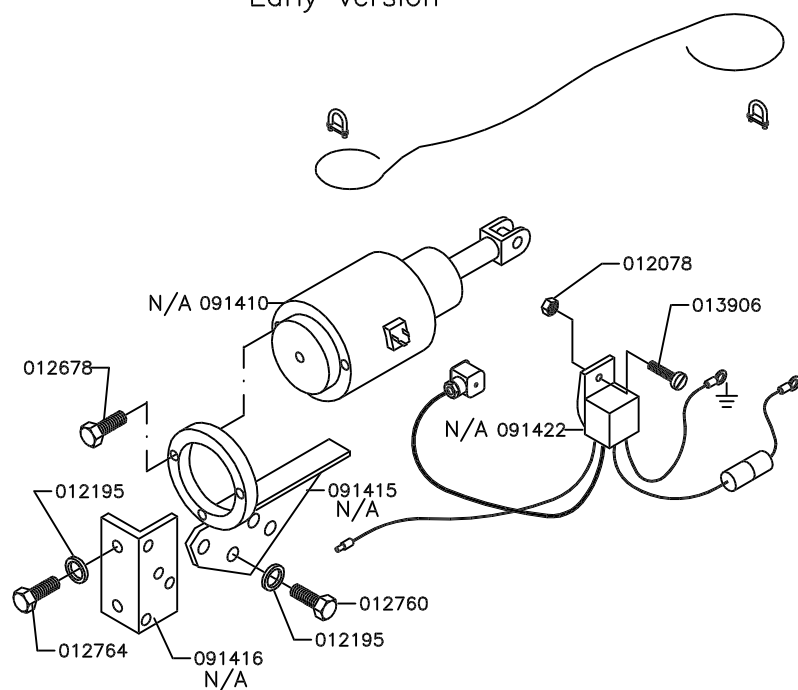


Current version

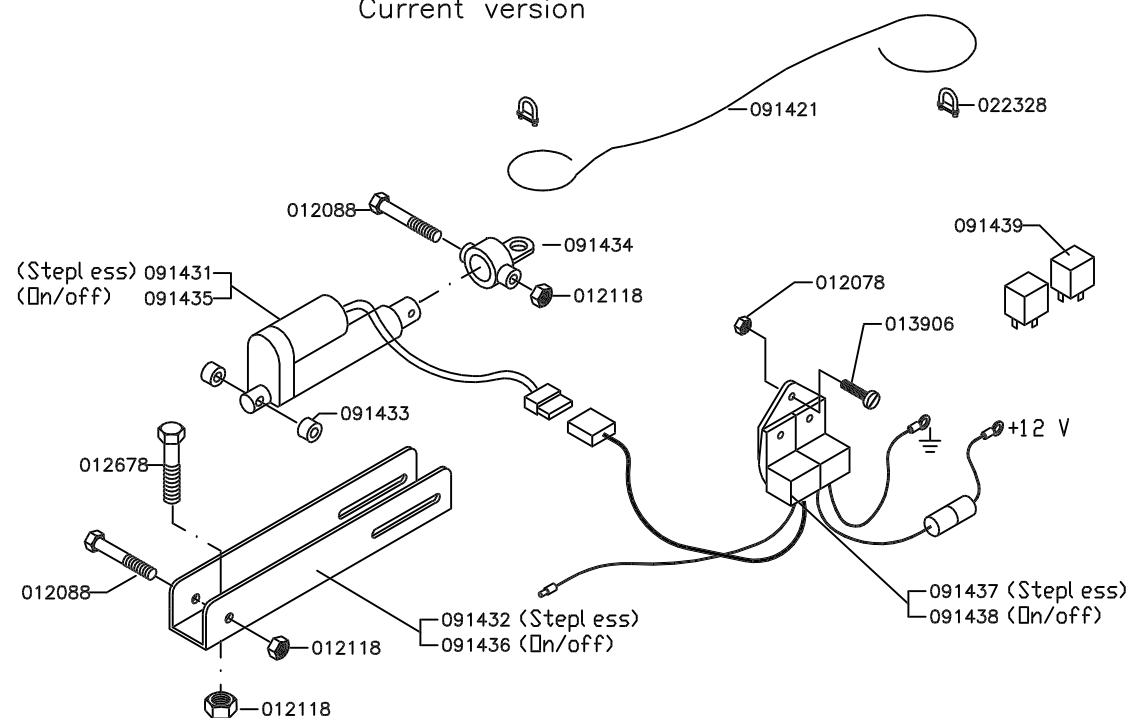


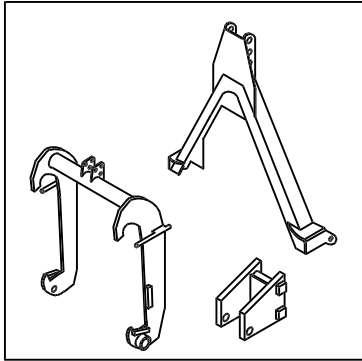

IGLAND 5601

TRIANGEL SNAP LINK: 158500 If fitted
 "HNV" SNAP LINK: 158507 N/A If fitted
 DRAW BAR EXTENSIONS: 122088 N/A If fitted

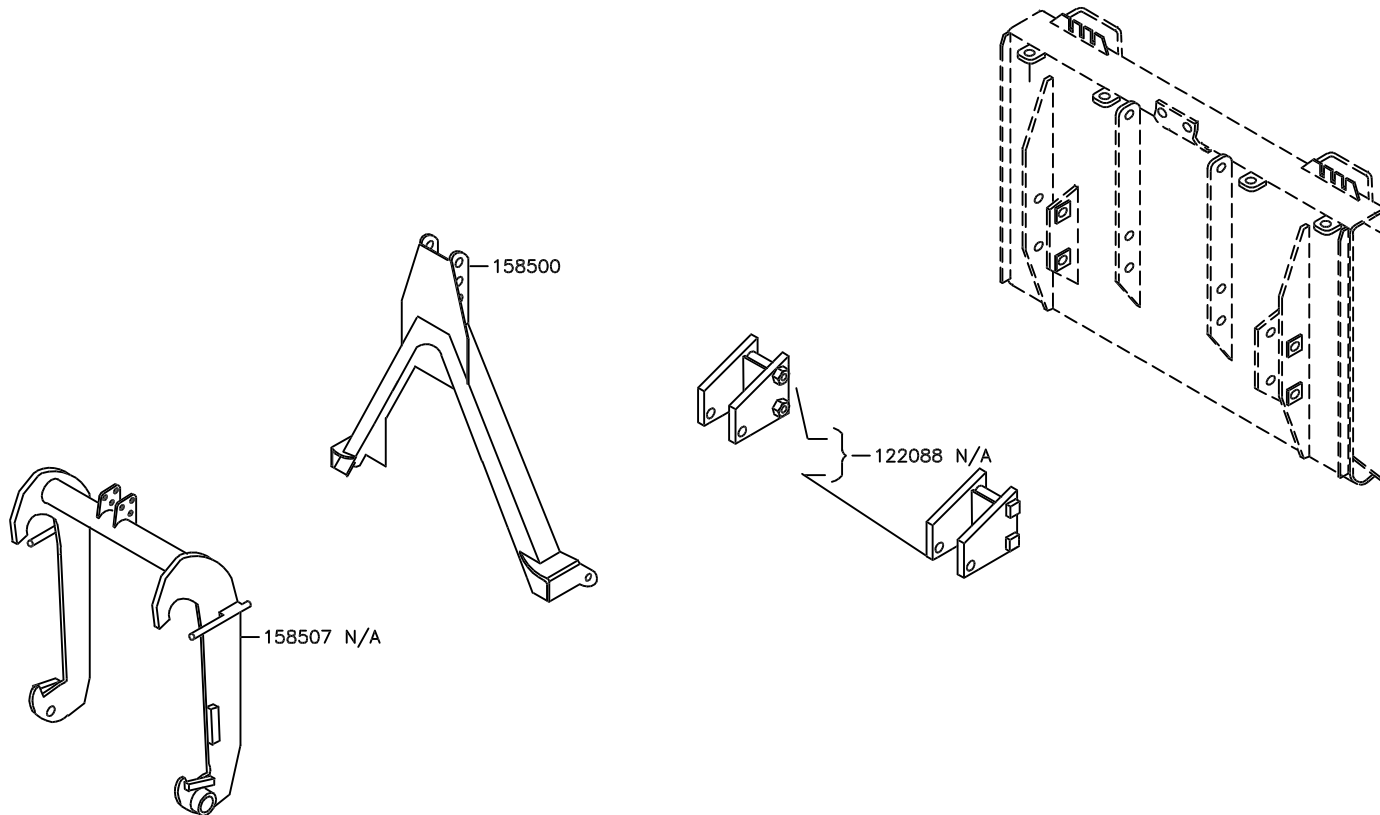


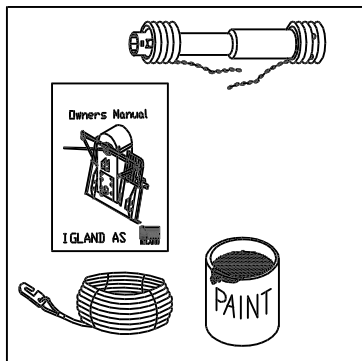

IGLAND 5601


Miscellaneous

WIRE ROPE, 6x26WS+IWRC 180 kp, 12 mm

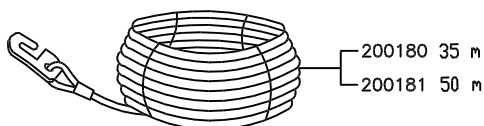

200180 35 m
200181 50 m


WIRE ROPE, according to ISO 4254-4

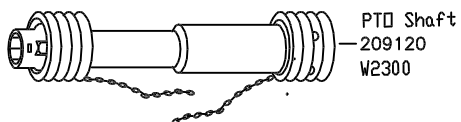


PTO Shaft
209120
W2300




023001 Red 1 l
023011 Black 1 l

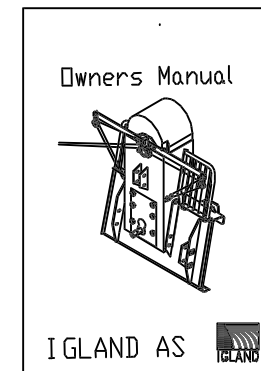

Owners Manual
390001

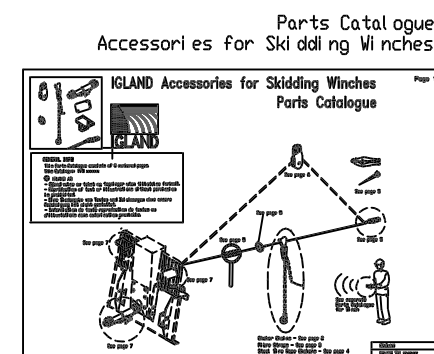

390601

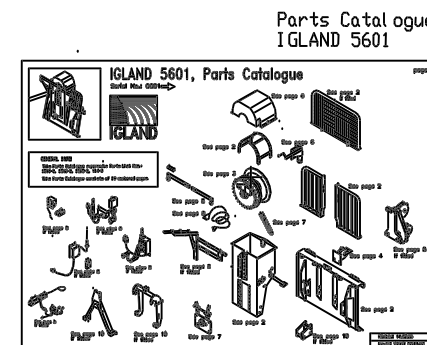

390092

Intentionally blank